



# Sony Cyber-Shot DSC-H200 Battery Replacement

The Sony Cyber-shot DSC-H200 comes with...

Written By: Kolod Aljohani



# INTRODUCTION

The Sony Cyber-shot DSC-H200 comes with removable AA batteries that will need to be replaced periodically. This guide will help you learn how to replace the batteries, by first opening the SD door.

---

## ⚙️ PARTS:

Four AA batteries (1)

---

### Step 1 — Battery



- Push the SD Door switch toward OPEN with right thumb.
- While you do this simultaneously press the SD Door switch away from the center of the camera with your left thumb (the SD door will open).

## Step 2



- Take the four AA batteries out of the battery compartment.

---

To reassemble your device, follow these instructions in reverse order.