




HP Envy 17-3070NR Optical Drive Replacement

In this guide, we will show you how to replace the optical drive of your HP Envy 17-3070NR.

Written By: Jon Fuson

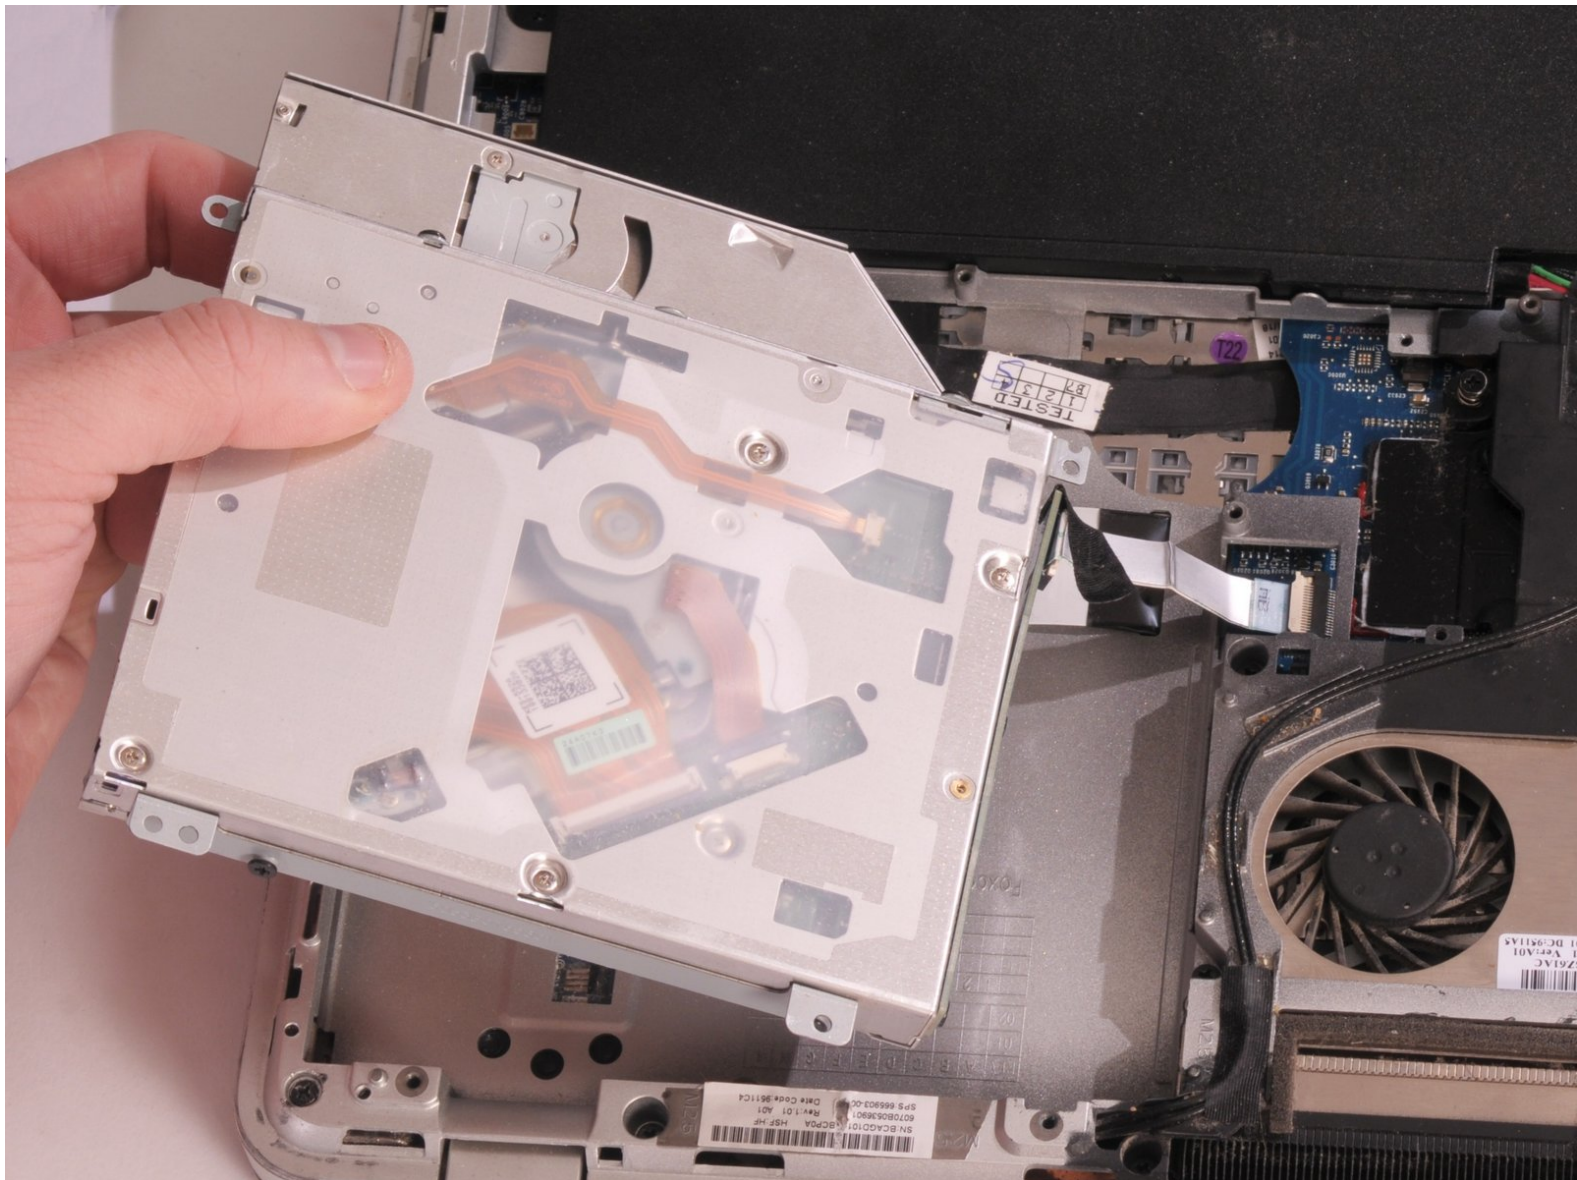

INTRODUCTION


Whether you want to replace your faulty DVD drive or upgrade to a Blue-Ray one, this guide is for you.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Spudger](#) (1)
-




Step 1 — Back Cover

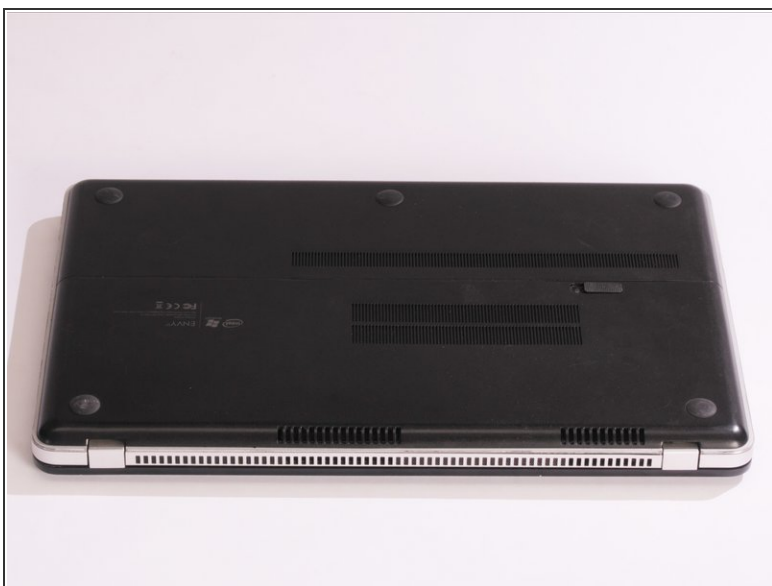

 Before you begin taking apart the computer, make sure that it is completely powered off.


- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

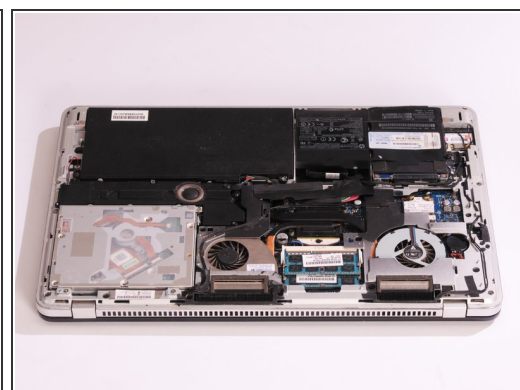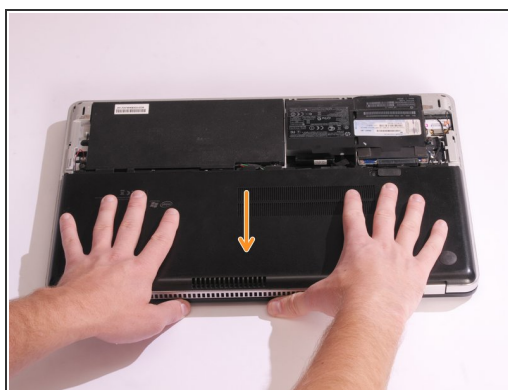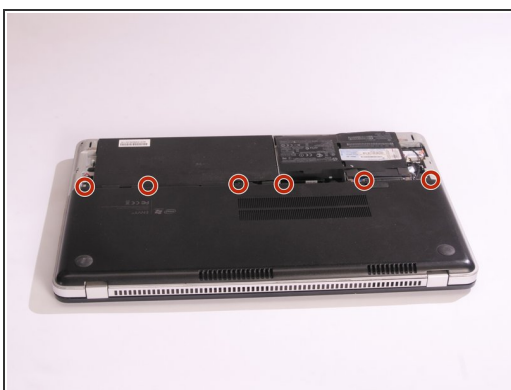

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

Step 3 — Optical Drive

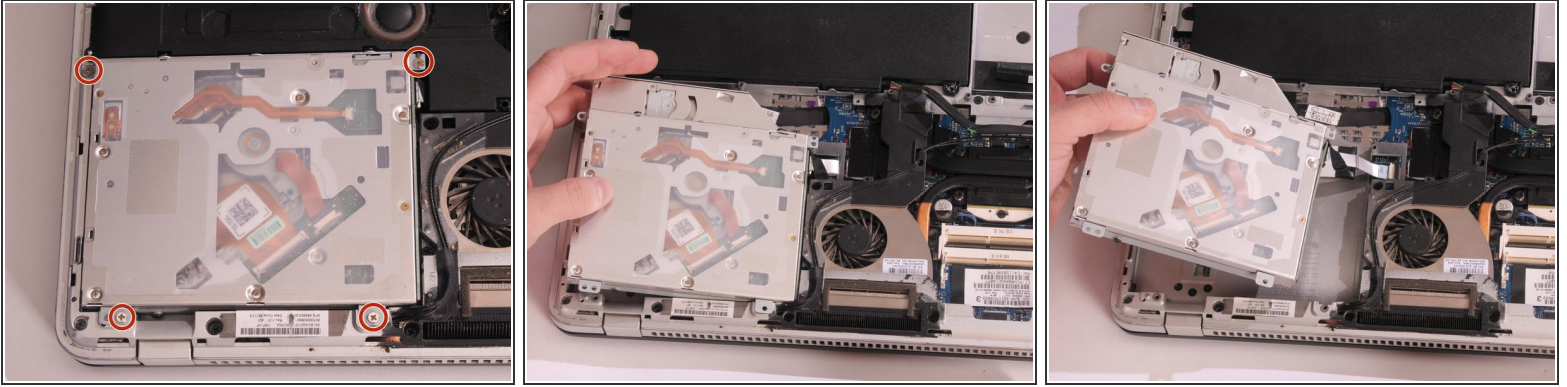


- Remove the four 3.7mm Phillips screws that secure the optical drive to the computer.
 - Slowly lift the optical drive away from the computer ensuring that you don't put stress on the connecting cable.
- ⚠ Do not fully lift off the optical drive as there is still a cable that connects it to the motherboard.

Step 4



- Remove Sub Speaker assembly first in order to remove Optical drive. Carefully disconnect speaker connector.

Step 5

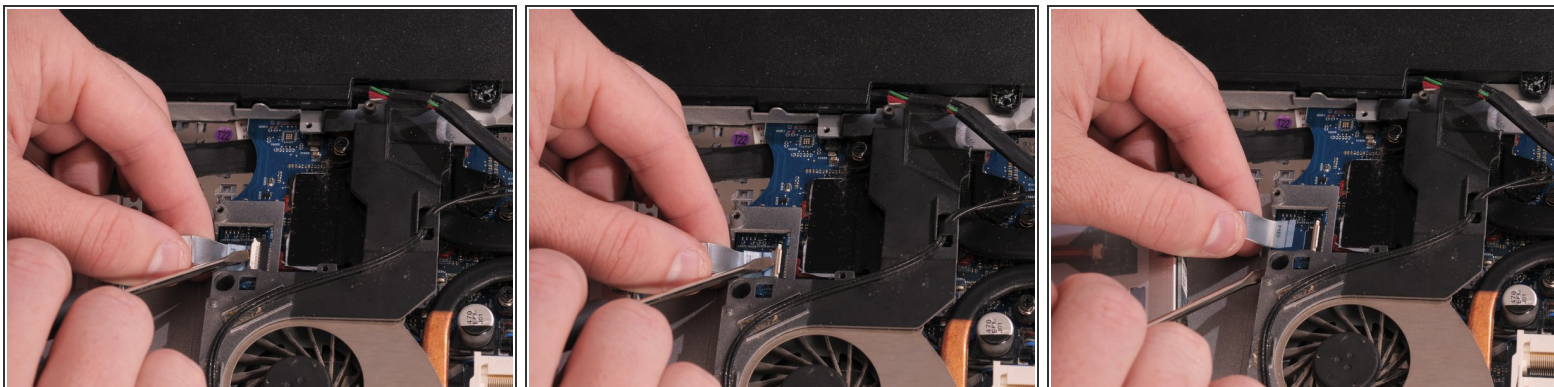

- Carefully disconnect the connecting cable by lifting the white clamp with a Flathead screwdriver and pulling on the blue tab away from connector.

To reassemble your device, follow these instructions in reverse order.