



2011-2013 Scion tC Car Battery Replacement

A replacement guide to help change the car battery of the 2011-2013 Scion tC.

Written By: Travis Michael





TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [10mm Socket](#) (1)
- [10mm Wrench](#) (1)



PARTS:


- [12V Car Battery](#) (1)

Step 1 — Car Battery



- Begin by opening the hood of the car and locating the battery on the front of the driver side in the engine compartment

Step 2

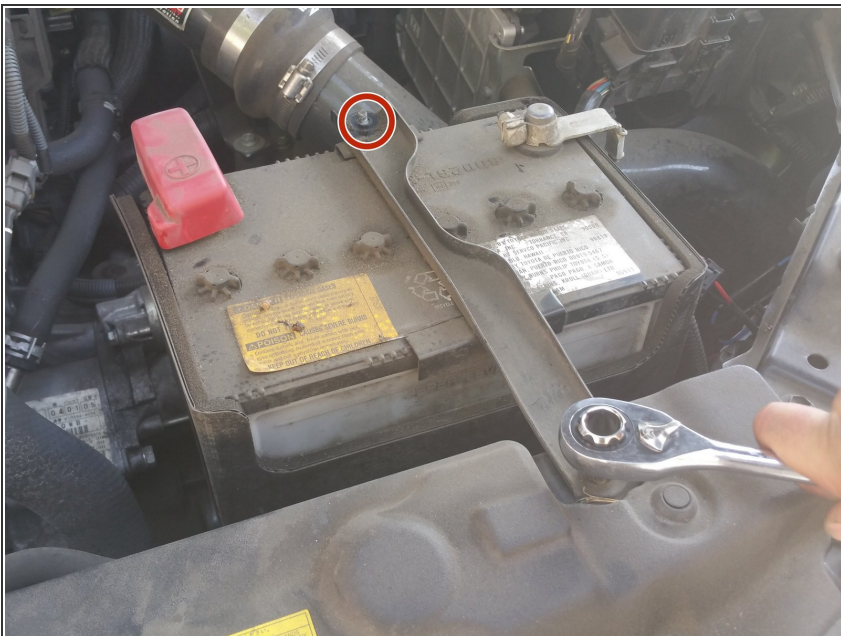

- Using a socket wrench, loosen the 2 (5/16 inch) nuts on the top of the battery support bracket
- Remove the bracket by lifting up

Step 3





- After removing the bracket, locate the supporting rod behind the battery
- The rod is hooked on a hole in the metal behind the battery. Unhook the rod and remove it

Step 4



- Start with the negative terminal of the battery
- Loosen the nut on the negative terminal with a 10mm socket wrench
- Remove the wire by slightly twisting and pulling up

Step 5

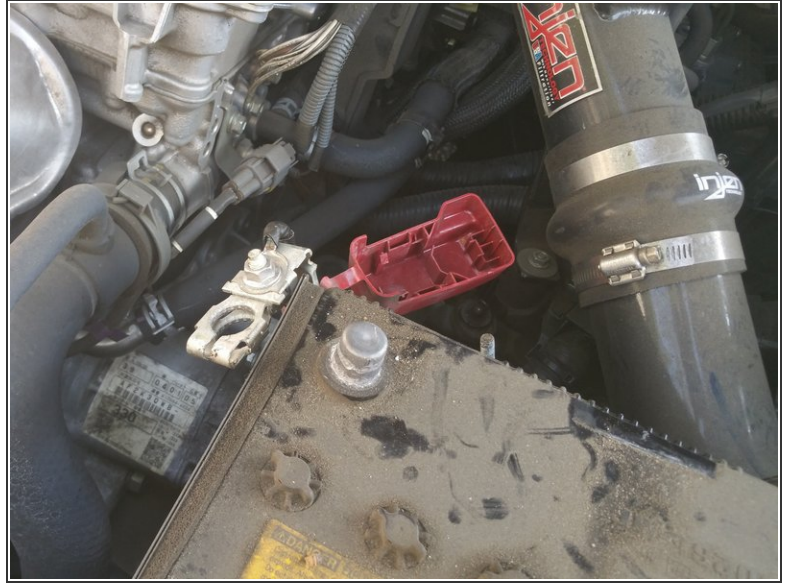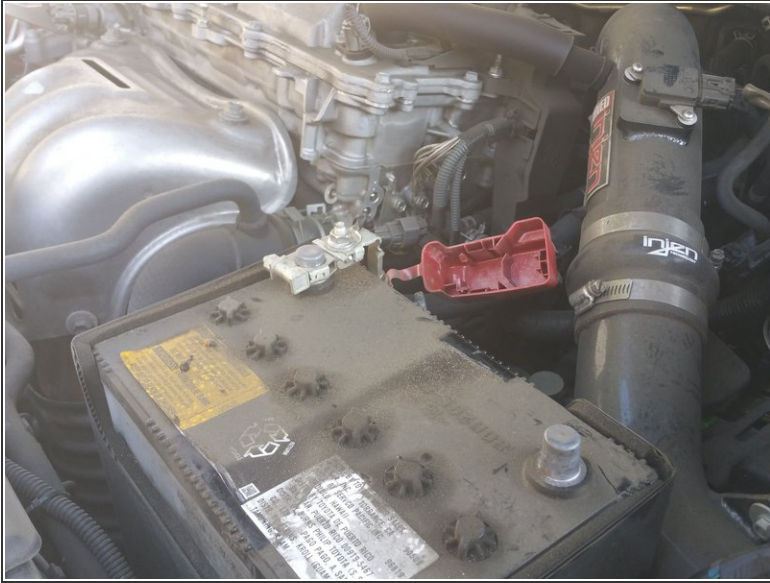

- Remove the cap from the positive terminal of the battery
- Using a 10mm socket wrench, loosen the nut on the positive terminal
- Remove the wire from the positive terminal by slightly twisting and pulling up
- Remove the battery by lifting it out of the engine compartment

To reassemble your device, follow these instructions in reverse order.