




Pentax PZ-10 Button Replacement

Button replacement may be necessary if the...

Written By: Jonathan Diaz

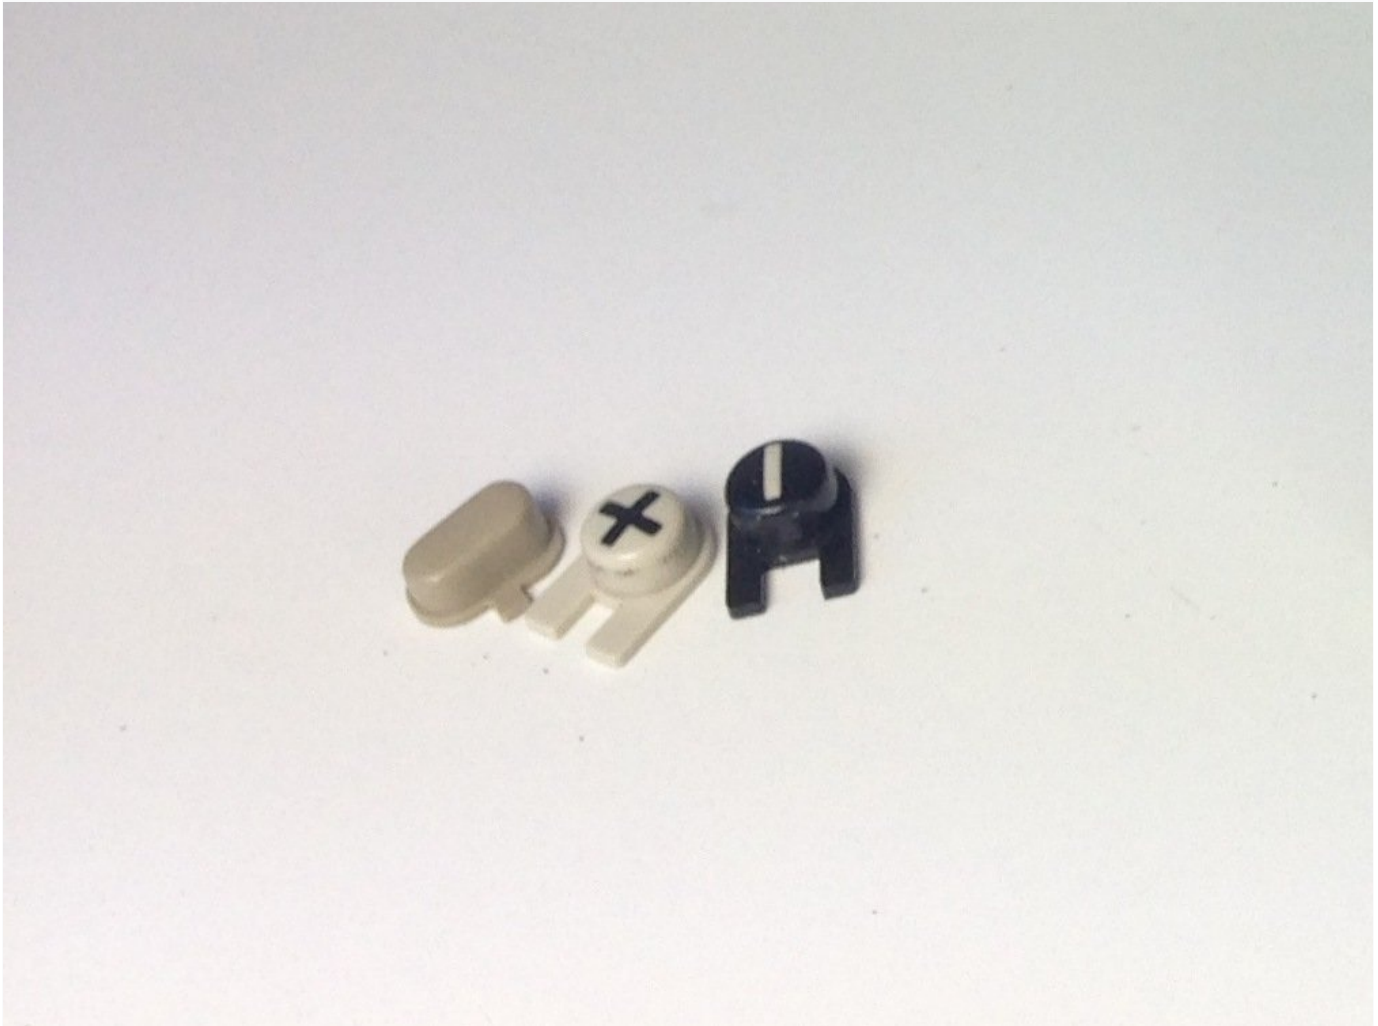

INTRODUCTION

Button replacement may be necessary if the shutter button sticks or no longer activates shutter due to wear.


TOOLS:

[Tweezers](#) (1)


[64 Bit Driver Kit](#) (1)

Step 1 — Top Cover



-  The top cover is one piece encasing the top of the device except the shutter release button and flash.

Step 2 — Removing Upper Right Housing Screw

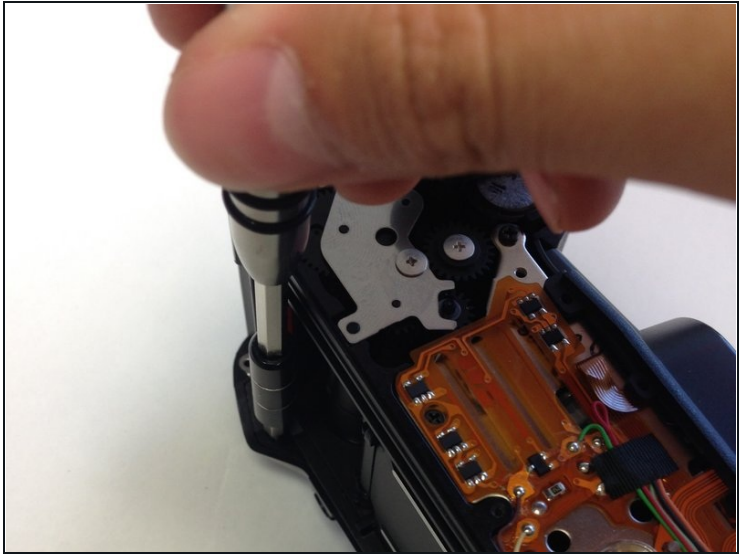

① With the camera lens face down, locate the screw under the overhanging piece of the top casing on the right side of the back panel.

- Using the J0 screwdriver, remove the 6.3 mm screw.

Step 3 — Removing Screw in Battery Compartment



① Locate the next screw by holding the camera upside down with the battery compartment empty and face up.

- Remove the 6.3 mm screw using a J0 screwdriver.

Step 4 — Removing Screw Under Flash Bulb



① The next screw is found in the overhanging piece just above the lens.



- With the top of the camera facing down, remove the 3.4 mm screw with a J0 screwdriver.

Step 5 — Pulling Off the Top Cover



- Gently pull off the top cover with your hands by pulling on the tab on the left of the camera.

Step 6 — Locate Rubber Tabs

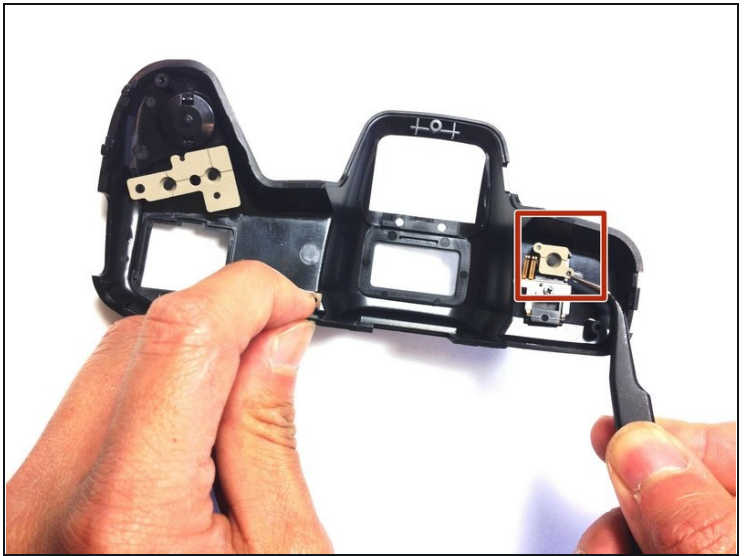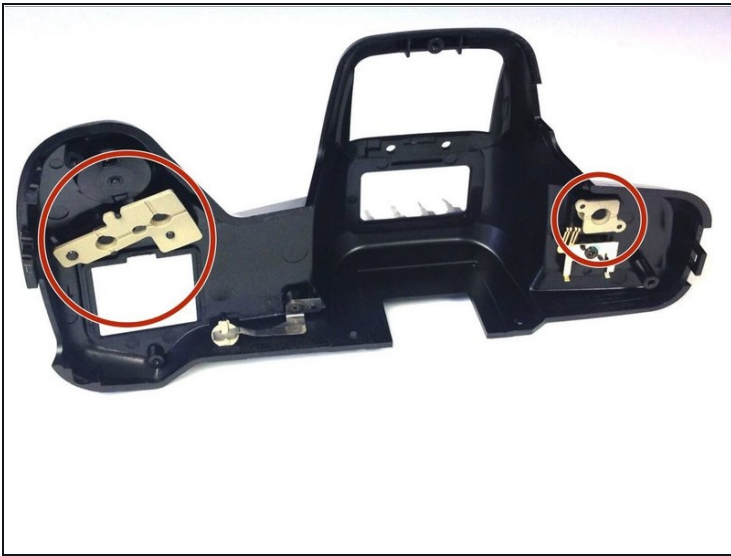

- Gently remove the beige rubber tabs from under the casing by pulling each down using [tweezers](#).

Step 7



- Remove the 3 buttons by pushing them from under the casing out through the top.
- ☑ Each button is slotted differently, so pay attention to the orientation of each piece.

Step 8 — Buttons



- The buttons are now free to be replaced or cleaned.

To reassemble your device, follow these instructions in reverse order.