




# Garmin StreetPilot c330 Screen Replacement

This guide will show the user how to remove and replace the screen for the Garmin StreetPilot c330.

Written By: Adrian Leon

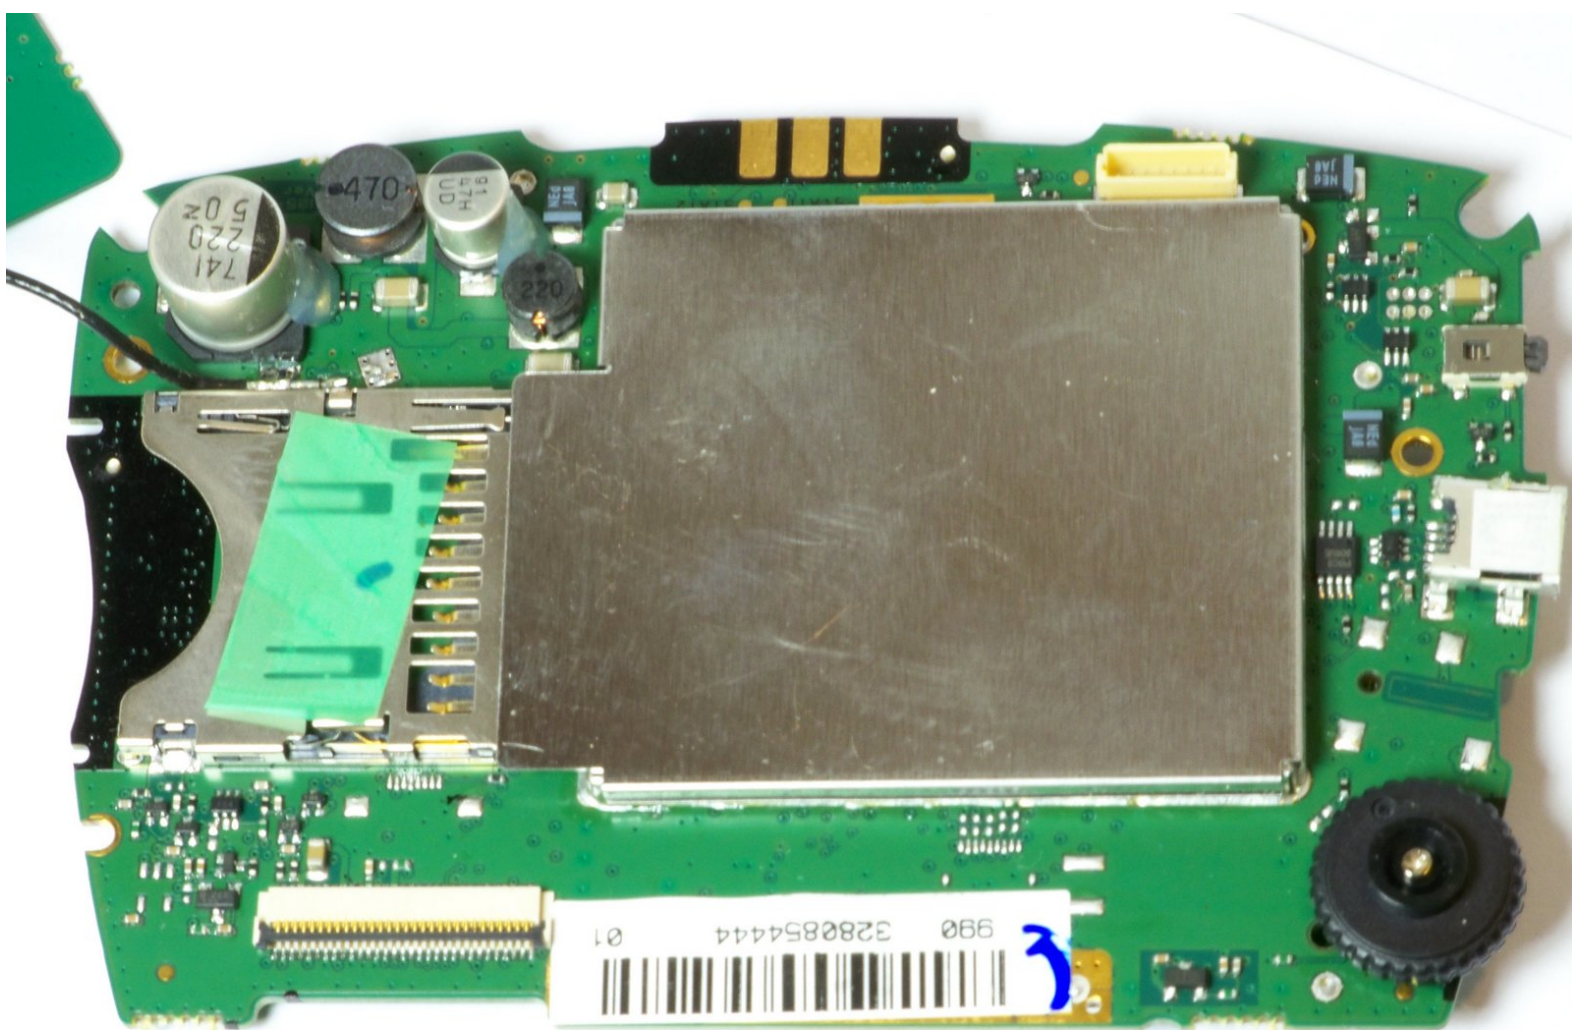



## TOOLS:

- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Casing



- At the top of the outer frame, insert the plastic spudger into the groove in the center.
- Lever the frame gently until it pops out of the case.

## Step 2



- Use a Phillips #00 screwdriver to remove the four screws around the screen.



## Step 3



- Gently pull from both ends of the casing to separate the front and back panels.


⚠ Do not force the pieces apart wider than the length of the connecting wires, or you will damage the wiring.

## Step 4



- Gently unplug the white cable connector using either your fingers or tweezers.




## Step 5

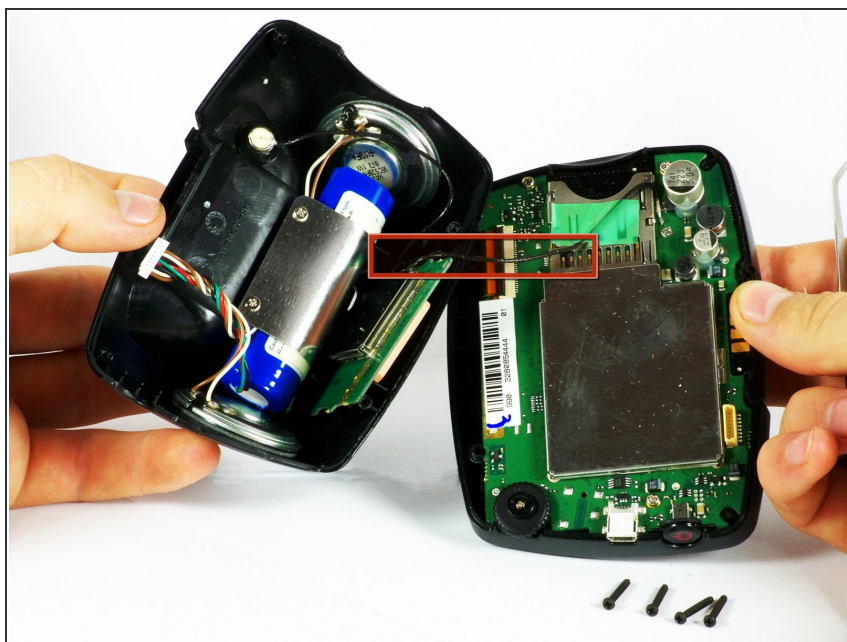

- Carefully expose both halves of the device.

⚠ Be sure not to pull the two halves apart further than the black wire can reach.


## Step 6 — Screen

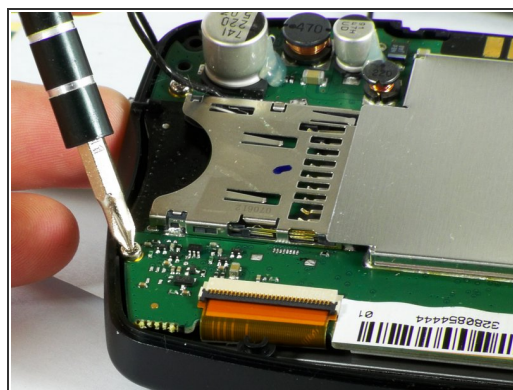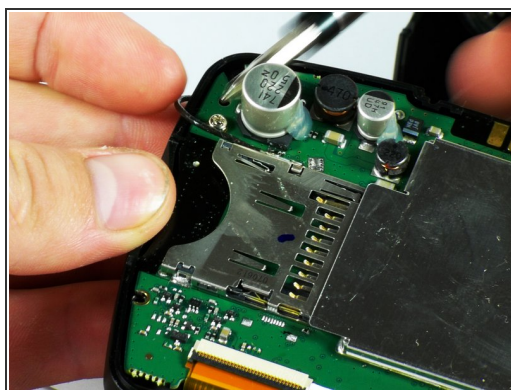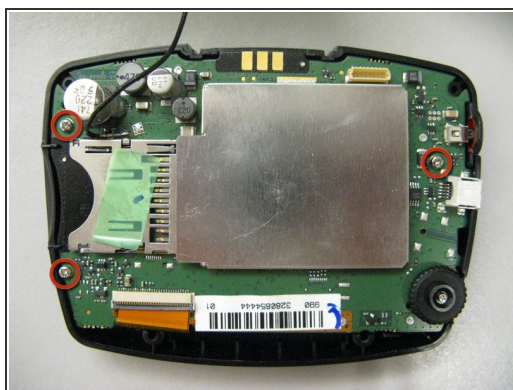

- Remove the three screws holding the motherboard in place.






## Step 7

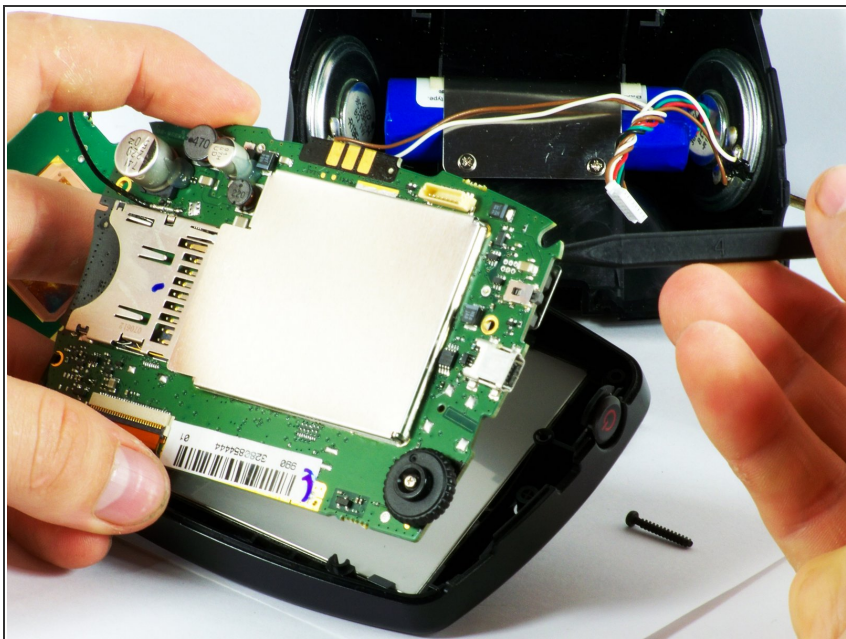

- Use the spudger to lift up the motherboard.

## Step 8

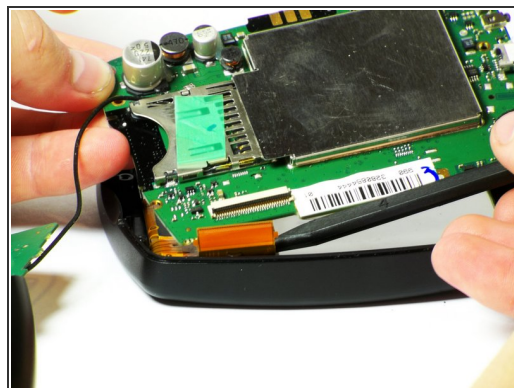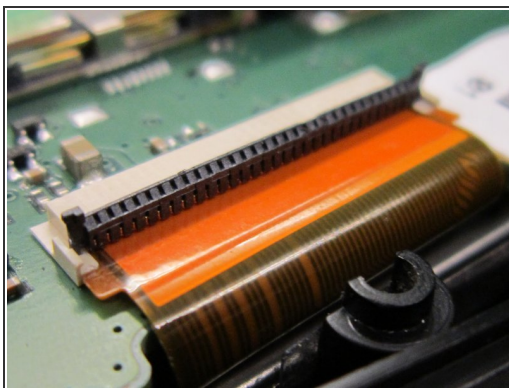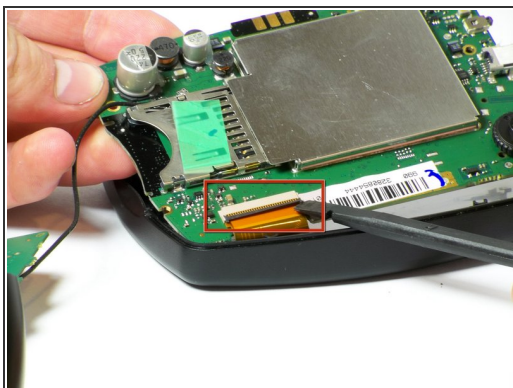


- To remove the ribbon cable, lift the black latch using the spudger tool.
- Separate the connection using either your fingers, tweezers, or the spudger.

## Step 9



- Slide the spudger under the two flexible tabs located on the right and left sides of the bottom of the screen.
- Rotate the spudger outward until the tabs are no longer holding the screen.
- When reassembling, slide the bottom of the screen under the two permanent tabs.
- Push the screen out from the front.

## Step 10

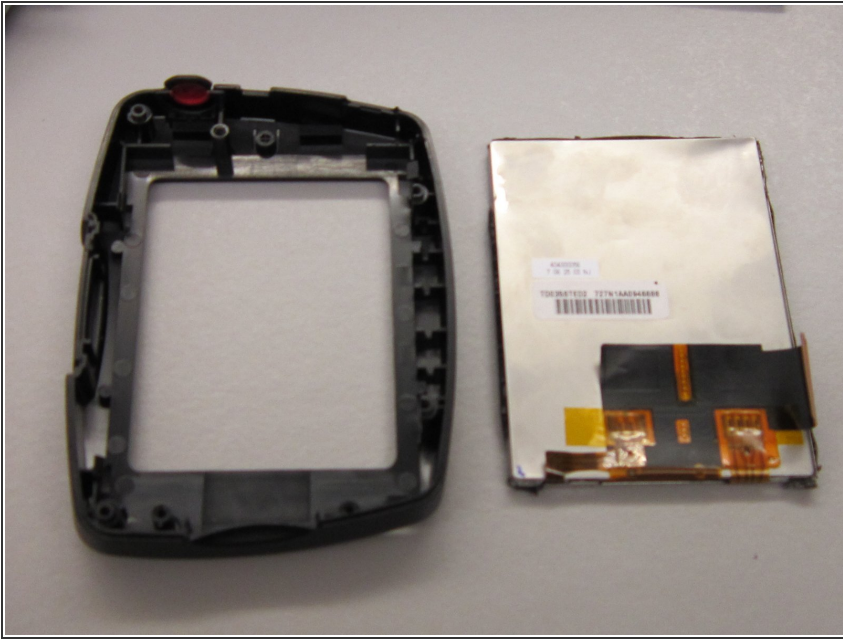

- Separate the screen from the front cover.

To reassemble your device, follow these instructions in reverse order.