



Braun Syncro Shaver Model 7680 Battery Assembly Replacement

Braun Syncro Shaver Model 7680 Battery Assembly Replacement

Written By: Ben



INTRODUCTION

Braun Syncro Shaver Model 7680 Battery Assembly Replacement

[video: <https://www.youtube.com/watch?v=D6jRpCnB8T4>]



PARTS:

- [2 Batteries \(NiMH, 1.2V 2000mAh is sufficient\).](#) (1)
-

Step 1 — Remove bottom cover



- First pry the left side of the cover off, then pry the right side of the cover off before removing. Trying to pry the cover off from only one side will result in breaking the plastic tabs.

Step 2 — Remove side covers



- Remove the side covers by rotating them out and away from the body starting at the bottom of the shaver (where you just removed the cover).

Step 3



- Remove the 4 screws that are now exposed on the back of the shaver. You will need a T9 hex screw driver.

To reassemble your device, follow these instructions in reverse order.