


Samsung Gravity TXT Motherboard Replacement

Use this guide to replace the motherboard in case one of the circuit's components is faulty such as the USB charging connector.

Written By: Mounir Karmada

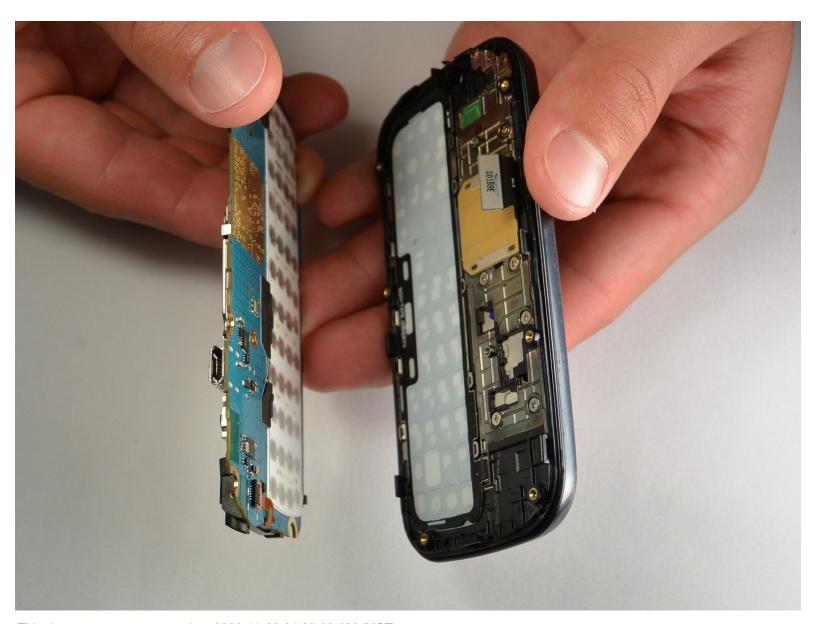

This document was generated on 2020-11-28 04:35:23 AM (MST).

INTRODUCTION

It is easier to replace the entire phone's motherboard than replacing one component of a complicated circuit such as a USB port, back camera or Sim Card slot.



TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)
- iFixit Opening Picks set of 6 (1)
- Jimmy (1)

Step 1 — Battery






 Pry the back cover off with a plastic opening tool, or your fingernail, in the indentation on the bottom of the device.

Step 2



 Lift the back cover away from the main body of the phone.

Step 3

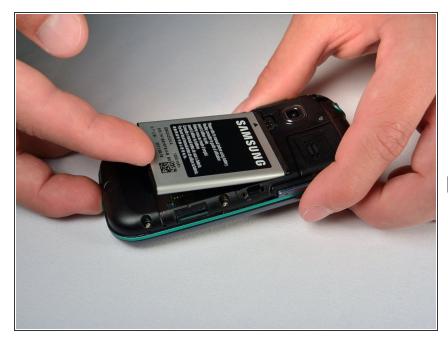

- Insert your finger in the groove below the battery.
- Press the battery toward the audio jack while lifting upward and away from the phone.
- Remember to place the battery back with the copper contacts on the battery lined up with those on the phone.

Step 4 — SIM Card







- Using your finger, push the SIM Card down and slide out of the slot.
 - (i) Slide the SIM card out enough to grab it firmly.
- Remove the SIM card away from the phone.
- Follow the visual on the bottom of the SIM card slot to put the SIM card back in the correct orientation.
 - (i) When sliding the SIM Card back in the slot, make sure the card goes all the way in the slot until it hits the stopper.

Step 5 — microSD Card







- Using your fingernail, push the microSD card slightly deeper into the slot, until you hear a click.
- i The removal of the battery is not required for this operation; therefore, step 3 can be skipped if just replacing the microSD card.
- After the click, release the microSD card to allow it to pop out.
- Remove the microSD card from its slot
- Mhen placing the microSD card back in the phone, make sure the card clicks in place.

Step 6 — Plastic Back Frame



 Remove the six 3 mm #00 Phillips screws in the plastic back frame.

Step 7








- Slide the keyboard out.
- Use a Jimmy to separate a small segment of the plastic back frame from rest of the phone.
 - (i) Starting at the bottom of the keyboard is recommended.
- Slide an opening pick around the rest of the seam, starting at the gap just created with the Jimmy.
 - You will have to slide the keyboard back in to separate the back frame from the top have of the keyboard slider.
- Lift the plastic back frame away.


Step 8 — Motherboard

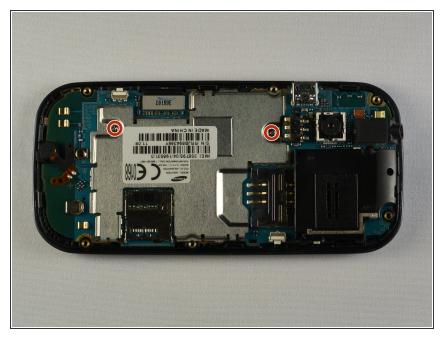

- Remove the two 3 mm Phillips #00 screws securing the motherboard to the front panel.
- Do not try to pull the motherboad out just yet. The display data cable needs to be disconnected from the motherboad first.

Step 9




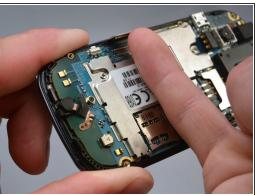



Use your finger nail to disconnect the display data cable from the motherboard.

Step 10

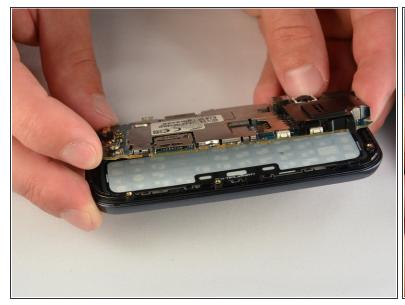



• Carefully lift the main motherboard assembly away from the front panel.

To reassemble your device, follow these instructions in reverse order.