



Olympus Stylus Tough TG-2 iHS Battery Replacement

This guide will illustrate how to access and remove the battery.

 
Written By: Yushu Liu



INTRODUCTION


Battery dead? It may be time to replace it. This guide will walk you through the simple steps to access and replace your battery.

Step 1 — Battery

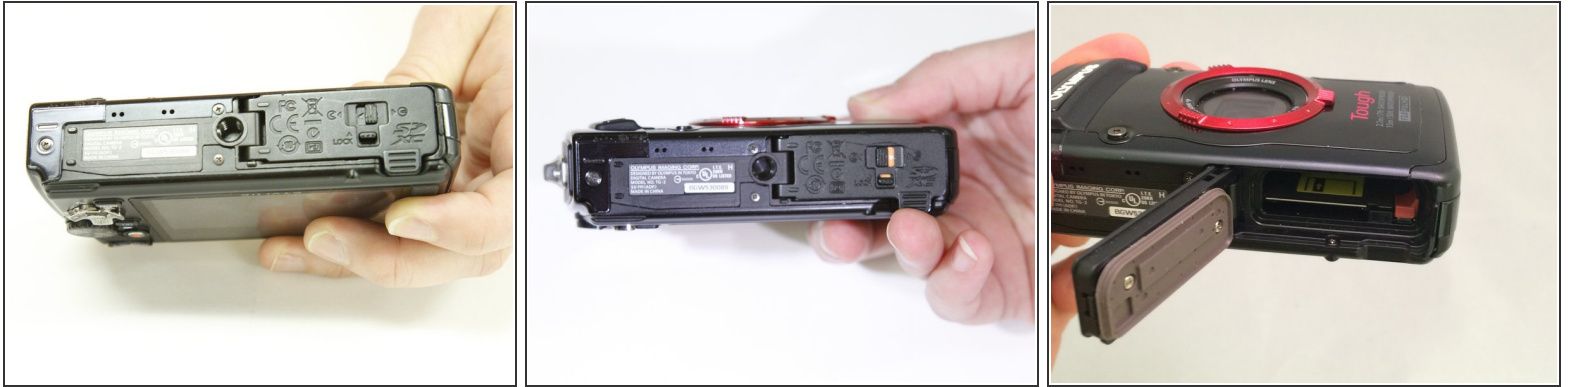

- Locate the two locking tabs on battery/card cover on the bottom of the camera.
- Slide the tab labeled lock to show orange.
- Slide the battery/card cover lock to reveal orange and the door will spring open.

 Step 2

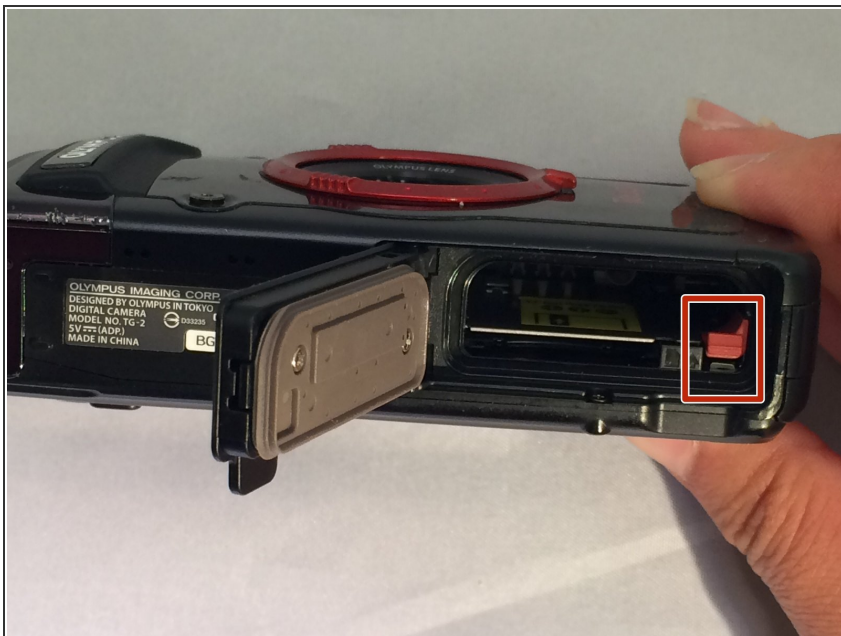

- Press the red tab to eject the battery.
- ⓘ Take note of the orientation of the battery. It won't operate if inserted upside down.

To reassemble your device, follow these instructions in reverse order.