


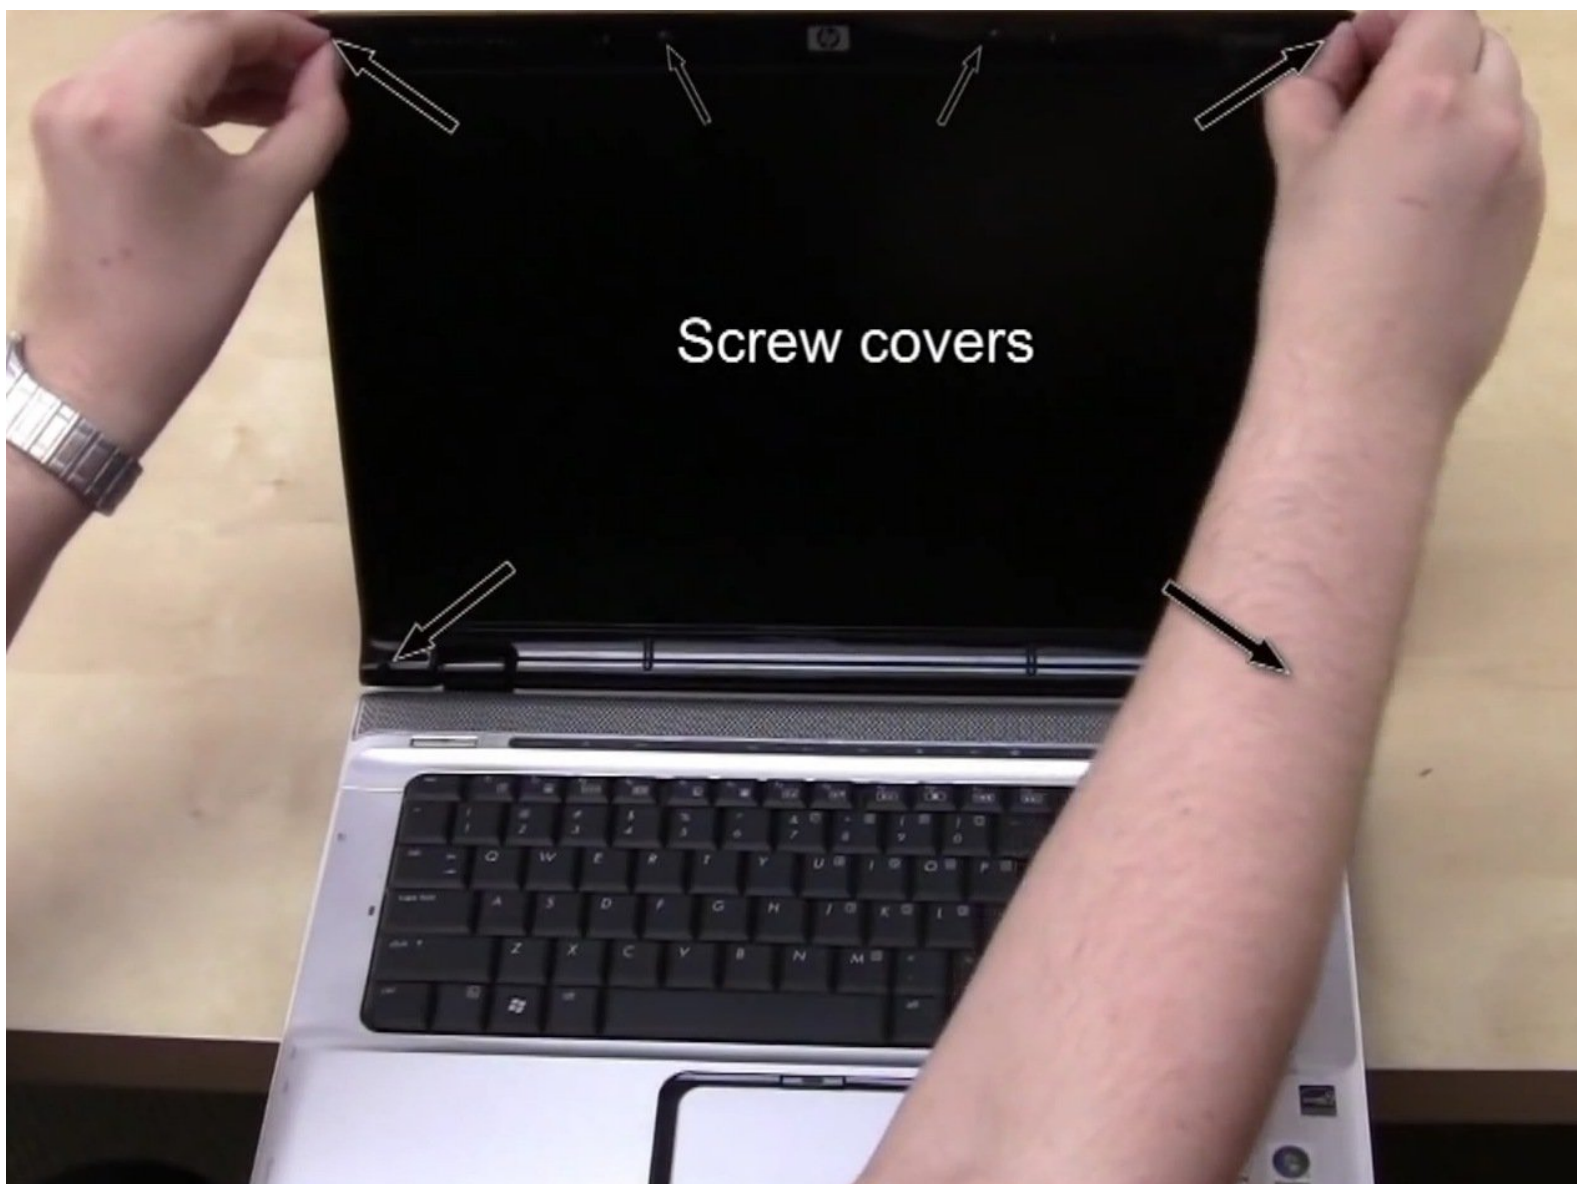

Disassembling Asus K550L Laptop Screen

The following portion of this user guide provides the necessary steps and instructions required for the teardown of the LCD screen on an ASUS K550L laptop computer.

Written By: David



INTRODUCTION




The processes below outline the procedures involved in removing the laptop screen off an ASUS K550L.



TOOLS:



- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Disassembling Asus K550L Laptop Screen

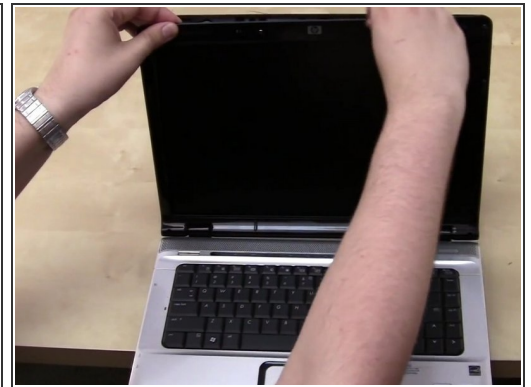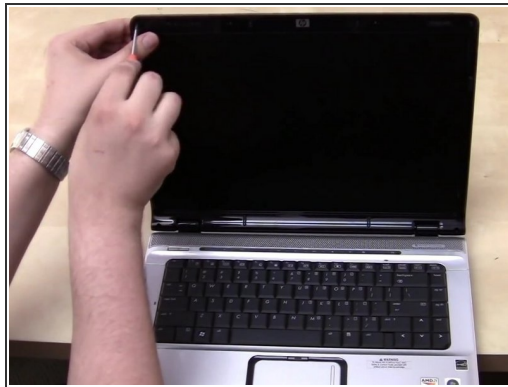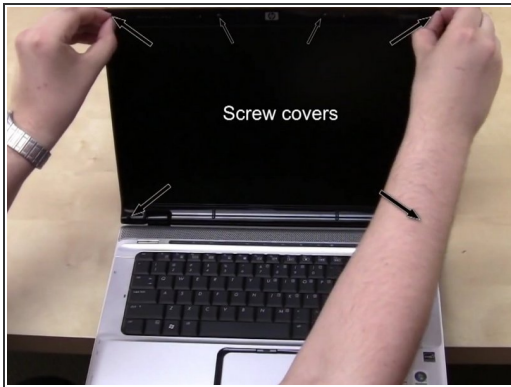

- Removal of the Laptop LCD Screen

Step 2

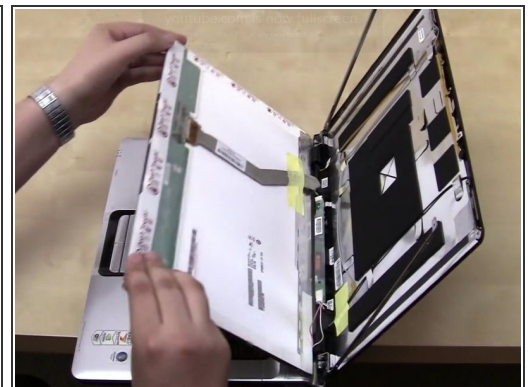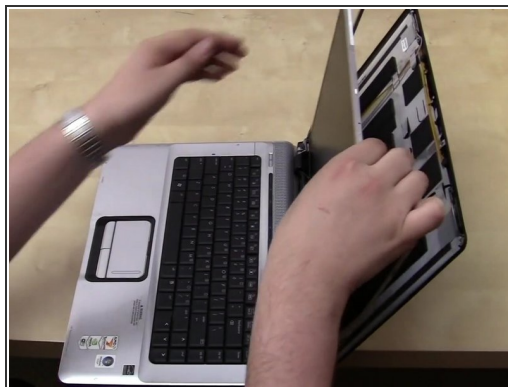

- Removal of the Laptop LCD Screen

Step 3



- Removal of the Laptop LCD Screen

To reassemble your device, follow these instructions in reverse order.