



# Canon Optura 100MC Hand Strap Replacement

This guide instructs on how to replace the black strap on the side of the camcorder if it breaks or simply gets old.

Written By: Jeanette Neethling



---

## INTRODUCTION

Use this guide to replace your hand strap.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Hand Strap



- Orient the camera with the hand strap facing you.
- Remove the two 4mm #00 Philips screws.
- ⓘ When the screws are removed, the black plate will easily come off as well as the two metal plates under it. Be careful to not let them fall or get lost.

## Step 2



- Lift the strap up.

To reassemble your device, follow these instructions in reverse order.