



# Infant Optics DXR-8 Monitor Replacement

A guide for disassembling the Infant Optic DXR-8 monitor.

Written By: Larsha Johnson



---

## INTRODUCTION

The disassembling of the monitor is so to be able to change the screen or replace other components of the monitor.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Monitor



- Start by gently inserting the plastic opening tool between the led and casing.

## Step 2

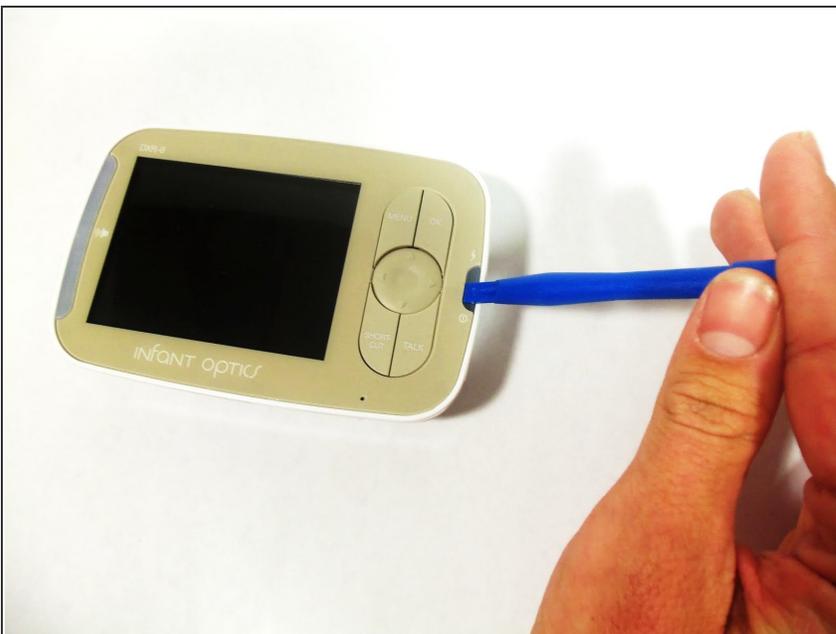


- Slowly pry the cover away from the bottom using the plastic opening tool.

### Step 3




- Glide the tool around the entire cover to reveal the screws, which are 5.0 mm.

### Step 4

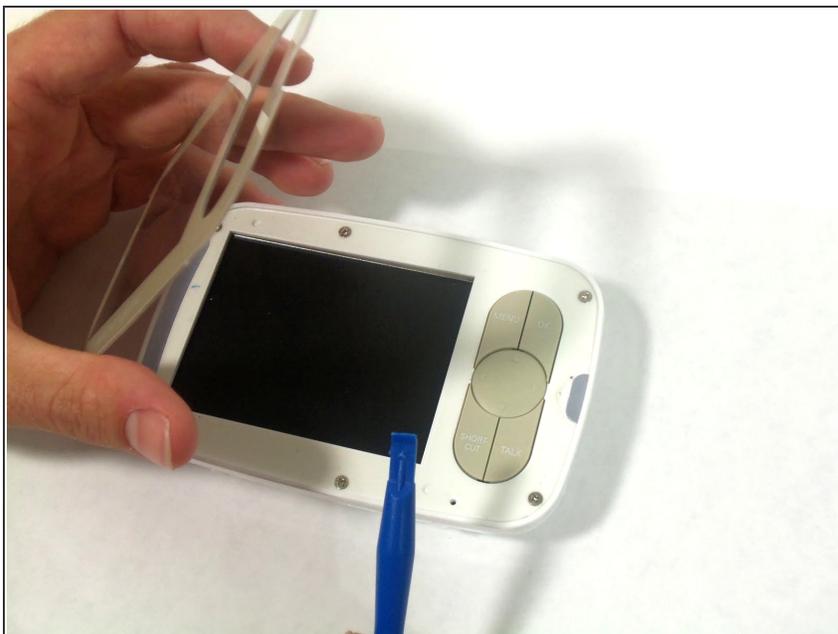

- Remove the cover and set it aside.

## Step 5

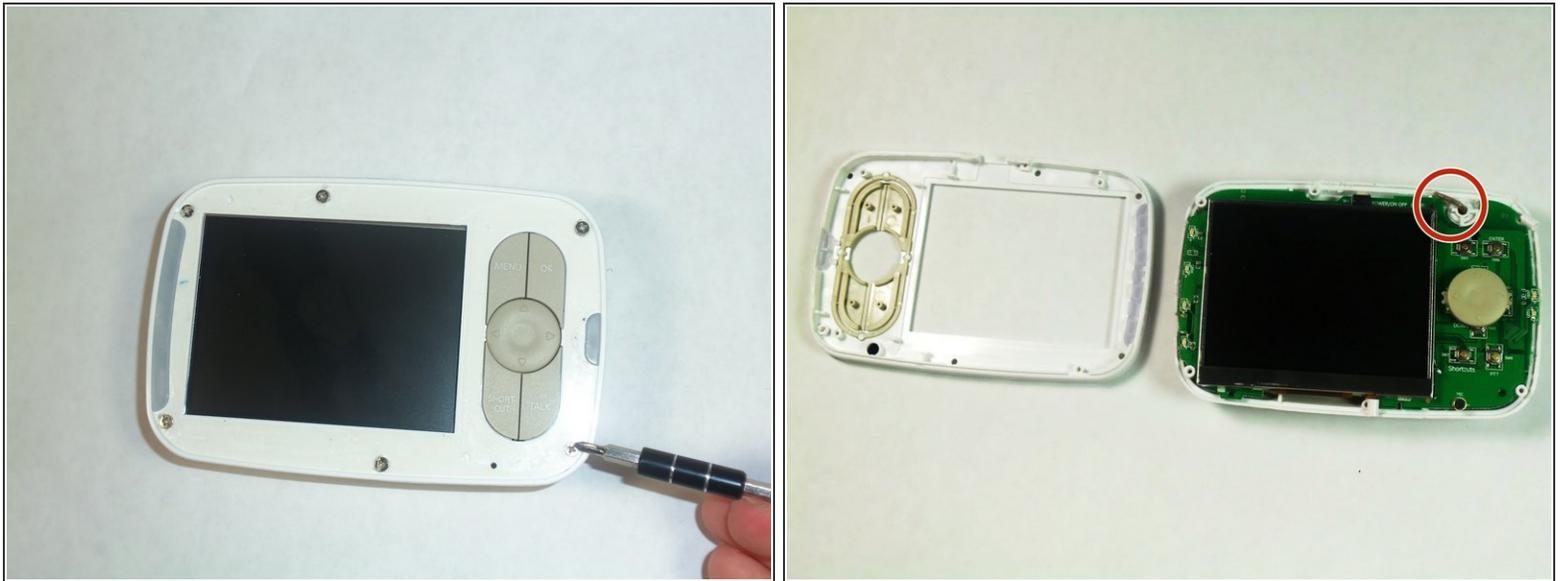

- Remove the four corner screws, 5.0 mm, using a J1 bit.

⚠ Lift the top away from the bottom using the metal spudger. Be careful not to rip the antenna wire.

To reassemble your device, follow these instructions in reverse order.