

# Vtech InnoTab 3S Camera Replacement

Is the camera not working properly on your...

Written By: Karina Garcia



## INTRODUCTION

Is the camera not working properly on your child's tablet? This guide will walk you through replacing the camera on the Vtech InnoTab 3S.

### 🖌 TOOLS:


Metal Spudger (1) Phillips #1 Screwdriver (1)

### Step 1 — Rear Panel



- While holding the battery compartment locks down, slide the two battery doors outwards from the sides of the device.
- Remove the batteries from the device.

### Step 2

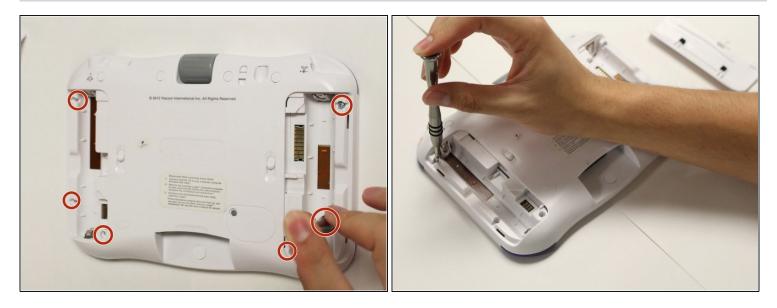

 Remove six 7 mm screws from the interior of the battery compartment using a Phillips #1 screwdriver.

#### Step 3




• Using a nylon spudger, remove the five caps that hide the screws.

A Potential for device damage: Be careful not to scrape the plastic from the device using the spudger.


- When removing the caps, hold the spudger vertical to the board to make removal easier.
  Also try to push in with your spudger pointing towards the bottom of the device.
- Remove the five 5 mm Phillips #1 screws from the rear panel of the device.

## Step 4

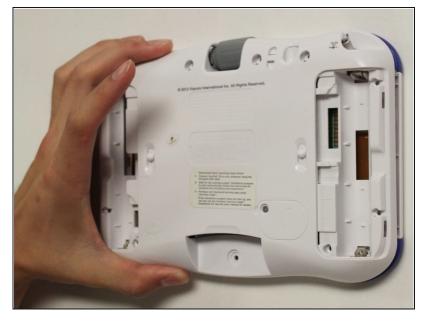

- Carefully remove the rear panel from the front panel of the device.
- (i) Once the rear panel is removed, you'll be able to see the motherboard and other components within the Vtech InnoTab 3s.

#### Step 5 — Camera

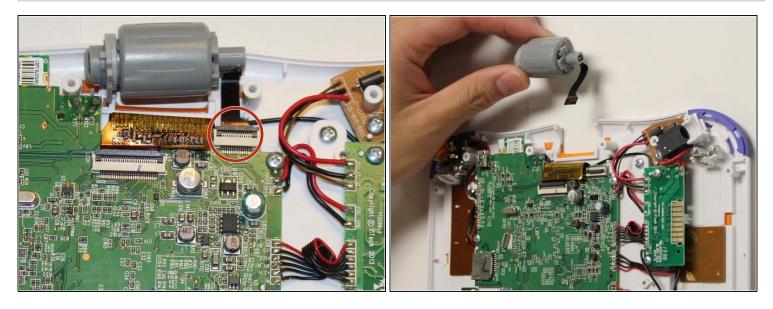

- Using the tip of your finger, carefully pull the clip upwards to release the camera connection from the motherboard.
- ① The connection between the motherboard and the camera is located at the near the top of the device.
- Remove the camera and the connecting wire from the the clip and attach the replacement cameras connection to the latch on the motherboard.
- Carefully lower the latch until you hear a click to secure the new camera to the device.
- A Pulling or tugging on the connection between the camera and the circuit board may cause damage to the connection.

To reassemble your device, follow these instructions in reverse order.