



Presto PopLite 04820 Popping Chamber Shaft Replacement

The chamber within the popper that holds the kernels while heating unpopped kernels.

Written By: Emanuele Rocco



INTRODUCTION

This is a replacement guide for the Popping Chamber shaft. The shaft may need to be replaced if it has been coated with any popcorn residue that could not be cleaned out. Be sure that the PopLite is unplugged from the wall and has had time after use to cool down before working on the device.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Chute



- ⚠ Make sure you unplug the device before disassembling.
- Remove the butter melter/measuring cup.

Step 2



- Remove the cover.

Step 3



- Remove the three 49 mm Phillips #2 screws.
- Once you have removed the screws, remove the chute from popper base.

Step 4 — Popping Chamber Shaft



- The popping chamber shaft should be located in the popper base once the chute is removed.

Step 5



- Reach down the popper base and grab the popping chamber shaft. Begin to remove it from the popper base.
- Now remove it completely and set it aside for new shaft to be placed.

To reassemble your device, follow these instructions in reverse order.