



# HKC P771A Camera Replacement

This guide will show you how to remove the camera from your HKC P771A device.

Written By: Sara Hill






## TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Camera

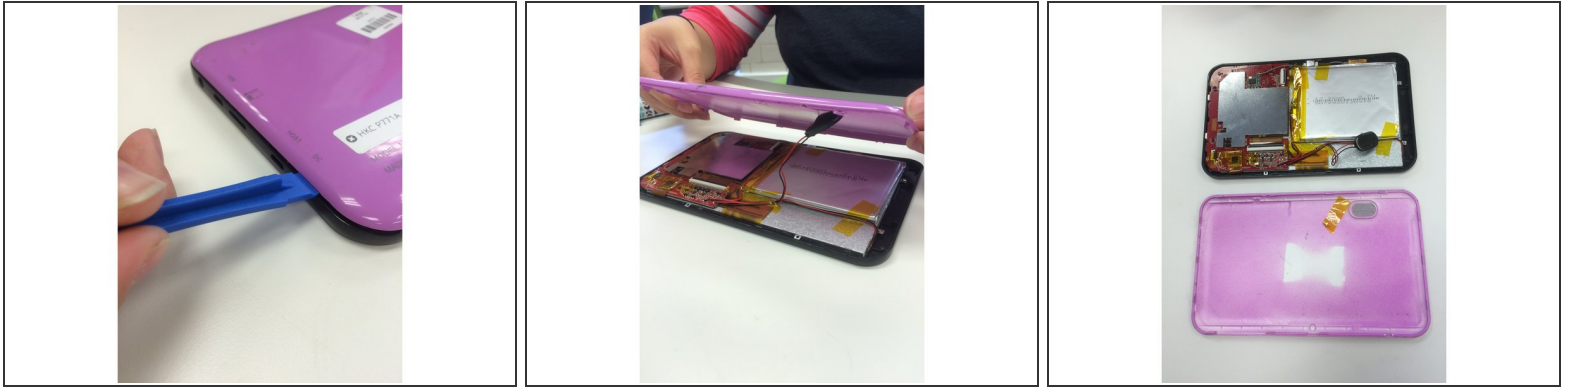


- Remove back of tablet using the plastic opening tool
- Slide the opening tool between the back of the tablet and the digitizer
- Lift along the edges until the back of the tablet and the digitizer are separated

## Step 2

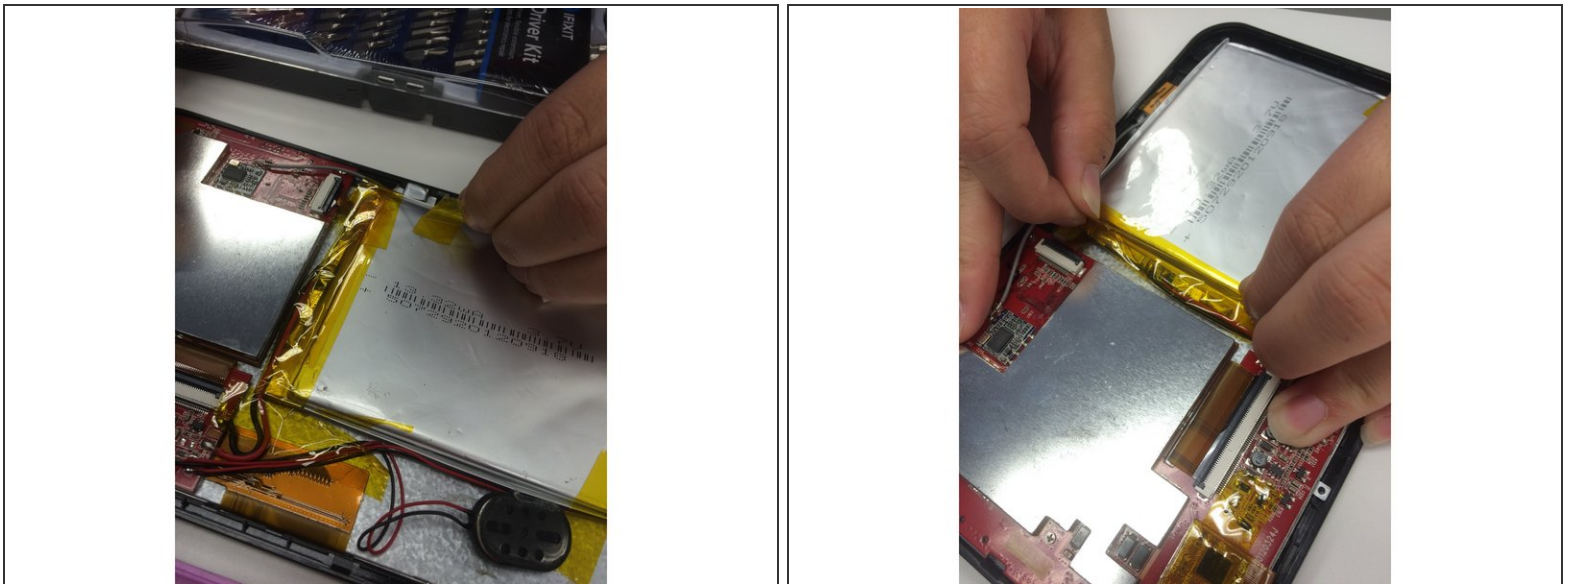

- Remove yellow tape around the edges of the battery
- The battery is located on the right side of the tablet when the screen is facing downwards and the camera is on top

## Step 3

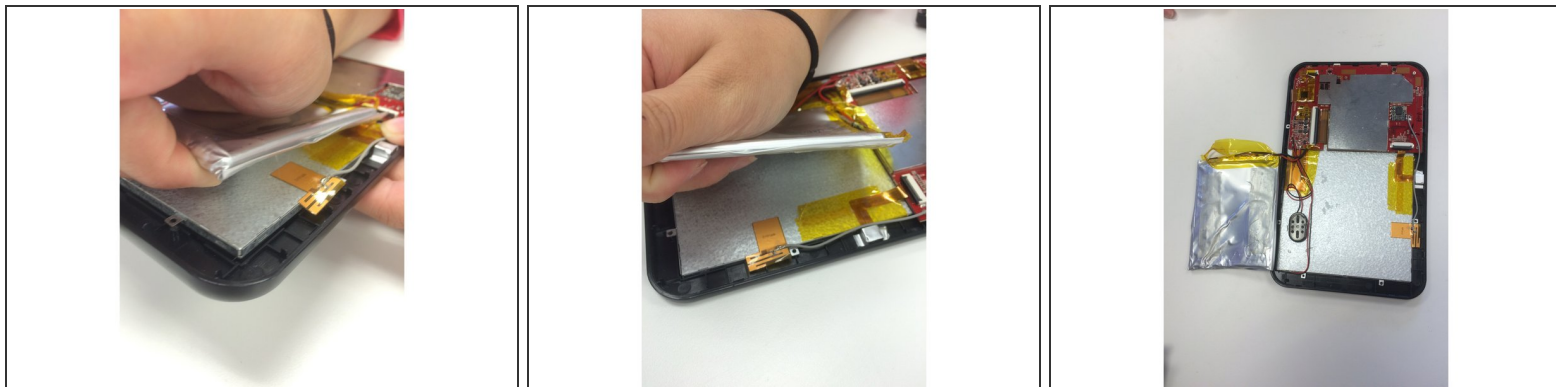


- Pry battery away from the back of the tablet until the battery is completely separated from the adhesive

## Step 4




- Remove yellow tape that is securing the camera wires

## Step 5

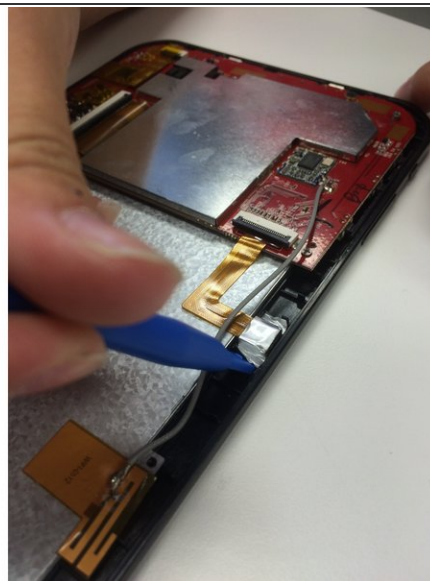

- Remove silver foil from the back of the camera using the blue opening tool

## Step 6

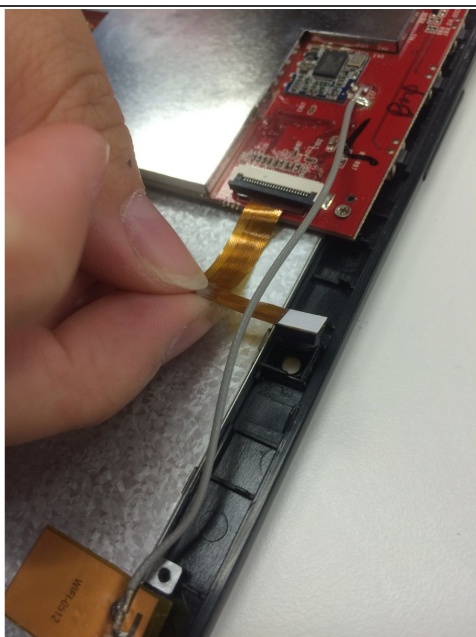

- Lift the bronze, L-shaped ribbon
- The camera is attached to the end of this ribbon so it will move with it




## Step 7




- Flip up the black bar located on the motherboard
- The black bar is to the left of the camera, where the ribbon is attached to the motherboard

## Step 8

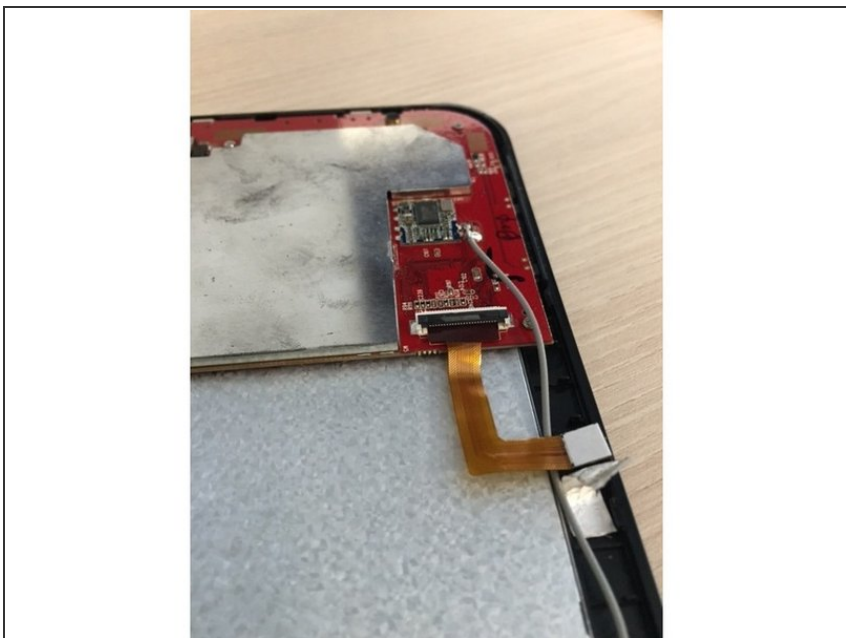

- Remove the bronze, L-shaped ribbon from inside the black bar

## Step 9

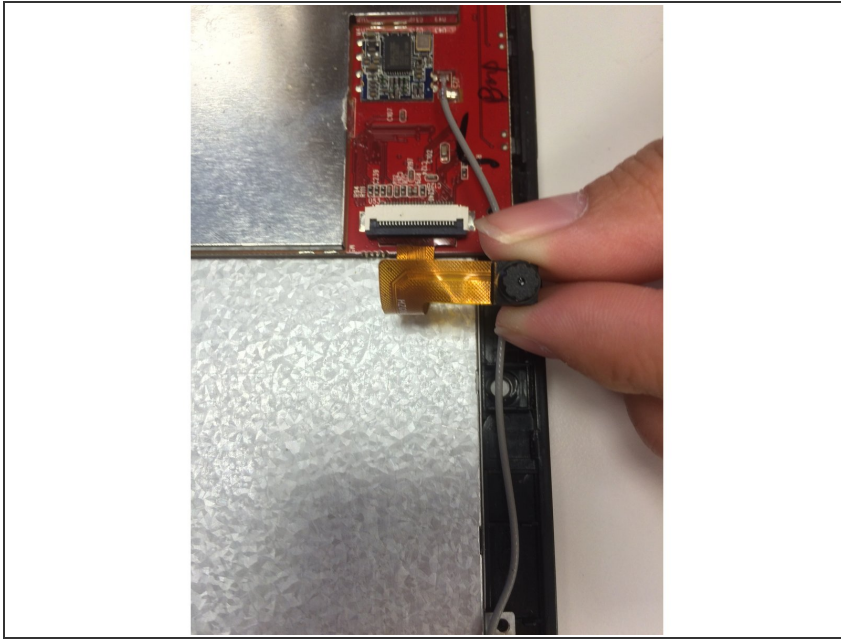

- Your camera is now removed from the tablet

To reassemble your device, follow these instructions in reverse order.