



Sony Handycam DCR-DVD103 Battery Replacement

This guide outlines how to remove the Sony Handycam DCR-DVD103 battery.

Written By: Lauren



Step 1 — Battery



- i Images do not show the camera's battery.
- On the back of the camera beneath the viewfinder, locate the battery pack.
- Press the small button.
- Slide the switch forward.

Step 2



- Remove the battery from the camera.
- ★ To reinsert the battery, slide the battery into the camera.

To reassemble your device, follow these instructions in reverse order.