



# 2003-2008 Toyota Corolla Headlight Bulb Replacement

Learn how to replace the headlight bulb in a 2008 Toyota Corolla.

Written By: Frederick Henderson



---

## INTRODUCTION

Are your headlights giving you trouble and need to replace them? This guide will show you how to easily replace those malfunctioning lights.

---



### PARTS:


- [9006 Halogen Headlight Bulb 2 Pack](#) (1)
-

## Step 1 — Headlight Bulb



- Locate the handle to open the hood. It will be on the driver side of the car to the left.
- Pull up on the handle and the hood should pop open a small amount.

## Step 2

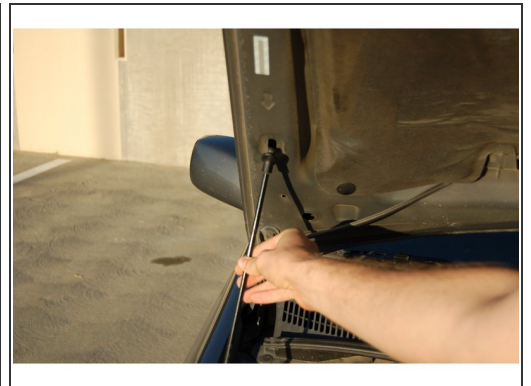

- Reach under the hood in the front where there is a small notch and pull the latch up. This will allow the hood to open all the way.
- Locate the prop and insert it into the hole in the hood.





### Step 3



- Locate the bulb. It will be in the front and to the side. Start with the side opposite from the battery.

### Step 4

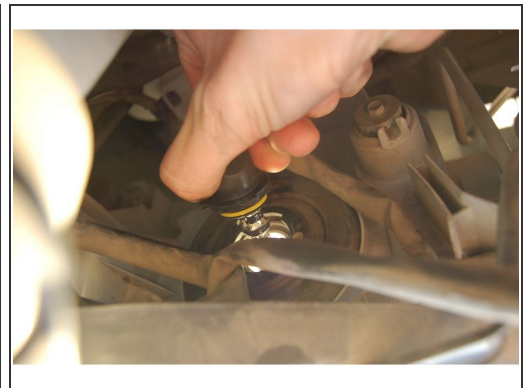
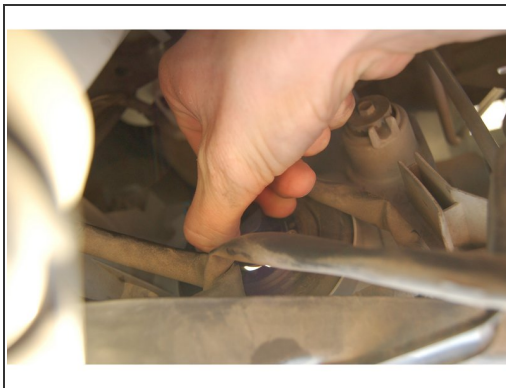


- Twist assembly 45 degrees counter clockwise and pull straight out.




Be careful not to touch the glass on the new bulb. The oils from your hand could cause premature bulb failure.

## Step 5

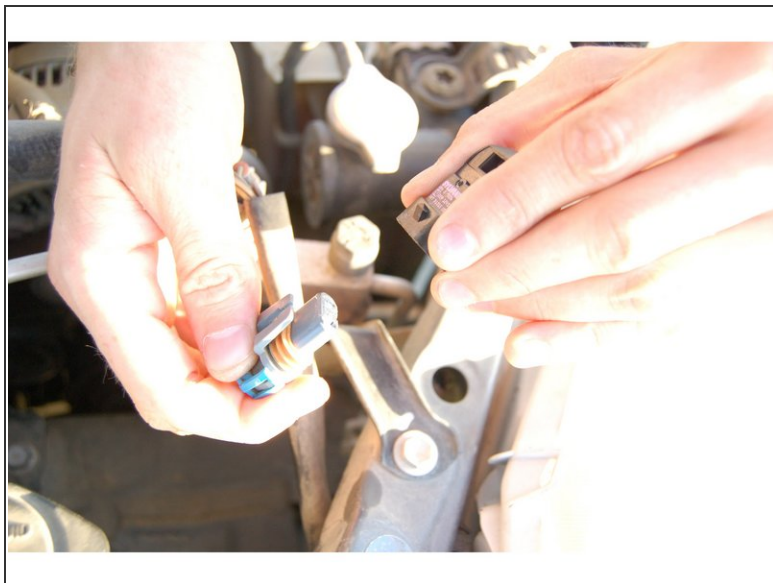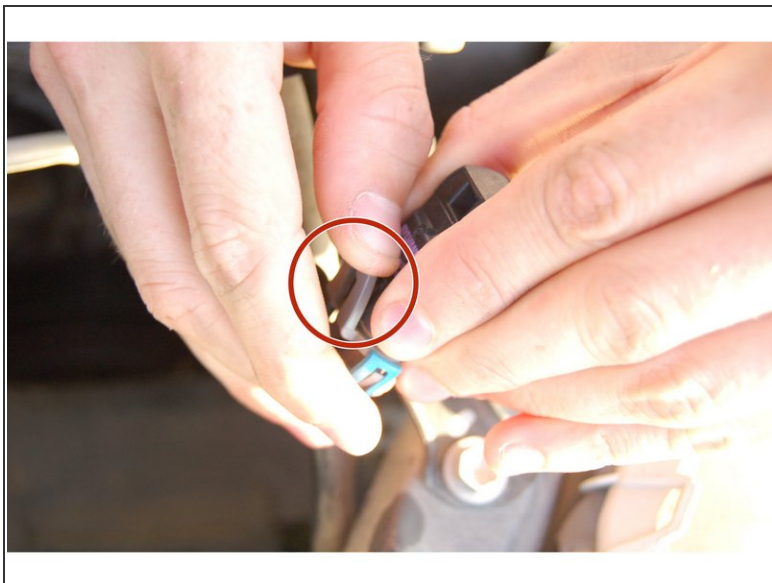

- Lift up on the latch and pull. The bulb will come free from the wires.

## Step 6

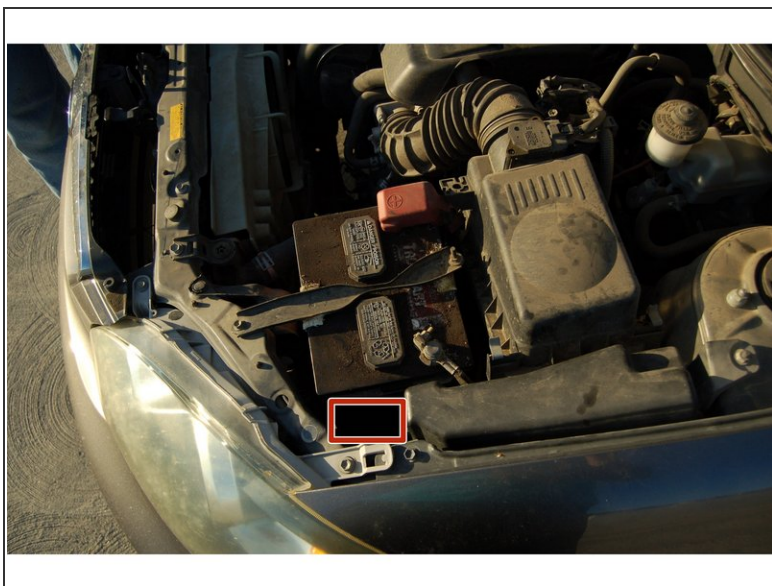

- Locate the other bulb, and repeat steps 3-5 to remove it.

To reassemble your device, follow these instructions in reverse order.