



# Acer Iconia One 7 Front Facing Camera Replacement

This guide will help to explain how to remove the front-facing camera of the Acer Iconia One 7.

Written By: Michael



---

## INTRODUCTION

The Front facing camera is utilized when taking pictures in front of the device. In this case it is separated from the rear facing camera and works separately as well. Pieces regarding this camera are significantly small so be aware of any missing items.





### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Front-Facing Camera



- Begin at any side of the tablet.
  - With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.
-  Prying the lid open can be difficult, use caution in order to safely remove.
-  Turn off device before this step.

## Step 2

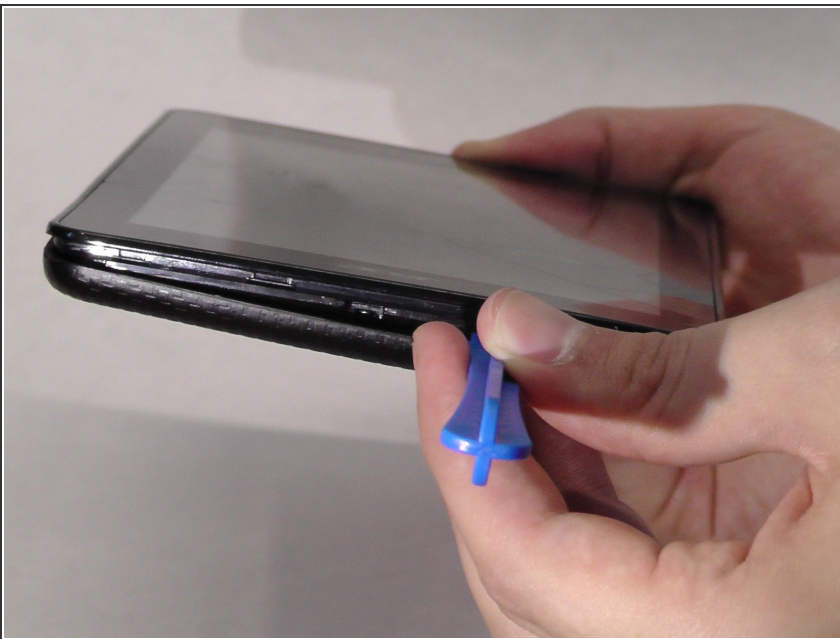

- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated.



## Step 3



- Turn tablet over.
- Locate front-facing camera.

## Step 4



- Pull black tape with front-facing camera.

To reassemble your device, follow these instructions in reverse order.