


Baby Einstein Take Along Tunes Handle Replacement

When the handle breaks off, then replace them

Written By: Shreya Sunny

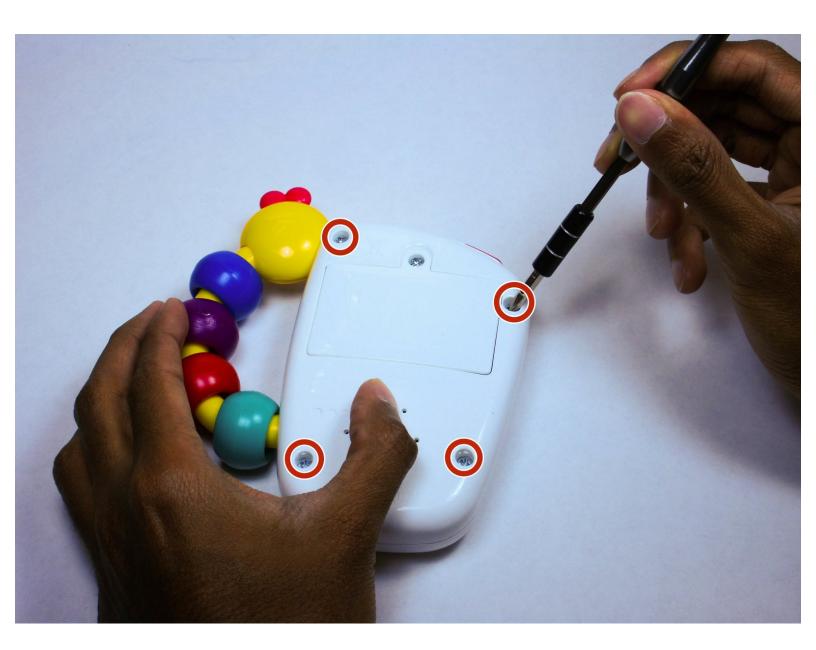

This document was generated on 2020-11-28 04:39:18 AM (MST).

INTRODUCTION

In this guide, you will learn how to remove and replace the handle with rings



TOOLS:


- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)



PARTS:

• A handle with rings (1)

Step 1 — Handle

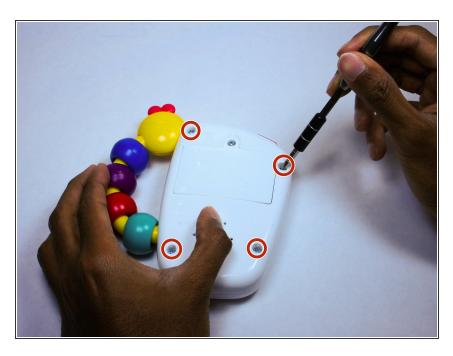

 Using a Philips #1 screwdriver, unscrew the four highlighted screws on the back side of the device.

Step 2



 With the help of a plastic opening tool, remove the handle of the device.

To reassemble your device, follow these instructions in reverse order.