




# Disassembling HP Envy TouchSmart 15 Accessory Plate

Prerequisite Only

Written By: Robert Patterson

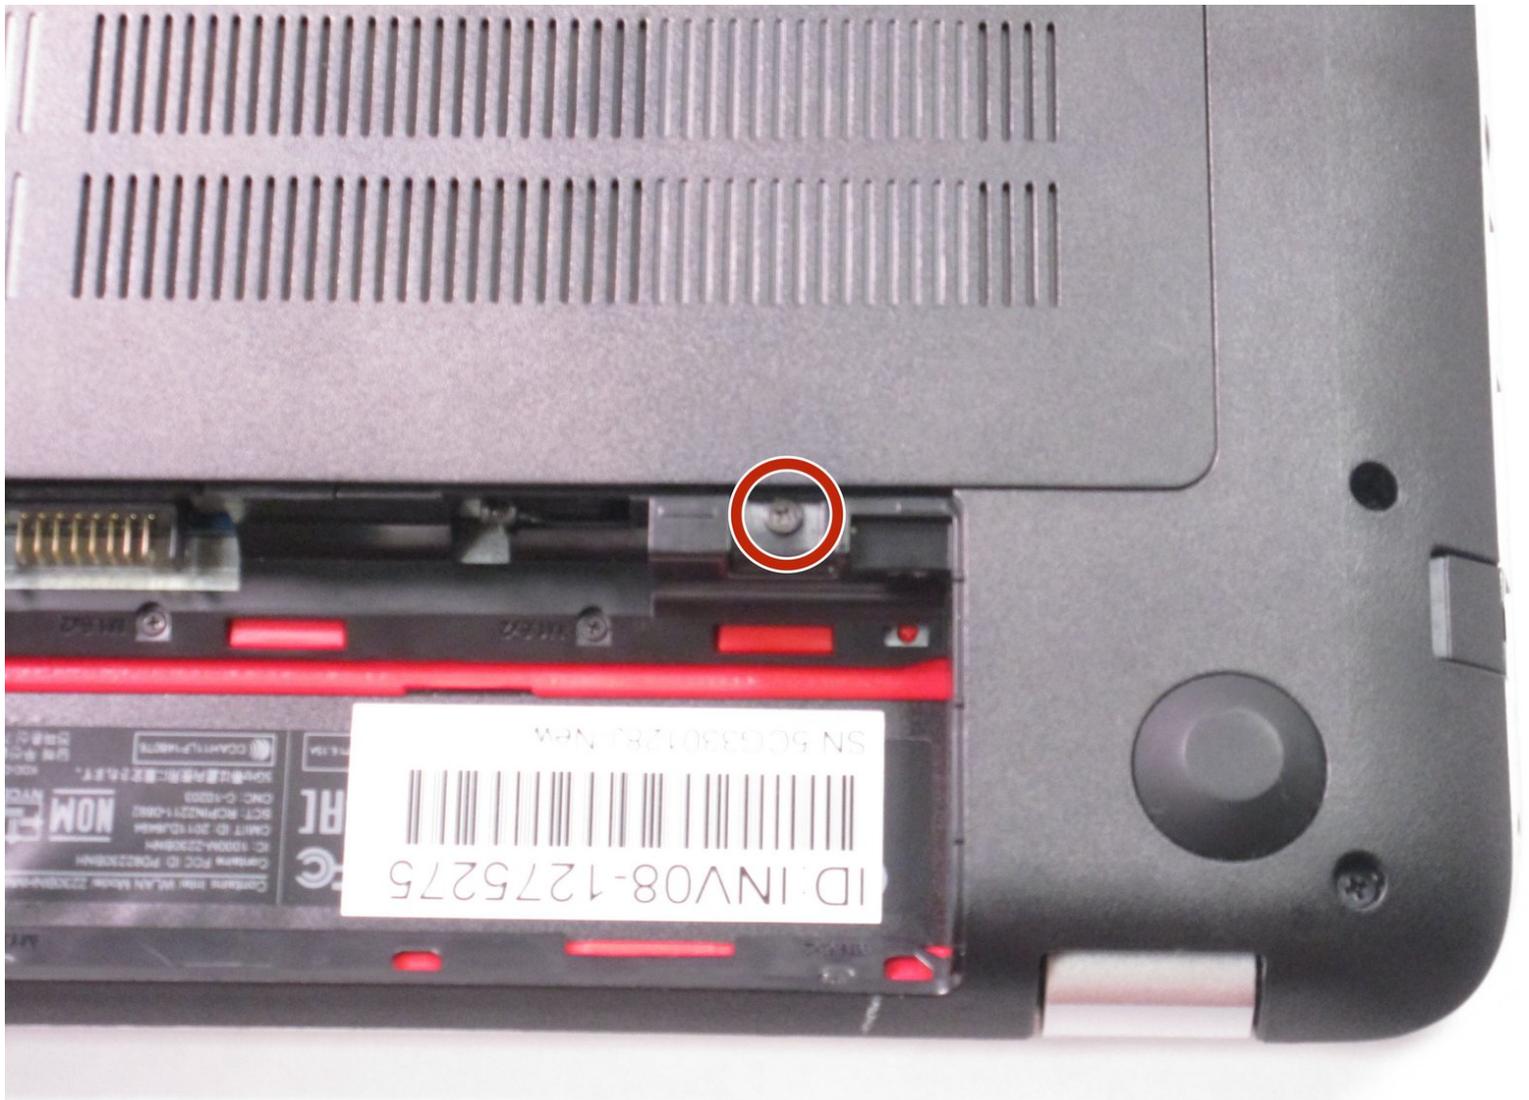

## **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Press the battery release tab and the battery will pop up.

## Step 2



- Remove the battery from the laptop, it will come out easily.

### Step 3 — Accessory Plate



- Remove the single screw holding the accessory plate. This is a PH0 2.0x2.5 screw.

### Step 4



- Pry the accessory plate up from the back of the laptop by applying force upwards where the screw was removed.

To reassemble your device, follow these instructions in reverse order.