



Nikon Coolpix S6300 Battery Replacement

This guide shows how to remove the battery.

Written By: Michael Lynch



INTRODUCTION

This guide shows how to remove the battery.

Step 1 — Battery



- Place the camera facing upwards.
- Press down on the battery cover and slide towards the front face of the camera.

Step 2



- Rotate the orange battery clip in the camera to release the battery.

To reassemble your device, follow these instructions in reverse order.