



LG G Pad 8.3 Speaker Replacement

The guide will show you how to replace the LG G Pad 8.3 speaker.

Written By: Mario Salguero



INTRODUCTION

If your LG G Pad 8.3 speaker isn't working, it may be time to replace it. This guide will show you how to replace the speaker.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iOpener Kit](#) (1)
-

Step 1 — Back Panel




- With the tablet face down, pull the SD card slot cover out.
- Using a Phillips #000 screwdriver, remove the 3mm screw located in the SD card slot.

Step 2

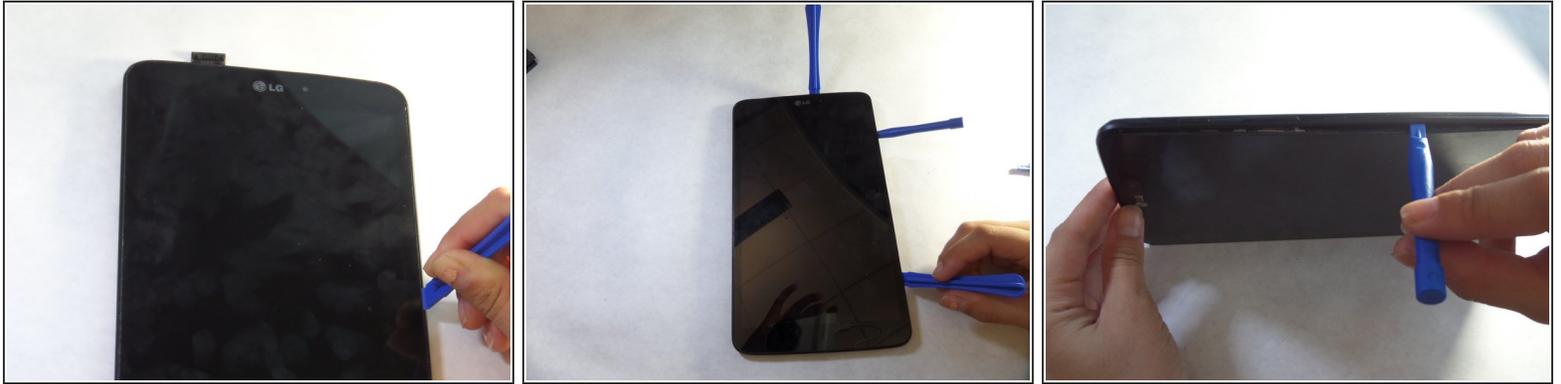


- Insert a plastic opening tool in the small crevasse between the screen and the back panel.
 - Pry the screen away from the back panel.
 - Repeat this on each edge of the device.
- i** We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.
- i** This requires heavy force. The back of the device is attached with an adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3

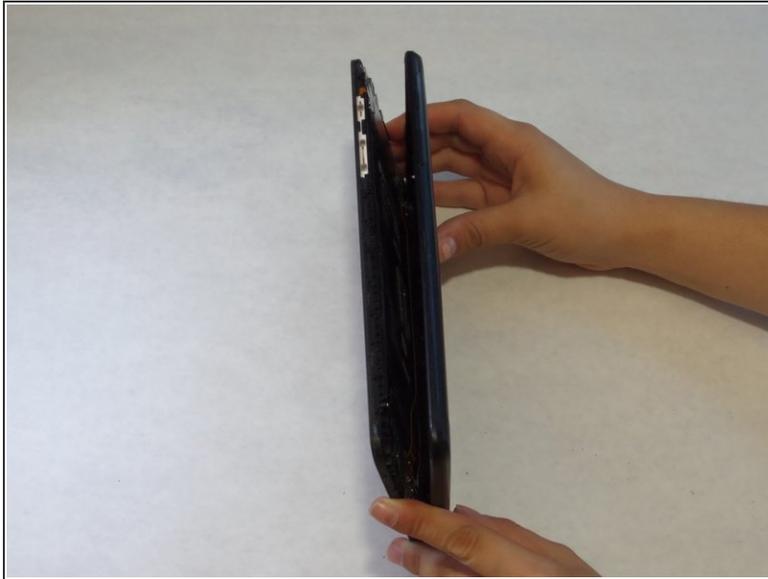

- After using the plastic opening tools, pry the device open with your hands.
- Remove the back panel from the screen.

Step 4 — Speaker

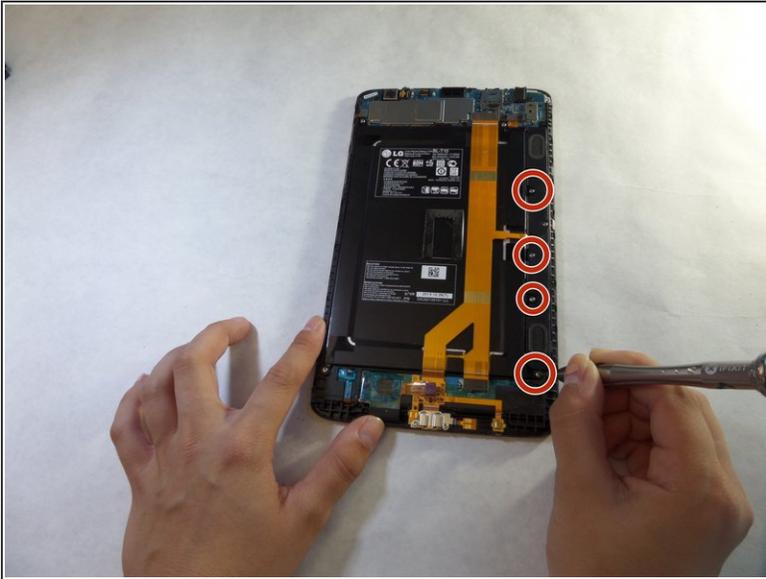

- Remove the four 3 mm Phillips #000 screws that are attached to the speaker.
- ⓘ These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.

Step 5



- Use your fingers to remove the speaker.

To reassemble your device, follow these instructions in reverse order.