

## **Drift HD 720 Battery Replacement**

Replacing the battery will likely get your device running again if no damage has occurred.

Written By: Hector Rodriquez



## **INTRODUCTION**

If your device won't boot up, replacing the battery will likely fix this issue.

## Step 1 — Battery





Unscrew the back plate counterclockwise until it comes off.

## Step 2



- Push the black battery tab next to the battery to get the battery out.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.