



# Nikon Coolpix S6300 Polarizing Lens Replacement

This guide shows how to remove the polarizing...

Written By: Michael Lynch



# INTRODUCTION

This guide shows how to remove the polarizing lens from the S6300 after removing the battery, the camera front and back covers, and display.

## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)

## PARTS:

[Replacement Nikon Coolpix S6300 polarizing lense](#) (1)


## Step 1 — Battery



- Place the camera facing upwards.
- Press down on the battery cover and slide towards the front face of the camera.




## Step 2

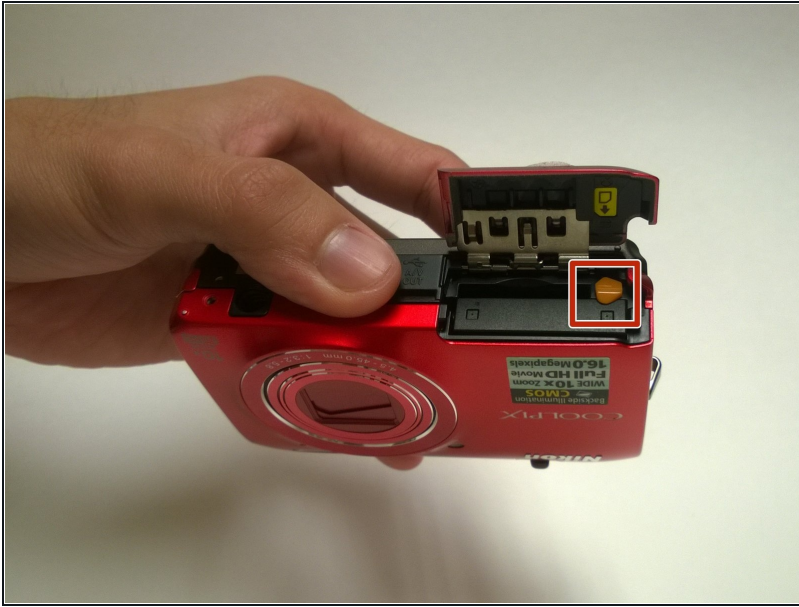


- Rotate the orange battery clip in the camera to release the battery.

## Step 3 — Buttons

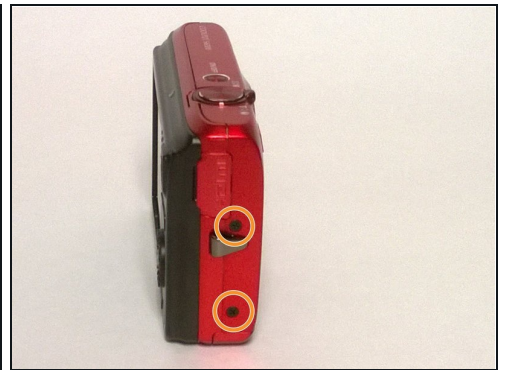


- Locate the eight outer PH 2mm screws on the device.
- Using the PH00 screwdriver remove all of the screws from the camera.

## Step 4

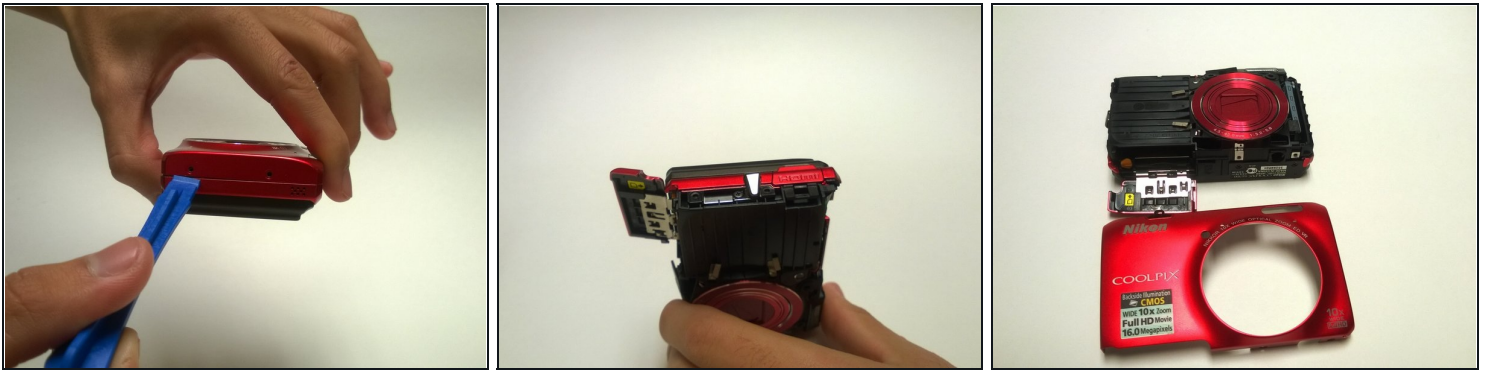


- Using a plastic opening tool, gently pry off the front and rear plates.
- Be patient with this step, do not force the clips holding the plates together.

## Step 5

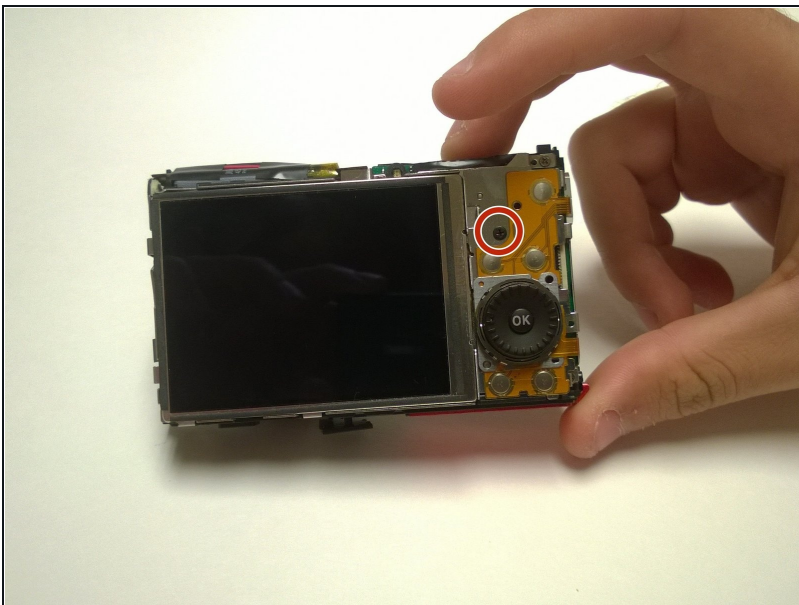

- Using a Phillips #00 screwdriver, remove the PH 2mm screw located to the right of the screen, above the OK dial.


## Step 6

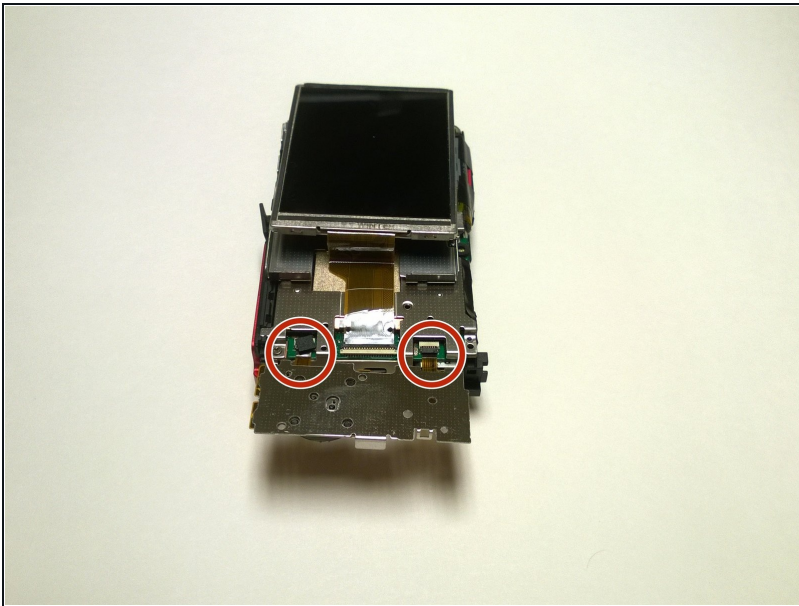

- Remove the two clasp using a plastic spudger

⚠ Be careful when removing the clasp to prevent ripping of the clasp


## Step 7

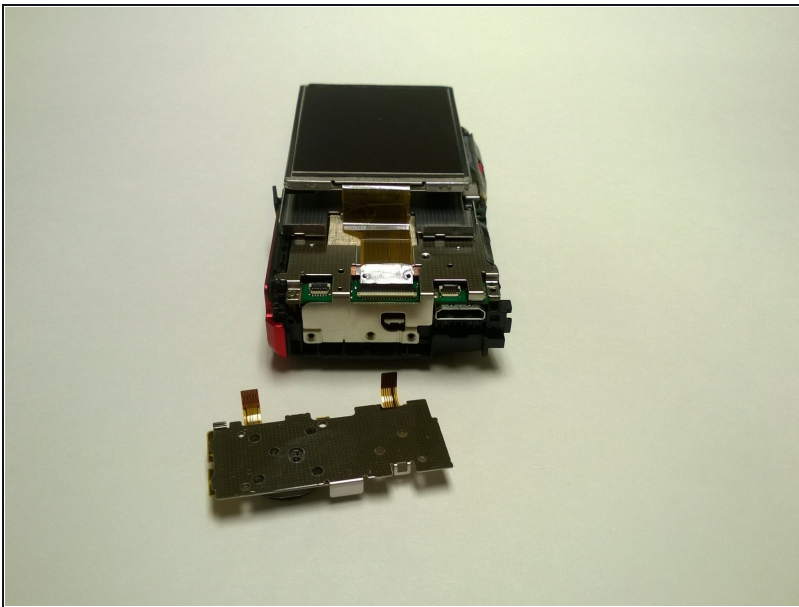

- You may now remove the internal panel of the buttons



## Step 8 — Display



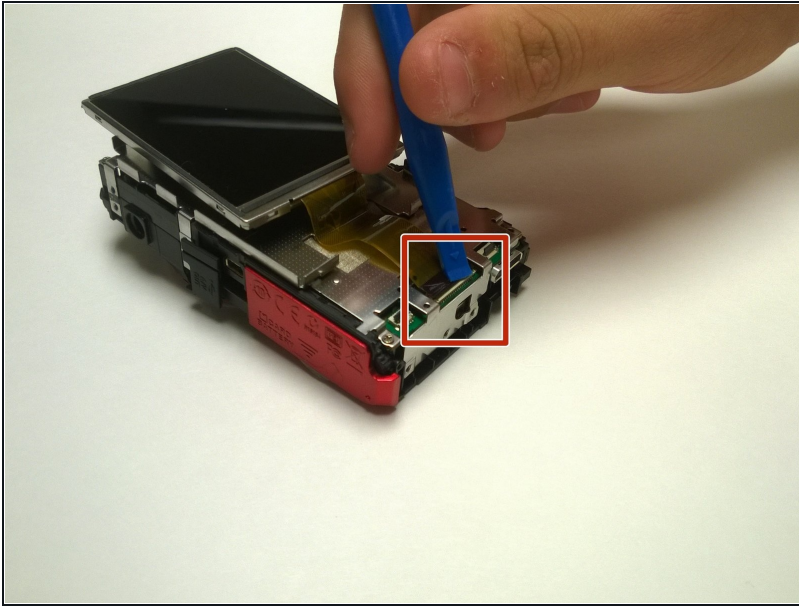


- Remove the clasp from the ribbon cable using the plastic spudger.

⚠ Make sure to be gentle when removing the clasp to prevent it from ripping.




- You may now remove the display.

## Step 9 — Polarizing Lens

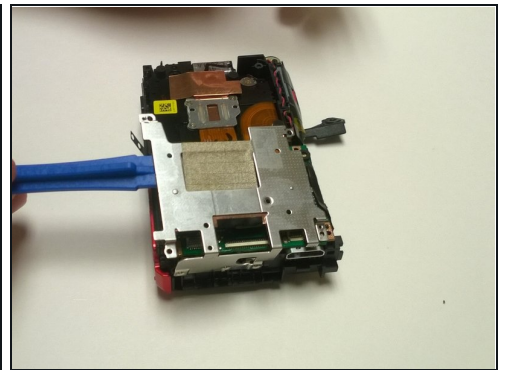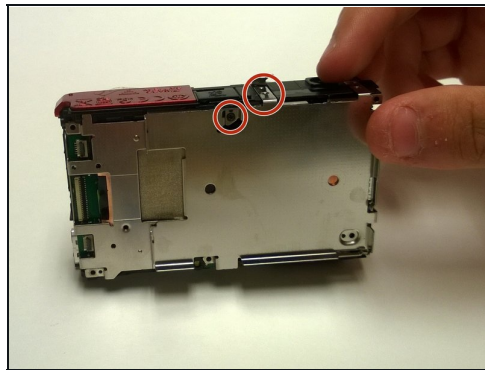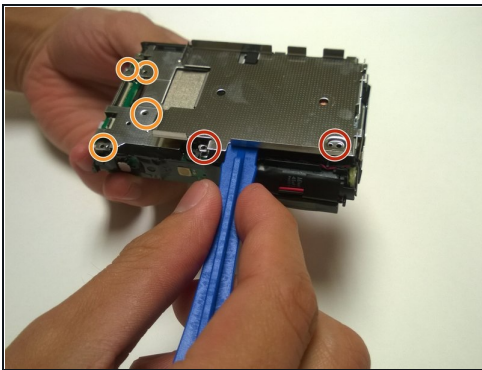



- Remove the four PH00 2.5 mm screws around the edges of the display plate.
- Remove the three PH00 2 mm screws from the sides of the buttons plate and the 2.5 mm screw from the center of the buttons plate.
- Lift the buttons plate out of the camera with the plastic tool.
- Lift the display plate out of the camera with the plastic tool.

## Step 10

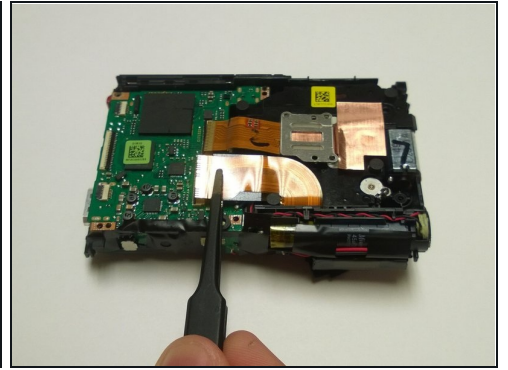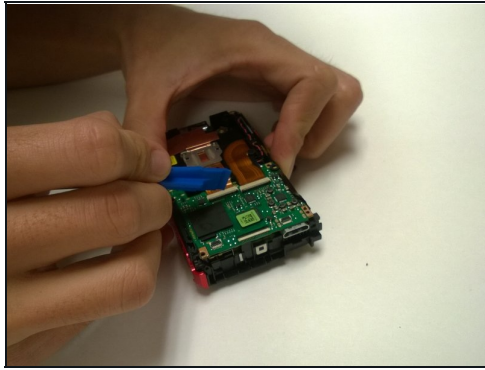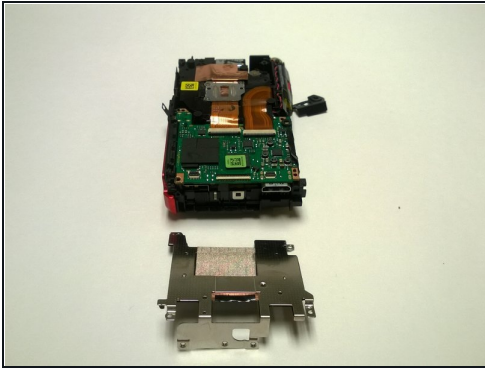



- Use the plastic opening tool to gently flip the white folders at the end of the ribbon cables.
- Use this [tweezers](#) to gently pull the cables out of the holders.
- Lift the lens apparatus out of the rest of the camera by pushing the front of lens up from the bottom.

## Step 11

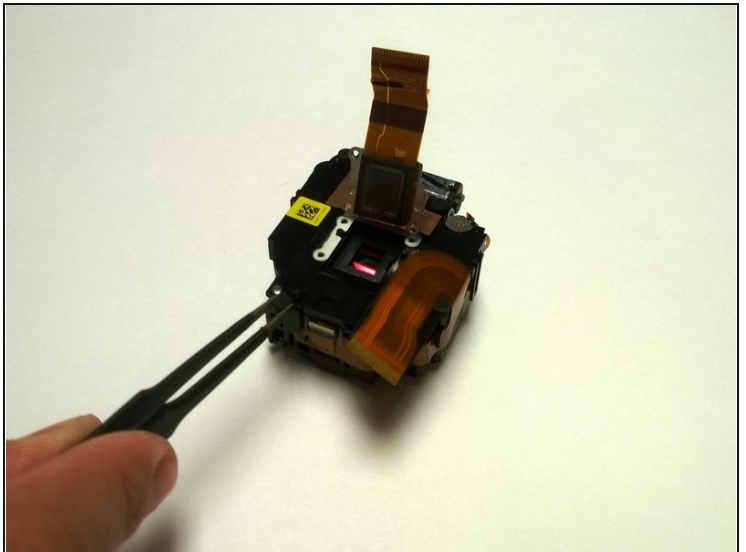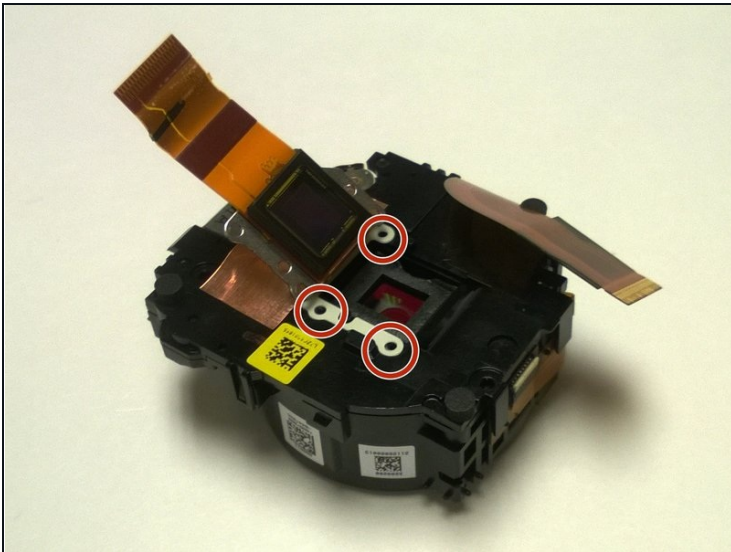

- Use the plastic opening tool to flip the two white clips holding the ribbon cables.
- Use tweezers to pull the cables from clamps.
- Use the PH00 screwdriver to remove the three 2 mm screws around the first lens area.

## Step 12

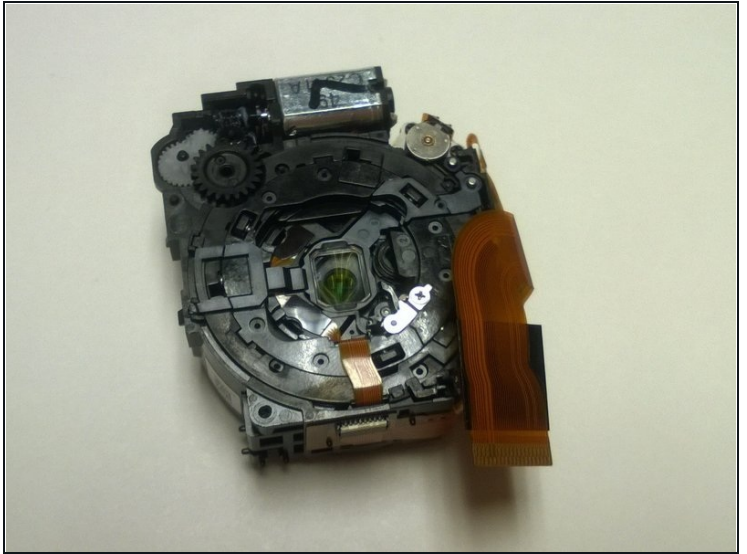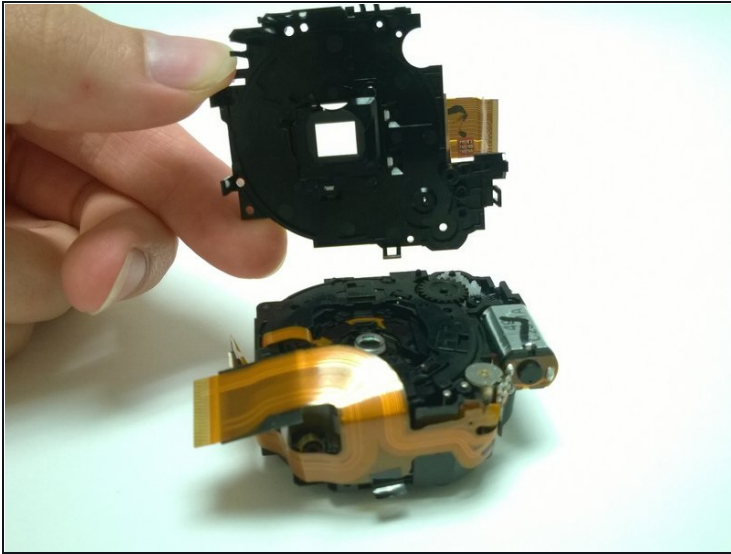

- Lift the first lens from the rest of the lens apparatus.
  - Use thin tweezers to lift and remove the polarizing lens from the apparatus.
- 

To reassemble your device, follow these instructions in reverse order.