



# Drift HD 720 LCD Screen Replacement

Replacing the screen of your Drift HD 720 can get your device back to normal if the screen is malfunctioning.

Written By: Hector Rodriquez



## INTRODUCTION

If your device seems to be turning on but the screen isn't displaying anything, you may be able to fix the issue by replacing the screen.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [replacement LCD screen](#) (1)

## Step 1 — Battery



- Unscrew the back plate counterclockwise until it comes off.

## Step 2



- Push the black battery tab next to the battery to get the battery out.
- Remove the battery.

### Step 3 — LCD Screen



- Remove six 8mm long Philips head screws with the J0 Philips head from the outer case.

### Step 4




- Remove the back case from camera body.

## Step 5



- Carefully remove the battery housing from the camera body.

## Step 6

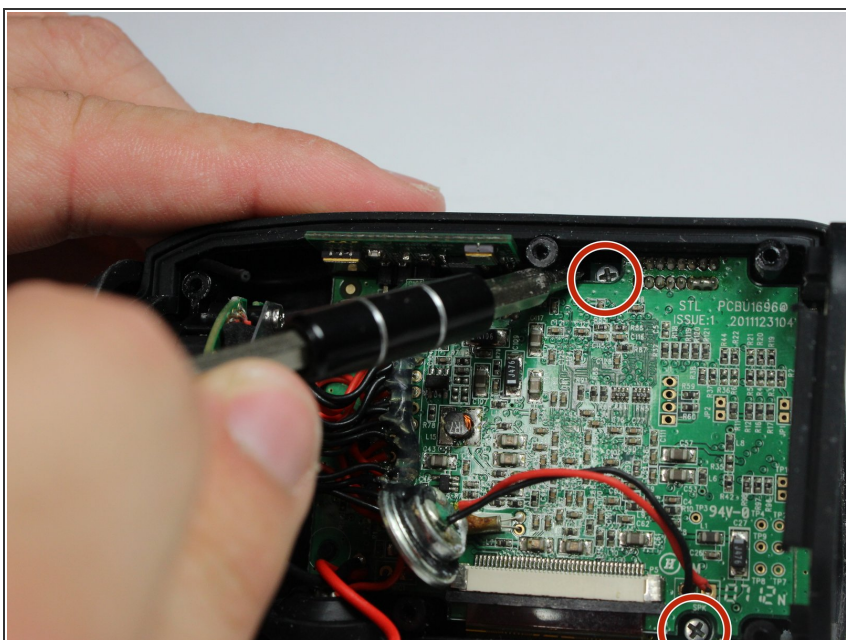

- Use J0 Phillips head to remove two 6mm long Phillips head screws from the motherboard.

## Step 7




- Remove the motherboard (green) from the front case housing.

## Step 8




- Use the J0 Phillips head screws to remove two 5mm long Phillips head screws from the plastic bracket holding LCD in place.

## Step 9

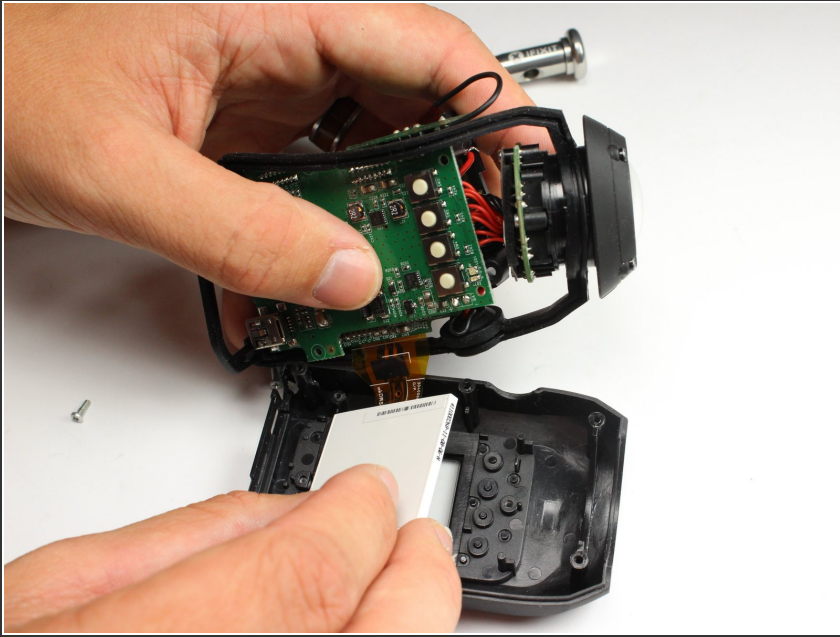


- Remove the LCD screen from the front cover.

## Step 10

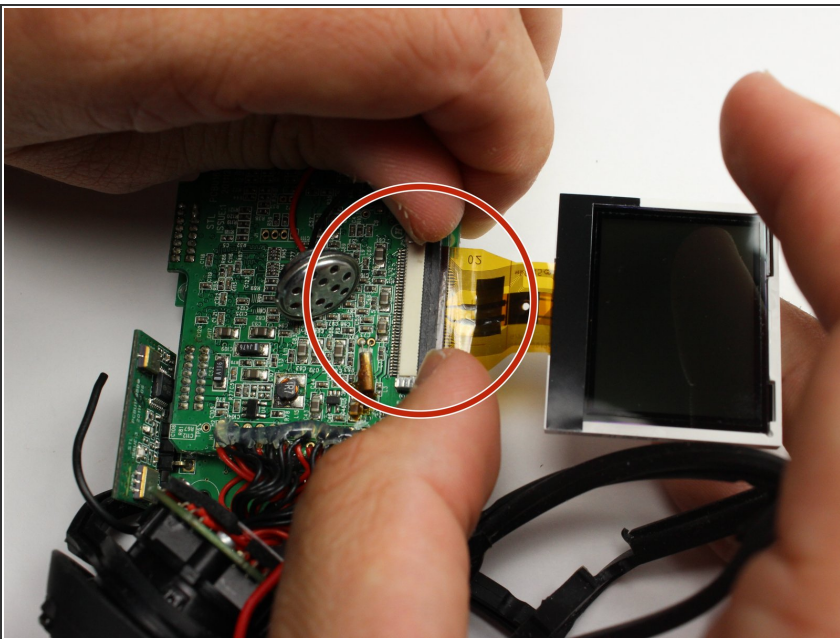

- Slide the black bar toward the LCD screen in order to remove the screen from slot.

## Step 11

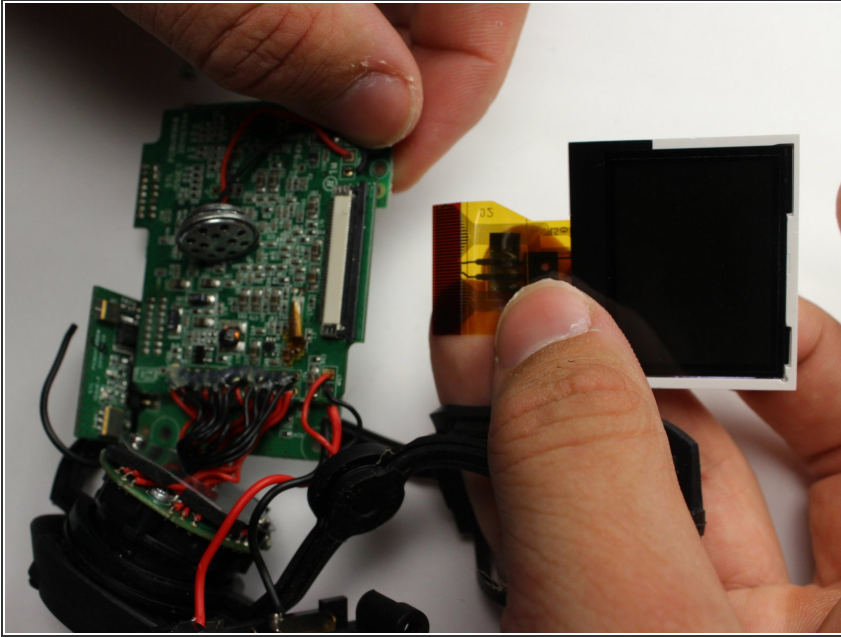

- Remove the LCD from motherboard.

To reassemble your device, follow these instructions in reverse order.