


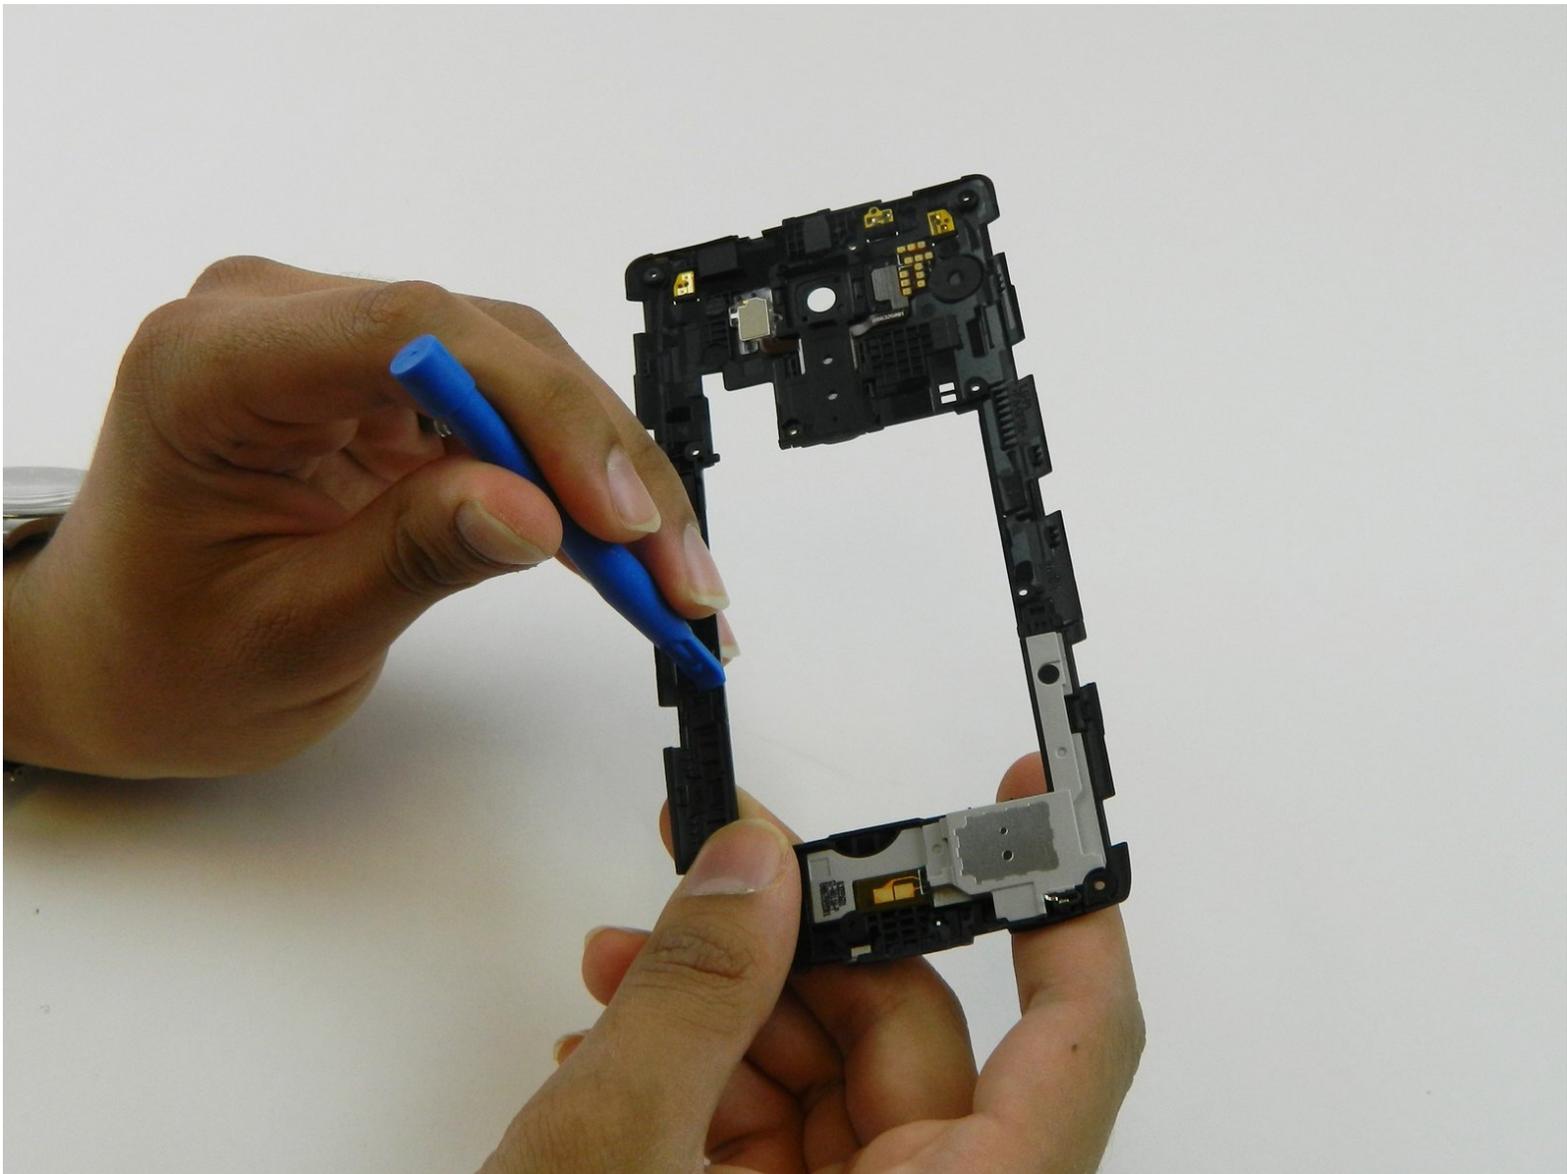

LG G4 Speaker Replacement

If you are experiencing audio problems and you have concluded that your speaker is the source of the issue. This guide will walk you through replacing it.

Written By: carolinavind



INTRODUCTION

This guide will show you how to change the speaker.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [LG G4 \(Sprint\) Speaker Assembly](#) (1)
- [LG G4 \(AT&T\) Speaker Assembly](#) (1)
- [LG G4 Midframe \(Sprint\)](#) (1)

Step 1 — Back Cover

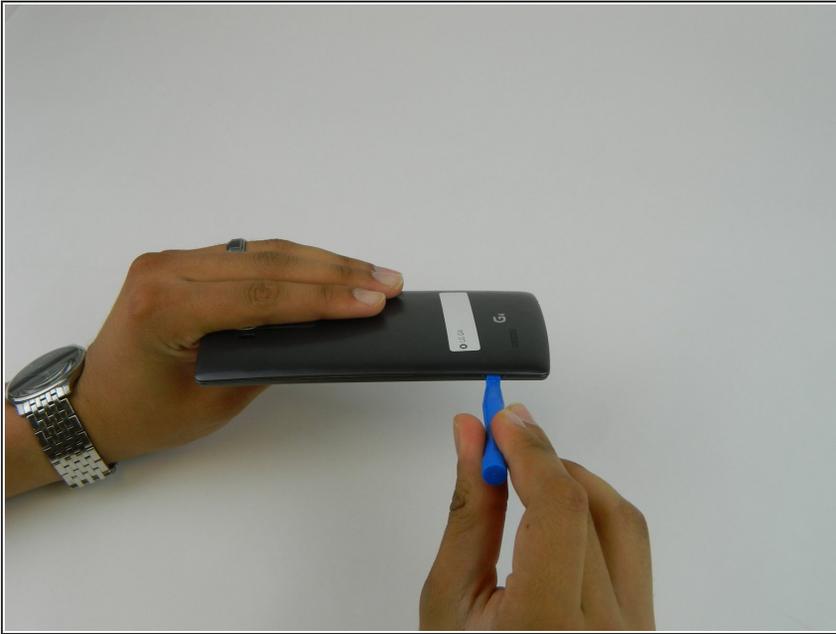


- ⚠ Make sure the phone is powered off.
- Remove the rear cover by placing the plastic opening tool in the groove on the bottom left side of the LG G4 and gently prying up.

Step 2




- Place the plastic opening tool at the bottom edge of the battery and lift up. Carefully remove battery with your hands.

Step 3

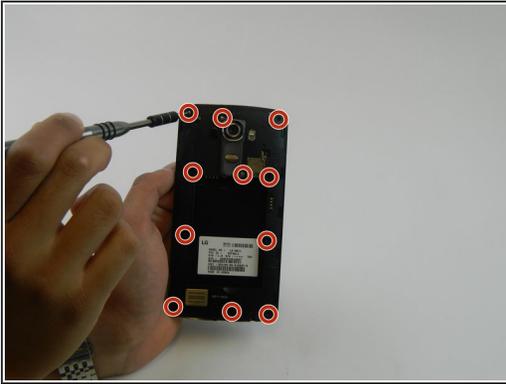



- Remove the **eleven** 3.9 mm Phillips #00 screws found at the back of the phone.

Step 4

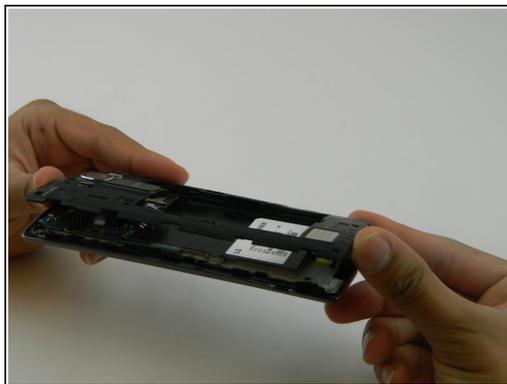

- Once all the screws have been removed, place the plastic opening tool in the lower left corner and firmly lift the cover up.
- Detach the cover with your fingers

Step 5 — Speaker

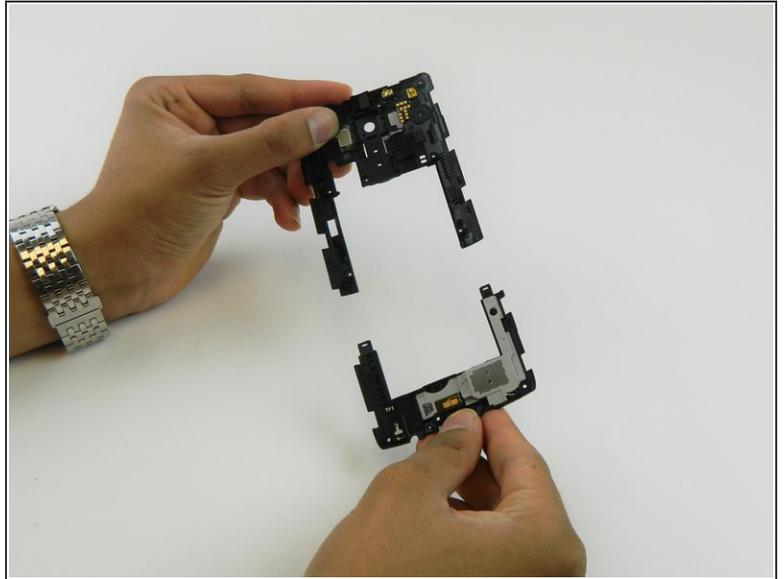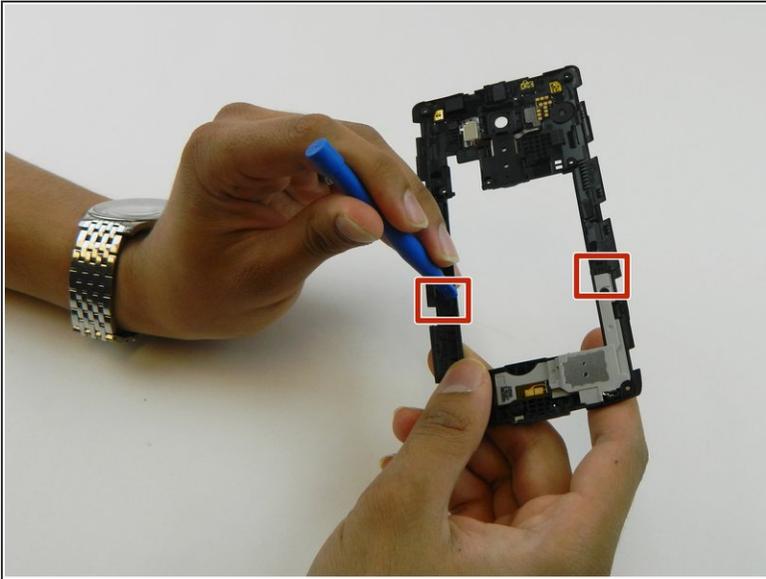

- Detach the bottom portion of the plastic panel you just removed by wedging the plastic opening tool under the top part of the clip, and sliding the bottom portion of the panel downward away from the top portion.
- ⓘ The bottom portion of the plastic panel contains the speaker to be replaced, all as one part.

To reassemble your device, follow these instructions in reverse order.