


How to Repair the Electrical Connections on a Little Tikes Motorized Bubble Mower.

Reattaching electrical wires on a Little Tikes Motorized Bubble Mower.

Written By: John Hiller

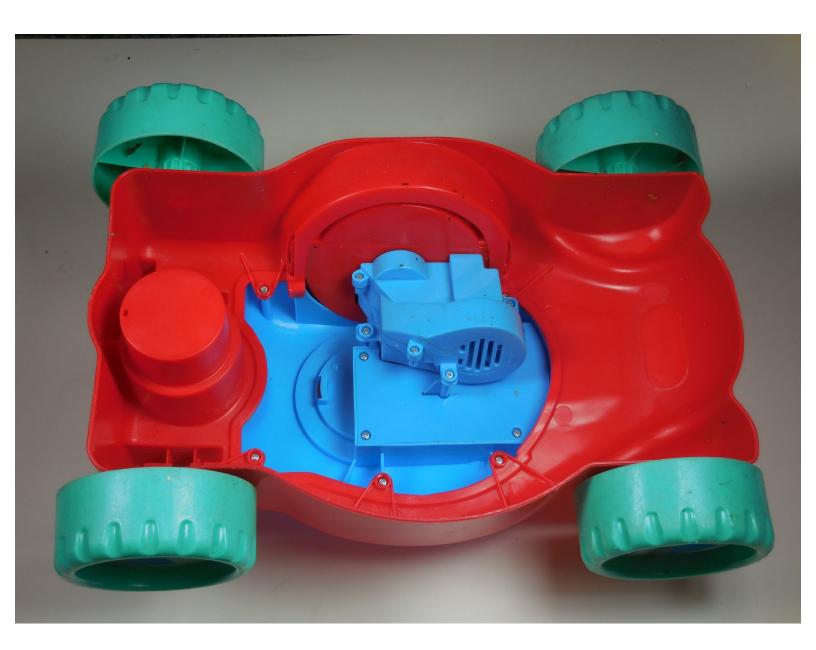

This document was generated on 2020-11-28 04:44:20 AM (MST).

INTRODUCTION


Using this guide you can fix this toy in 15-20 minutes without having to buy a new one. There are several tools you will need to fix this Little Tikes Bubble Mower. You will need a Philips screw driver size PH1, and a soldering tool. (If you don't know how to solder, look at iFixit's How to Solder and Desolder connections.)



TOOLS:

- Soldering Iron (1)
- Phillips #1 Screwdriver (1)
- Phillips #2 Screwdriver (1)

Step 1 — How to Repair the Electrical Connections on a Little Tikes Motorized Bubble Mower.

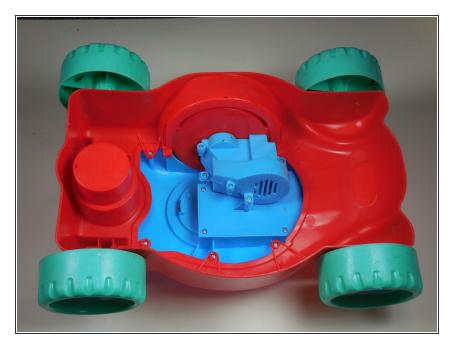

Start with a flat, open space to work.

Step 2






Unscrew these three 1.2 mm screws.



 Remove the Bubble Sprocket from the motor.

Step 4

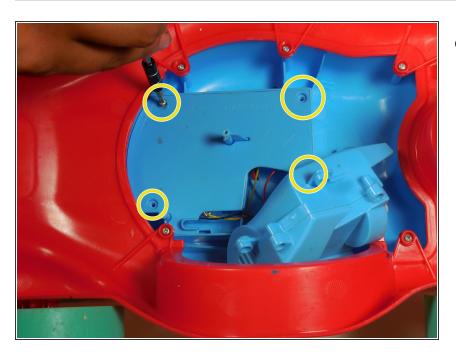


 Unscrew these four 1.2mm screws holding the plate on.



Remove the plate.

Step 6

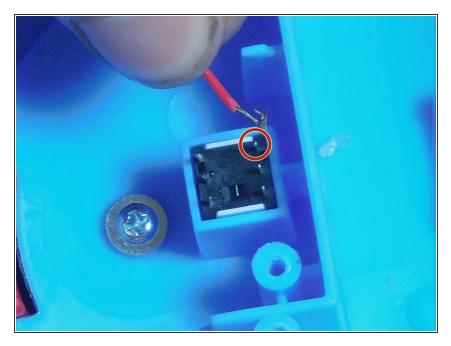


 Connect the red wire to the top right pin.




- Solder the Red wire to the metal pin.
- (Warning Soldering is very hot!)

Step 8

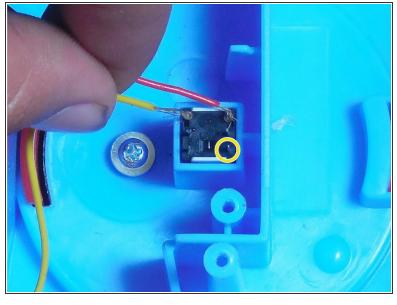




- Connect the yellow wire to the bottom right pin.
- Solder the yellow wire to the bottom right pin.
- (Warning Soldering iron is very hot!)

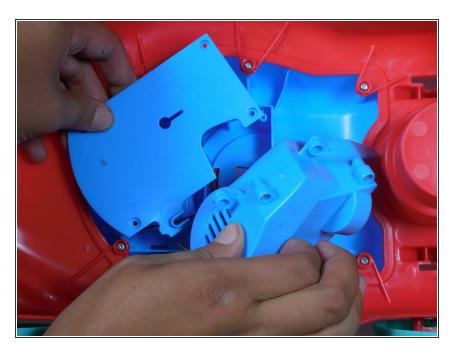

Replace the plate over the wires.

Step 10

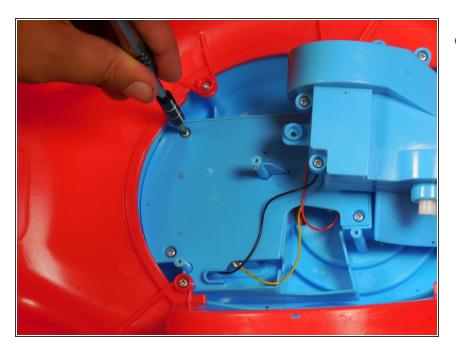

 Put four 1.2 mm screws for the plate back into place.



 Put three 1.2mm screws for the motor back into place.

Step 12



Insert the Bubble sprocket onto the motor.



You are now finished!