



DigiLand DL801W Microphone Replacement

This guide will help you replace the microphone on the DigiLand DL801W.

Written By: Travis Mangum



INTRODUCTION

This guide will walk you through the process of replacing your DigiLand DL801W microphone. Be careful as you complete the steps listed in this guide. If a component is not coming out smoothly, make sure that all screws that need to be removed were removed.

Note: Light soldering is required for successful repair of the microphone of the DigiLand DL801W.



TOOLS:


- [Soldering Workstation](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Microphone



- ⚠ Please be aware that removing the back panel from the tablet could cause damage to the back or front panel.
- ⓘ Before opening your DigiLand Tablet, ensure that the MicroSD card is removed.
- Hold the tablet in one hand (not your primary hand) so that the bottom edge of the tablet is facing you and the back of the tablet is facing up.
- Using a blue plastic opening tool, gently insert the tool between the back panel and the main body.
- Going around the edge of the tablet, gently pry open the back panel. As you go around, you will hear a click.

Step 2

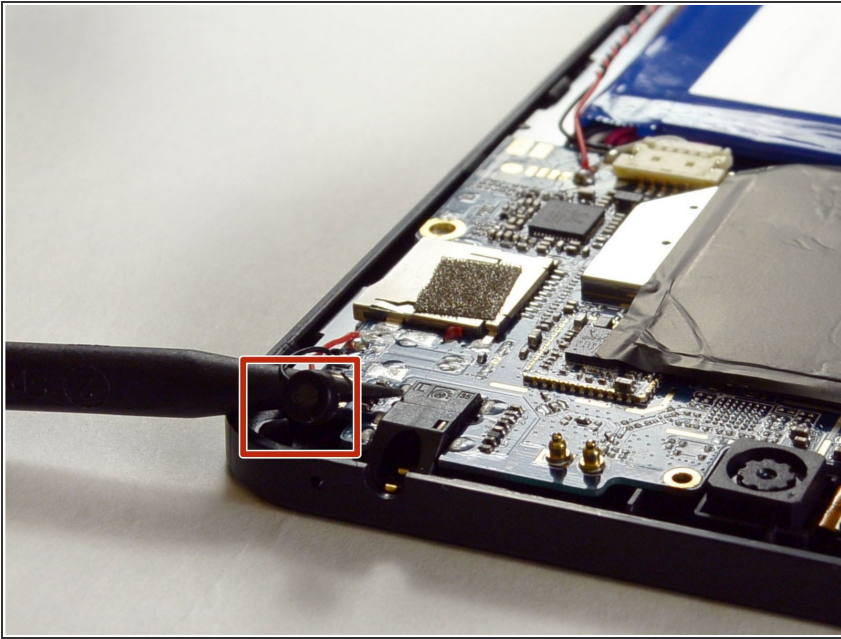

- Using the black spudger, insert the point underneath the red and black wires. Gently lift the microphone out of its socket.
- Where the red and black wires connect to the motherboard, use a soldering iron to remove the defective microphone.
- ★ If you have removed the microphone and cannot remember which wire went where, don't worry. The wire terminals on the motherboard are marked with a " + " and " - " sign.

To reassemble your device, follow these instructions in reverse order.