



Asus Chromebook C300M Battery Replacement

This repair guide will show you step-by-step...

Written By: Jake Van Loon



INTRODUCTION

This repair guide will show you step-by-step how to remove the back casing on your Chromebook and affectively remove your battery to replace it. The process is very simple and will take you around 20 minutes to complete.

TOOLS:

[64 Bit Driver Kit](#) (1)
[iFixit Opening Tool](#) (1)

PARTS:

[ASUS Chromebook C300MA Battery](#) (1)

Step 1 — Bottom Panel



- Flip the Chromebook over, bottom-side up.

Step 2



- Remove the screws from the 11 spots using the aluminum driver with the J00 Philips head provided in iFixit toolkit.
- Remove the eight 9.0mm Philips screws along the perimeter of the case.
- Remove the three 6.0mm Philips screws from the center of the case.
- ⓘ Some versions may instead have six bigger screws (the four on the upper side of the image, close to the hinge, and two on the sides) and five smaller ones (four at the bottom of the image, where the laptop is thinner, and one in the center).

Step 3




- Using a plastic opening tool, work around the Chromebook separating the plastic case at the seam.

Step 4



- Open the Chromebook at hinges.

Step 5 — Battery

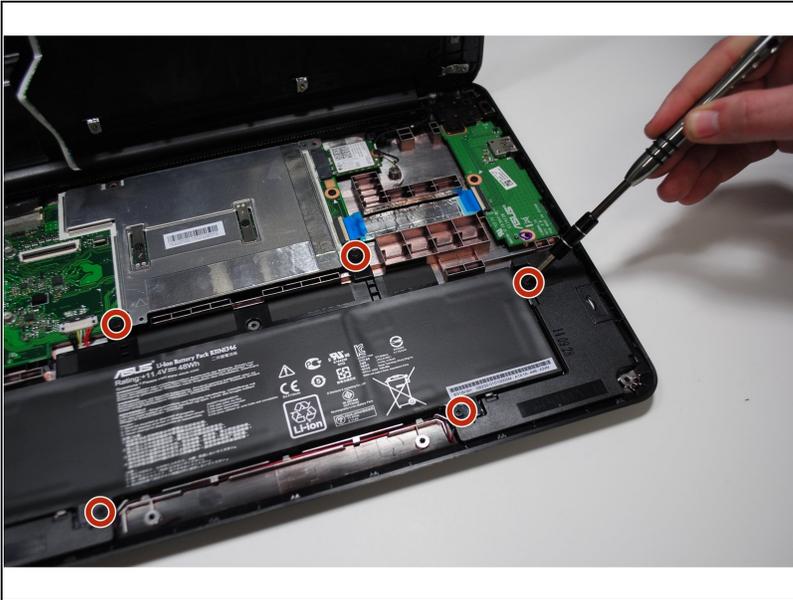

- Remove the 6.0mm Philips screws from around the battery. Make sure to disconnect the battery from the motherboard.

Step 6



- Lift the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.