



Jazz UltraTab C1059-HL Camera Replacement

Follow this guide to remove and replace your dysfunctional Jazz UltraTab camera.

Written By: Tim Poe



INTRODUCTION

Follow this guide to effectively remove and replace the camera of Jazz UltraTab. The procedure takes 20-30 minutes. However, if the guide is followed accurately, the task will be accomplished with minimal damage to the device.

TOOLS:

 
- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Camera



- First step is to remove the screws. You can find the screws on top and bottom edge of the device.

Step 2

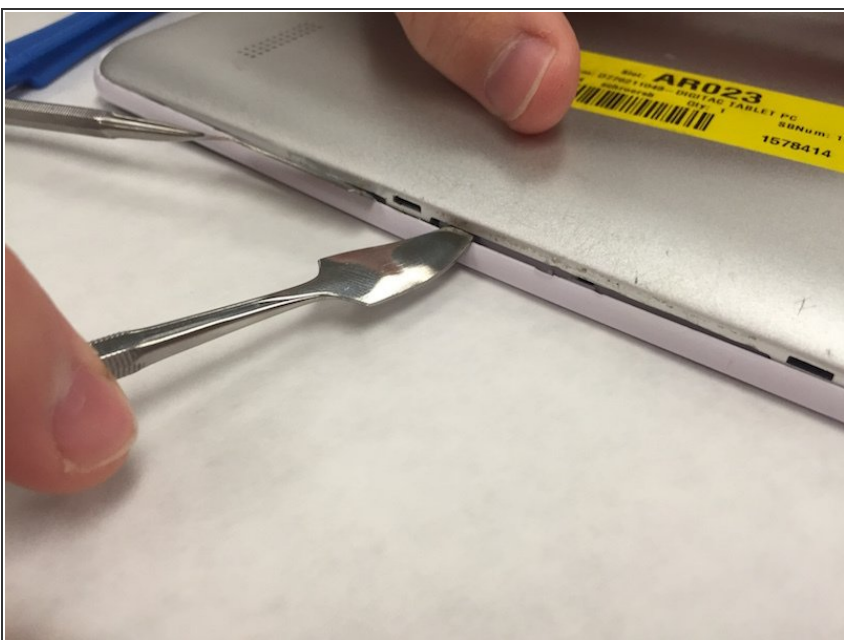


- Remove the back panel of the device using an opening tool.

Step 3



- Upon removing the back panel, place the device screen down on the table.

 Step 4

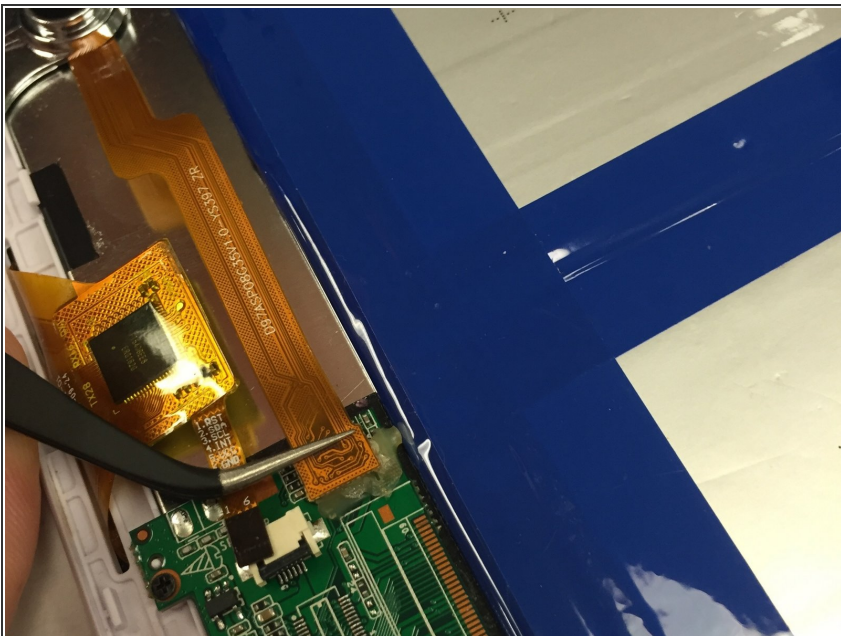

- There are two screws holding the camera. Remove them.
- The next step is to lift the Touch Screen Digitizer (the black piece).
- Slide out the Data Strip.
- Detach the camera, and remove it.
- Replace the camera, and reassemble.

To reassemble your device, follow these instructions in reverse order.