



# Roku 2 Remote Control Buttons Replacement

If you replace the batteries on your Roku 2...

Written By: Alex Saltos



# INTRODUCTION

If you replace the batteries on your Roku 2 remote and it is still not operational the Dpad or the other buttons could be faulty. The Dpad on the remote is how you navigate the television. If this button falls off or is nonfunctional (i.e. not turning channels or letting you click on shows) the Roku remote may need a replacement Dpad. Follow the steps in this guide to replace these buttons.

---

## TOOLS:

[Phillips #000 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Remote Battery



- Turn over remote and press down on tab to remove.

## Step 2



- Remove batteries

## Step 3



- ☑ Place the new batteries into the remote. Make sure the positive terminal is facing the positive terminal of the slot. Similarly the negative terminal should be touching the negative terminal. If done right the batteries should be facing opposite directions of each other.
- ☑ Insert Roku tab back on to its slot.

## Step 4 — Remote Control Buttons



- After removing the batteries, use a #000 Phillips to remove the screw.

## Step 5 — Pry the remote open



- Use a plastic opening tool to pry open the remote.



## Step 6



- Continue along the top of the remote to lift it off the remote.

⚠ Lift the top of the remote off very carefully so that board doesn't fall.

## Step 7 — Replace the buttons



- Identify the buttons to be replaced and take them out.

---

To reassemble your device, follow these instructions in reverse order.

