

Asus X555LA-SI305041 Battery Replacement

This guide will give you step by step instructions to replacing the battery on the Asus X555LA laptop.

Written By: Garrett Doll




INTRODUCTION

This guide will step you through replacing the battery in the Asus X555LA.

F TOOLS:	PARTS:
 Phillips #0 Screwdriver (1) 	 Asus C21N1347 Replacement Battery
 iFixit Opening Tool (1) 	(1)

Step 1 — Keyboard Assembly

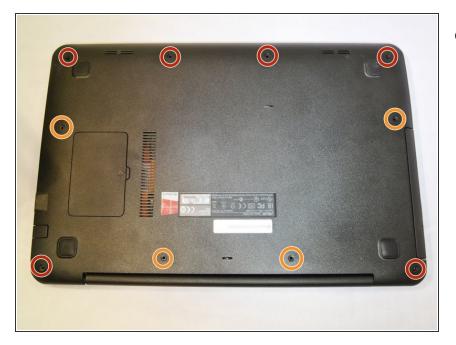


- Remove the following Phillips #0 screws from the lower case:
 - Six 9 mm screws
 - Four 11 mm screws

Step 2



- Use the plastic opening tool to separate the top cover from the laptop.
- Start by prying on the front of the laptop.
- Continue prying around the cover and end just under the screen to release the front cover.
- ▲ Do not fully remove the top cover, it is attached by two ribbon cables that will be disconnected in the following steps.

Step 3

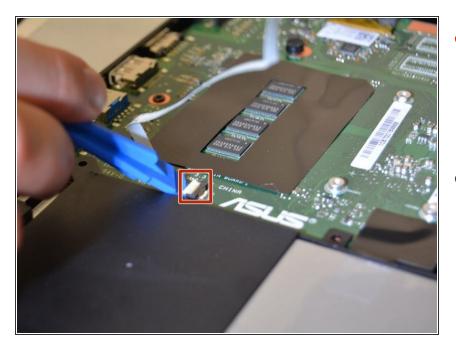

- To release the ZIF latch, flip up the small white tab.
 - (i) The connector may have a white base with a small grey rotating latch.
- Pull the white ribbon cable out of the socket to disconnect it.
 - (i) Very little force should be required to pull out the cable.

Step 4




- To release the ZIF latch on the keyboard cable, flip the grey rotating tab up.
- Gently pull the black and blue ribbon cable out of its connector.

Step 5



• You can now fully remove the keyboard and front panel to gain access to the inside of the laptop.

Step 6 — Battery

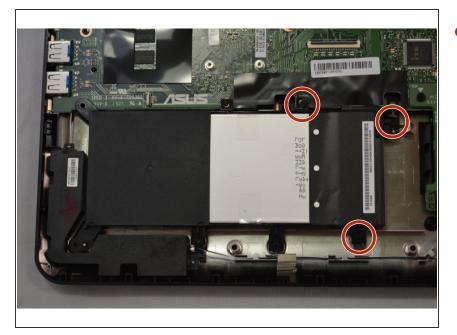

 Remove the three 5mm Phillips #0 screws securing the battery.

Step 7



- Gently remove battery from casing.
 The battery should remove easily.
- Replace with new battery.

To reassemble your device, follow these instructions in reverse order.