



# UnBranded UB-15MS10 Back Panel Replacement

How to replace a damaged or broken back panel

Written By: Andrea Hammans



---

# INTRODUCTION

The following steps show you the basics to opening up the device.



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-

## Step 1 — Back Panel




- Remove the cover over the Micro SD outlet by using a plastic opening tool to pry open and push out the cover panel.

## Step 2




- Remove the two 4-mm #0 screws from the inside of the Micro SD compartment.

## Step 3

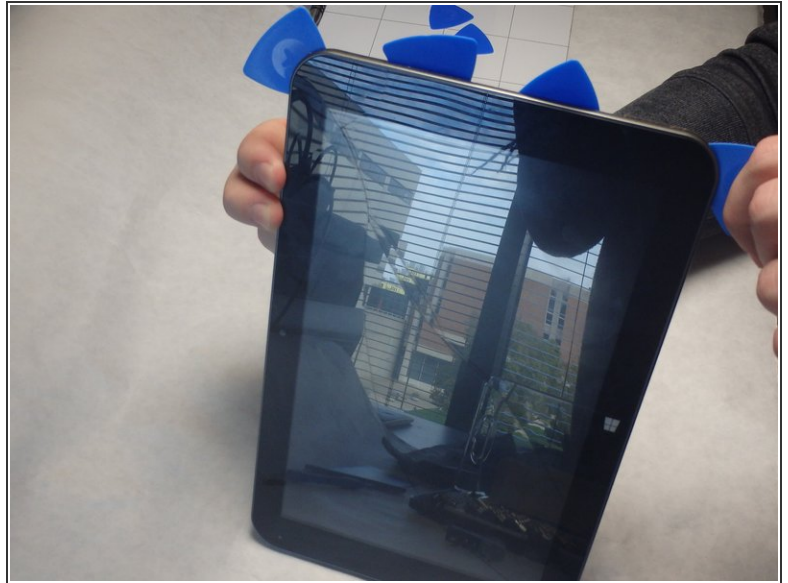

- Insert blue guitar picks in the crease between the top and bottom panels starting on the same end as the Micro SD slot.
- ⓘ Inserting the picks directly under the Micro SD compartment was the easiest place to get started. It still requires some force.

## Step 4

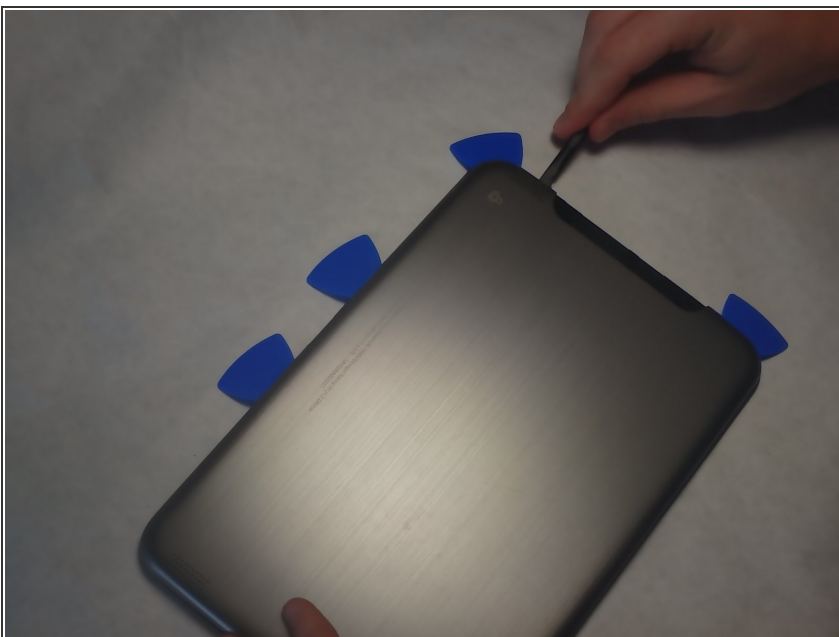

- Insert the black spudger between the guitar picks in order to pry open gaps between the blue guitar picks.
- As the gaps open, slide the guitar picks along the sides to separate the panels.



## Step 5



- Pry all four sides apart using the blue guitar picks and the black spudger until they can easily be pried apart by hand.

To reassemble your device, follow these instructions in reverse order.