



Philips Norelco MultiGroom 3100 Casing Replacement

Remove the casing of the trimmer.

Written By: ahaharevolution



INTRODUCTION

This guide will show you how to remove the casing in order to access the battery and motor.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Power Button



- Remove the comb from the top of the trimmer.

Step 2



- Grip the attachment and twist it counterclockwise until you hear a click.
- Pull the attachment up to remove it from the trimmer.

Step 3



- Hold the trimmer upright so it is facing you.
- Insert the plastic opening tool in the gap at the top of the power button.

Step 4



- Apply pressure to pry off the power button.

Step 5 — Casing



- Insert the spudger into the bottom of the gray bezel and begin to gently pry it off.
- ⓘ Separate the bezel one clip at a time so that the clips do not break.

Step 6



- Insert the spudger in the indicated hole and apply a tilting force to loosen the outer casing.
- Pull upward on the top of the inner housing to remove it from the outer casing.

To reassemble your device, follow these instructions in reverse order.