




Unbranded UB-15MS10 Back Camera Replacement

This guide explains how to replace the back camera on the Unbranded Tablet.

Written By: Jordan Turk

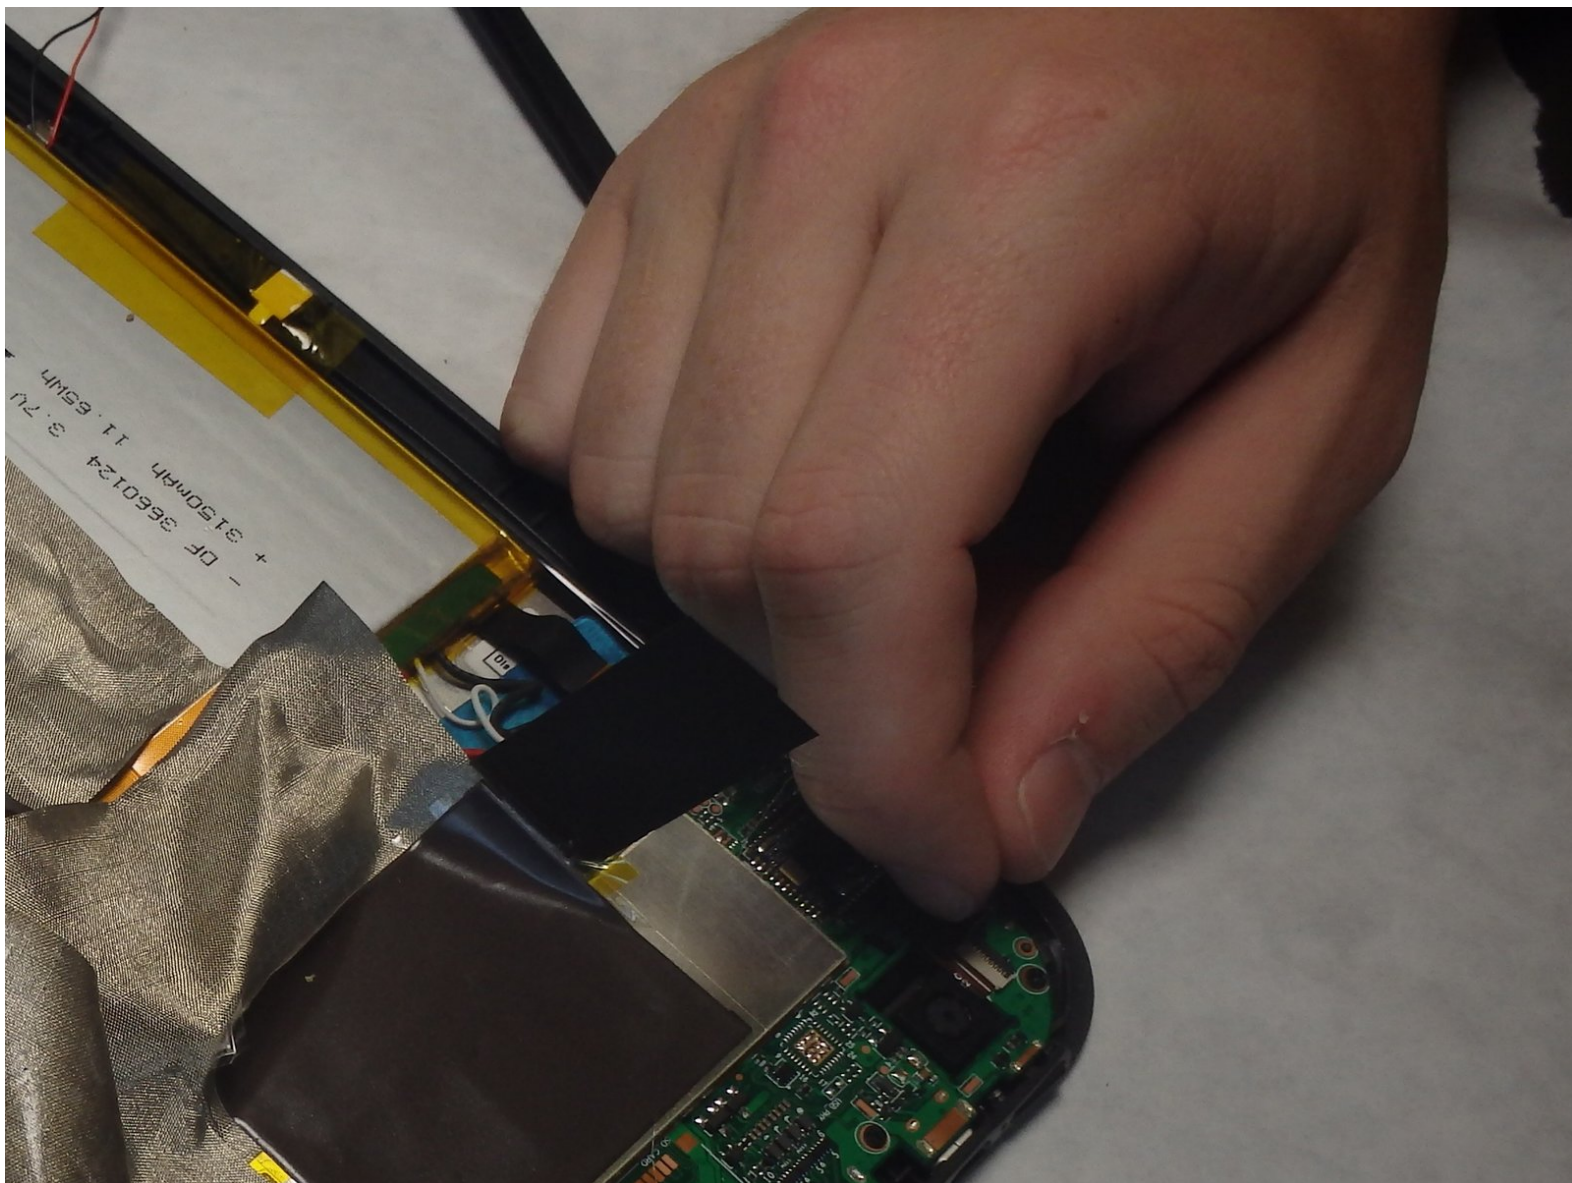

INTRODUCTION

This guide explains how to replace the back camera on the Unbranded Tablet.



TOOLS:

- [Tweezers](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Panel




- Remove the cover over the Micro SD outlet by using a plastic opening tool to pry open and push out the cover panel.

Step 2




- Remove the two 4-mm #0 screws from the inside of the Micro SD compartment.

Step 3

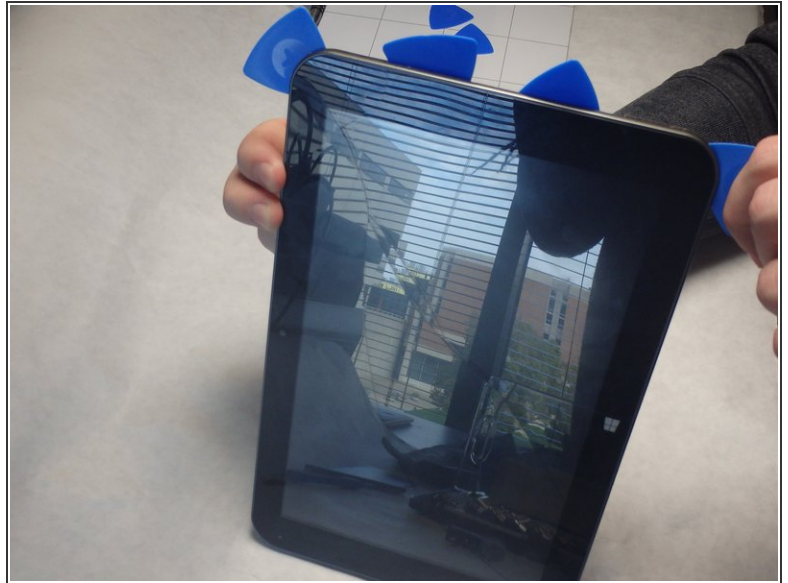

- Insert blue guitar picks in the crease between the top and bottom panels starting on the same end as the Micro SD slot.
- ⓘ Inserting the picks directly under the Micro SD compartment was the easiest place to get started. It still requires some force.

Step 4

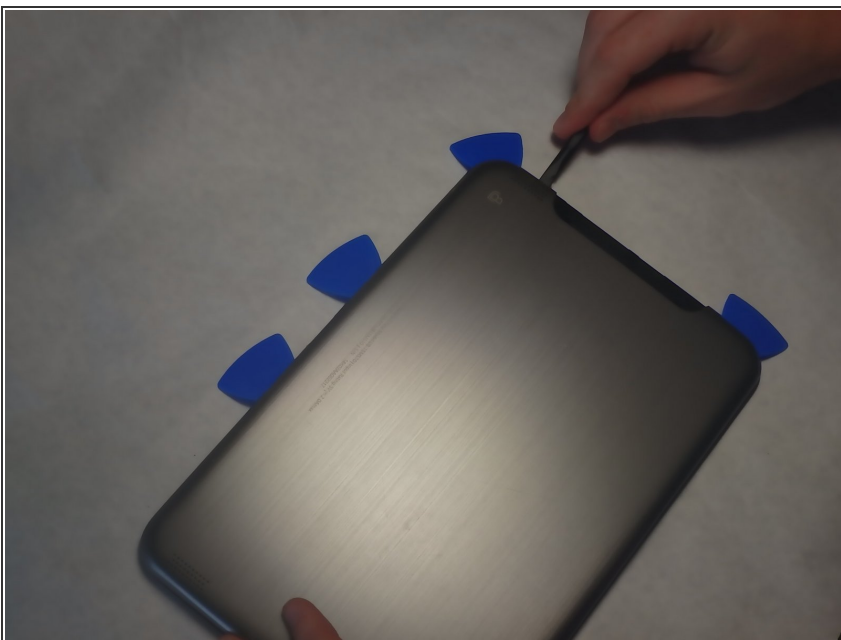


- Insert the black spudger between the guitar picks in order to pry open gaps between the blue guitar picks.
- As the gaps open, slide the guitar picks along the sides to separate the panels.

Step 5




- Pry all four sides apart using the blue guitar picks and the black spudger until they can easily be pried apart by hand.

Step 6 — Back Camera

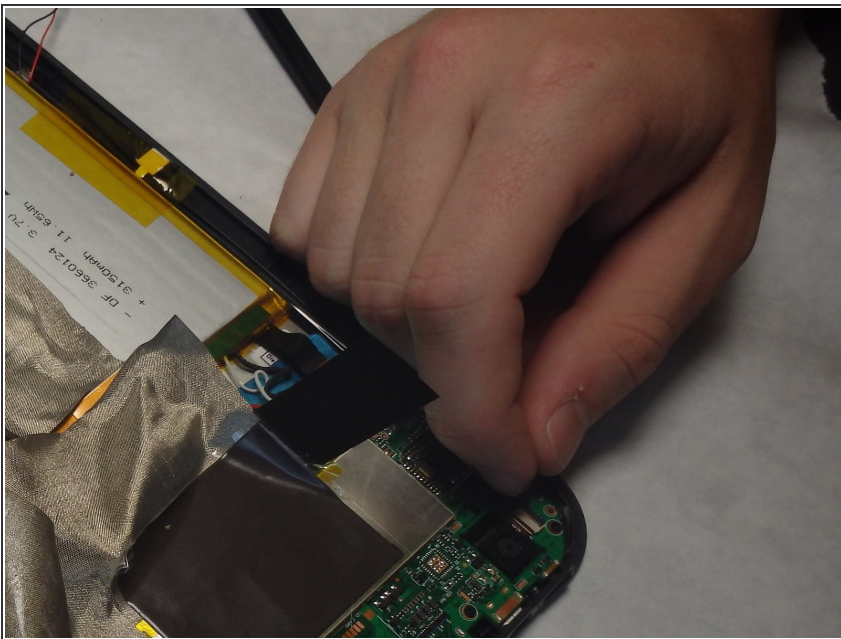


- Remove the small piece of black tape.

Step 7

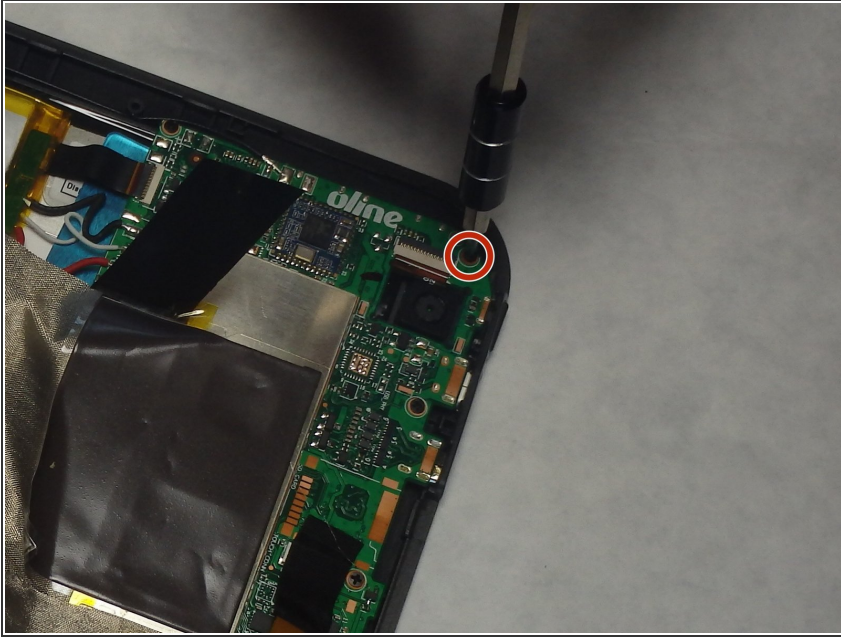

- Remove the black 4-mm #0 screw.

Step 8

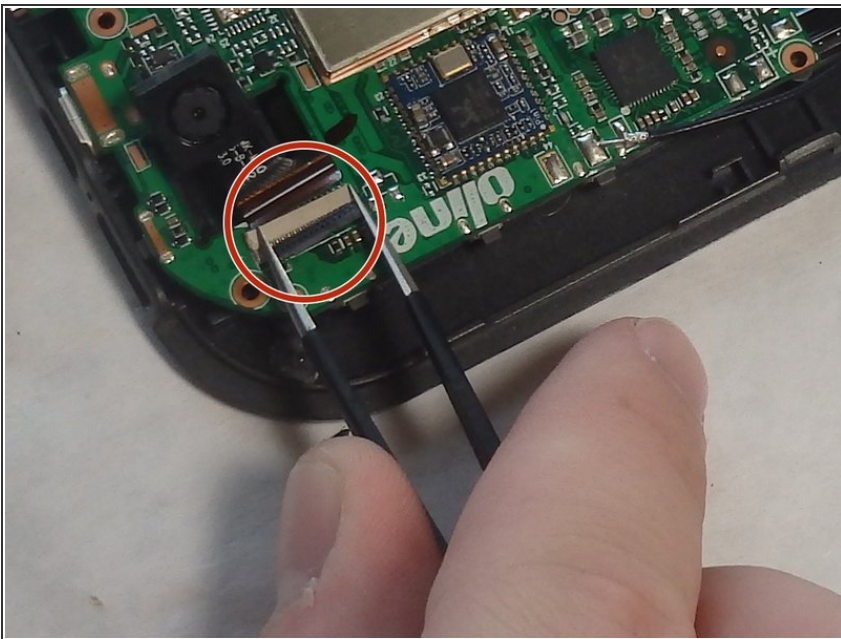

- To finish removing the camera, disconnect the camera ribbon from the white ZIF connector on the motherboard.
- ⓘ There are two very small prongs on the side which need to be pushed towards the center of the connector to remove it.

To reassemble your device, follow these instructions in reverse order.