

# iMac Intel 24" EMC 2111 Inverter Board Replacement

Replace the inverter board on your iMac Intel 24" EMC 2111.

Written By: Andrew Bookholt



This document was generated on 2020-11-28 02:11:09 AM (MST).

#### **INTRODUCTION**

Having display backlight issues? Use this guide to replace a blown inverter board.



# **TOOLS:**

- Phillips #1 Screwdriver (1)
- Spudger (1)
- T6 Torx Screwdriver (1)
- T8 Torx Screwdriver (1)

# Step 1 — Access Door



- Loosen the two Phillips screws securing the access door to your iMac.
- (i) Both screws remain captive within the access door.
- Remove the access door.

#### Step 2 — Front Bezel



- Remove the following screws along the lower edge of your iMac:
  - Three 6 mm T8 Torx screws
  - One 8 mm T8 Torx screw






- (i) Lay your iMac stand-side down on a flat surface.
- To lift the front bezel off the iMac, simultaneously:
  - Use your thumbs to press in the RAM arms and hold the iMac down.
  - Use your index fingers to pull the small bridge of material on the front bezel toward yourself.
  - Pull the front bezel up with your index fingers.
- Once the small bridge of material has cleared the RAM arms, lift the front bezel by its lower edge just enough to clear the bottom edge of the rear case.







- Lift the front bezel off the rear case and rotate it away from the bottom edge of the iMac, minding the camera and microphone cables still attached to its upper edge.
- The third picture shows the top front bezel brackets and their slots cut into the top edge of the iMac's rear case.
- ↑ Do not completely remove the front bezel, as it is still attached by the camera/microphone cables.

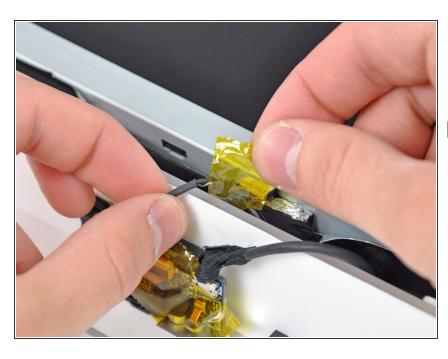

- i If necessary, remove the strip of tape covering the microphone cable connector.
- The microphone connector is located near the inside of top edge of your iMac.







- Disconnect the microphone cable.
- Disconnect the camera cable by pulling its connector away from the socket on the camera board.

↑ The camera cable connector and socket are delicate and easily bent. Remove with caution.

#### Step 7 — Display Assembly





Peel the two highlighted EMI shield tabs off the frame of the LCD.




 Remove the two T6 Torx screws securing the display data cable to the logic board.

# Step 9




 Pull the black plastic tab attached to the display data cable connector to disconnect it from the logic board.

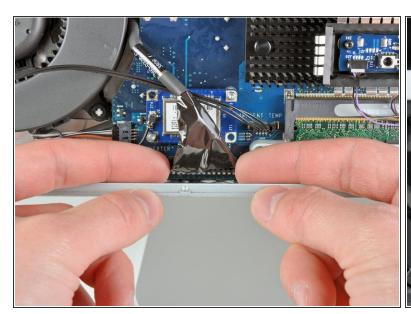



- Use your fingertips to pull both sides of the wide inverter cable connector out of its socket on the logic board.
- De-route the inverter cable from its location next to the CPU fan.

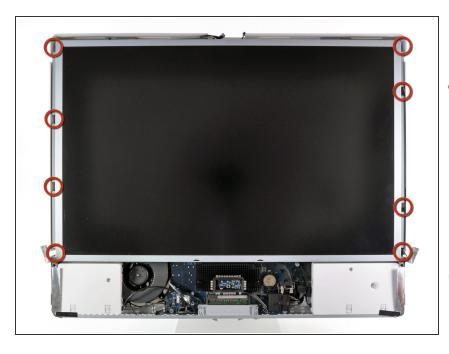

- ⚠ Before attempting this step, we recommend laying your iMac standside down on a table to avoid the display falling down.
- Remove the eight T8 Torx screws securing the display assembly to the rear case.
- it is helpful to use a thin magnetized screwdriver to remove these screws.




 Remove the display assembly from the iMac.

# Step 13 — Inverter Cable



 Remove the large piece of tape covering the inverter cable connector and any tape securing the cable to the inverter board.

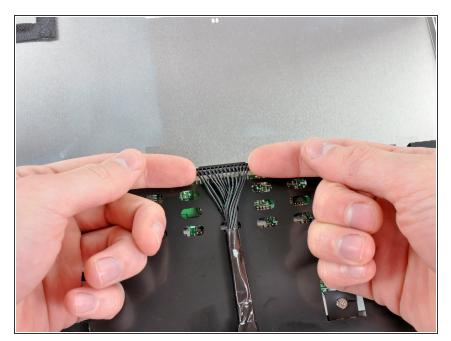

 Lift the inverter cable connector straight up from its socket on the inverter board.

# Step 15



 Remove the inverter cable from the LCD.

# Step 16 — Inverter Board




 Peel the strip of foam tape off the inverter board.

# Step 17



 Remove the large piece of black tape covering the side of the inverter board.

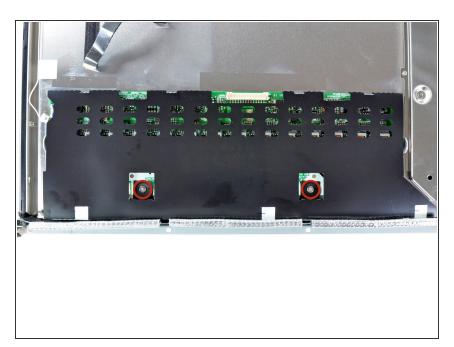


 Remove the two Phillips screws securing the inverter board to the back of the LCD.



- Carefully lift the black cover off the inverter board from the side closest to the edge of the LCD.
- Disconnect the seven locking connectors from the side of the inverter board.



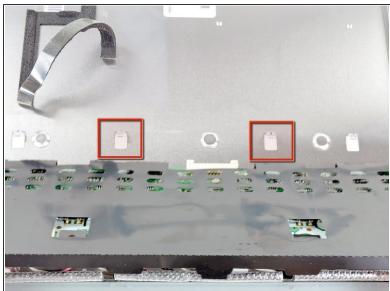

- Lift the inverter board off the LCD.
- When reinstalling the inverter board, be sure to push the board under the two tabs nearest the center of the LCD before lowering it down into place.

To reassemble your device, follow these instructions in reverse order.