



# Nikon COOLPIX P600 Tripod Mount Replacement

This guide provides thorough step-by-step...

Written By: Geronimo Gutierrez IV



# INTRODUCTION

This guide provides thorough step-by-step instructions that teach a user of the Nikon COOLPIX P600 how to replace the tripod mount.

---

## TOOLS:

[Essential Electronics Toolkit](#) (1)

---

### Step 1 — Tripod Mount



- Position the back of the camera facing you and open the LCD screen to the left.

## Step 2



- Use a Phillips screwdriver to unscrew the two 5.556 mm screws under the LCD screen.

## Step 3



- Use a Phillips screwdriver and remove the eleven 5.556 mm screws around the outside frame of the camera.



## Step 4



- Open the "HDMI" rubber flap.
- Use a Phillips screwdriver and remove the 5.556 mm screw underneath the flap.

## Step 5



- ① The flash button is located on the left side of the built-in flash compartment.
- Press the flash button (as shown) to access flash.


## Step 6



- Use a spudger to wedge underneath the flash
- Pry (up and down) to separate.

⚠ It is important to choose a tool that is ESD-safe to avoid accidental damage to the device. A black nylon spudger, or plastic opening tool, should be used whenever possible.


## Step 7

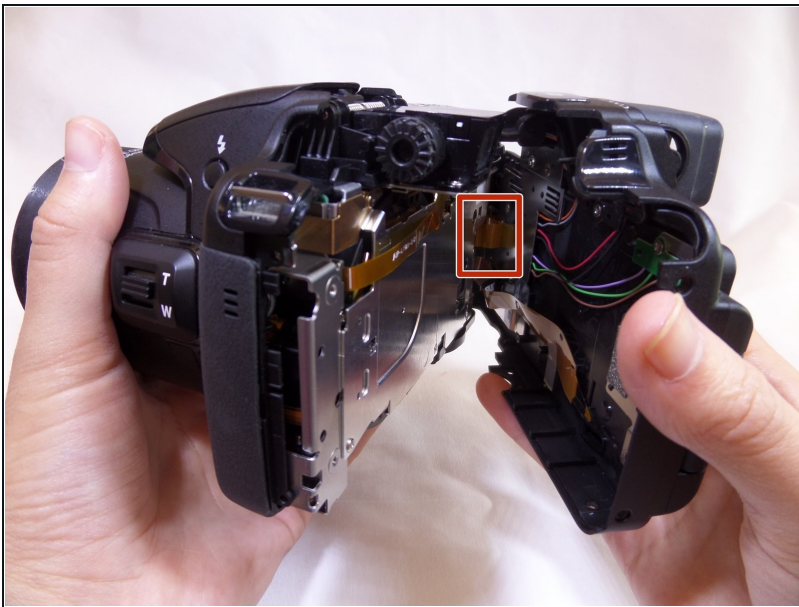

- Use your hands to gently pull the front and back of the camera apart.

⚠ Be careful not to damage the ribbon-wire shown in the red box.

## Step 8

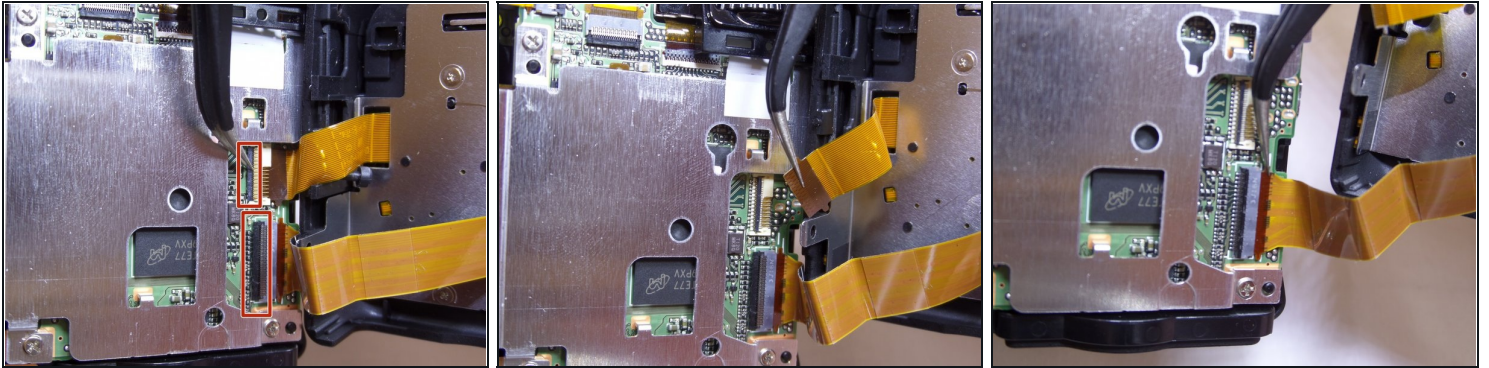


- Use needle-nose [tweezers](#) to gently lift the black/grey latch towards the ribbon-wire (the latch rotates upward to release and snaps down to lock).

⚠ Be careful not to break the latch. It cannot be replaced.

- Use tweezers to gently remove ribbon-wires.
- Pull the ribbon-wires towards the back-end of the camera.



## Step 9

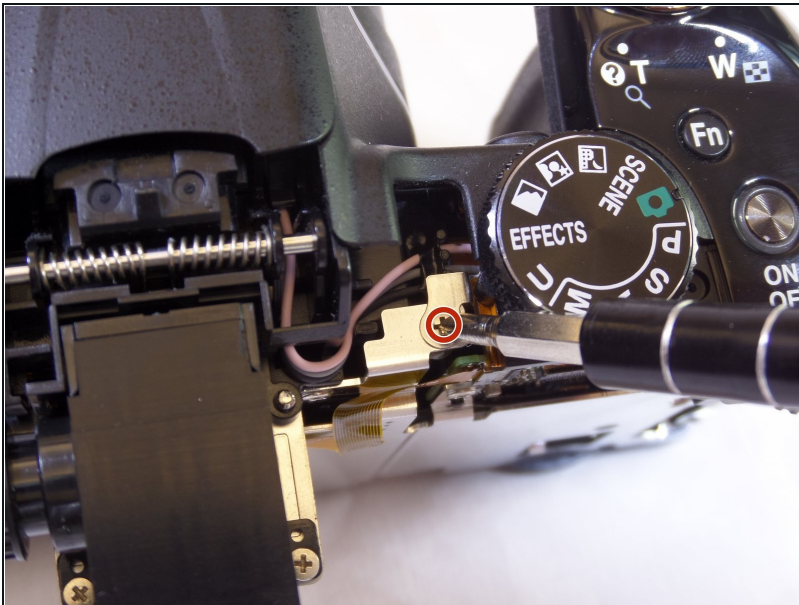

- Use a Phillips screwdriver and remove the single 6.350 mm screw, left of the mode-adjustment dial.



## Step 10

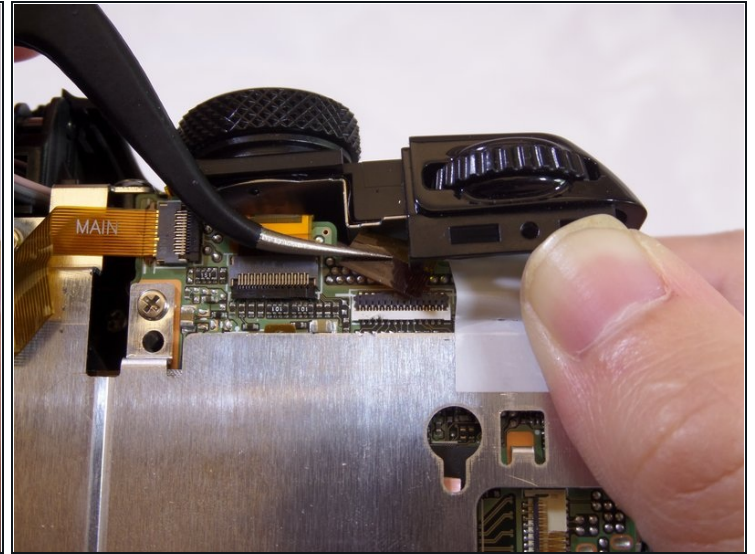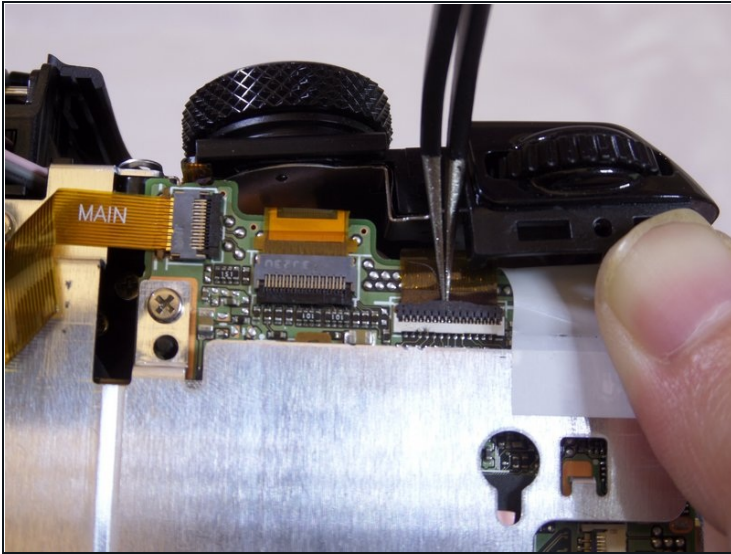

- Use needle-nose tweezers to remove the large ribbon-wire located under the screw.
- Gently wiggle the ribbon out in an upward motion.
- ① For easier access, you can push the black surface of the camera where the buttons and dials are located. Do not push too hard as this may break the plastic.

## Step 11




- Insert a plastic opening tool under the shutter button.
- Gently pry (back and forth) between the rubber grip and camera casing.

## Step 12



- Place hands around the camera. Hold onto the mode dial and grip under the shutter button.
- Gently push right thumb away and pull in left index finger to separate the camera halves.

## Step 13

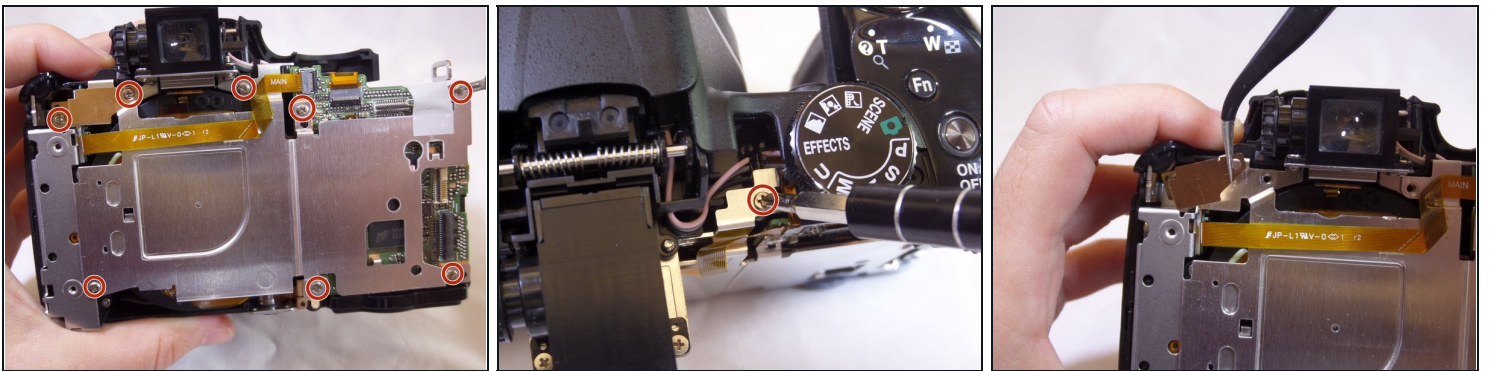

- Use a Phillips screwdriver to remove the nine 3.175 mm screws on the inside of the camera.
- Use tweezers to remove the golden bracket.




## Step 14




- Use tweezers to remove the white film under the shutter-release button.
- ⓘ This white film is a cover for the electrical components. The camera will not be affected if it rips or comes off completely.
- ⚠ Be careful: three high-discharge capacitor leads are located under this film, and can result in electric shock if touched.

## Step 15

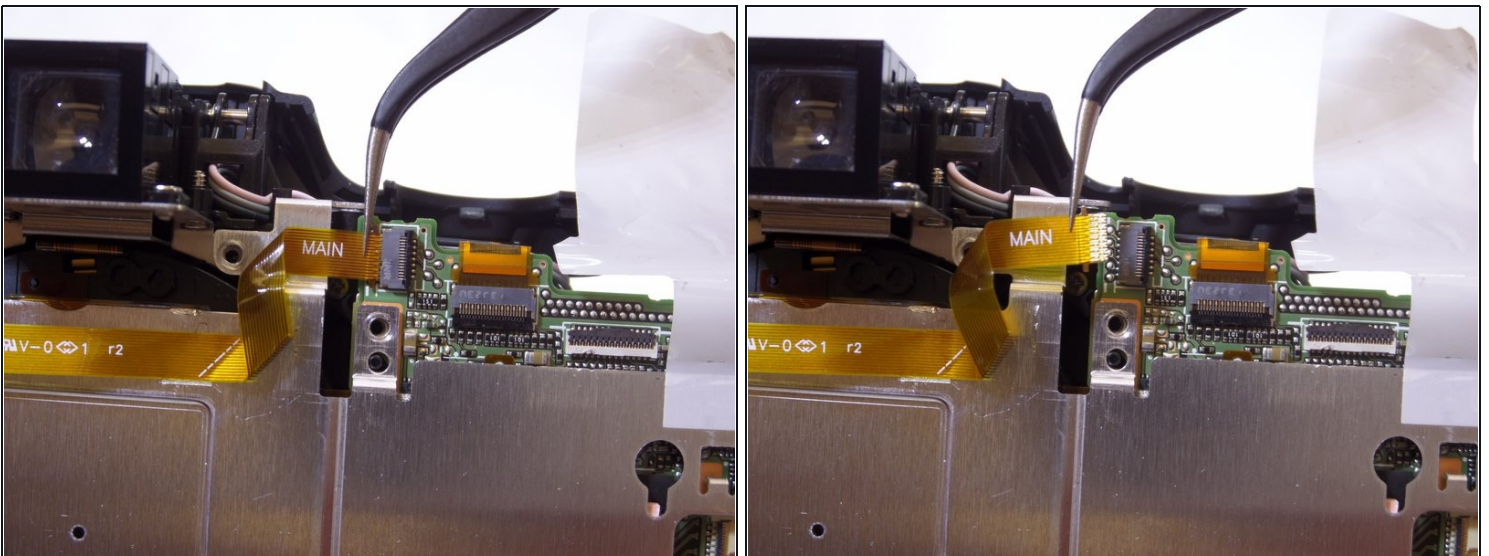


- Use tweezers to remove the yellow ribbon-wire.
- Gently wiggle it to the left and then out of its port.

## Step 16

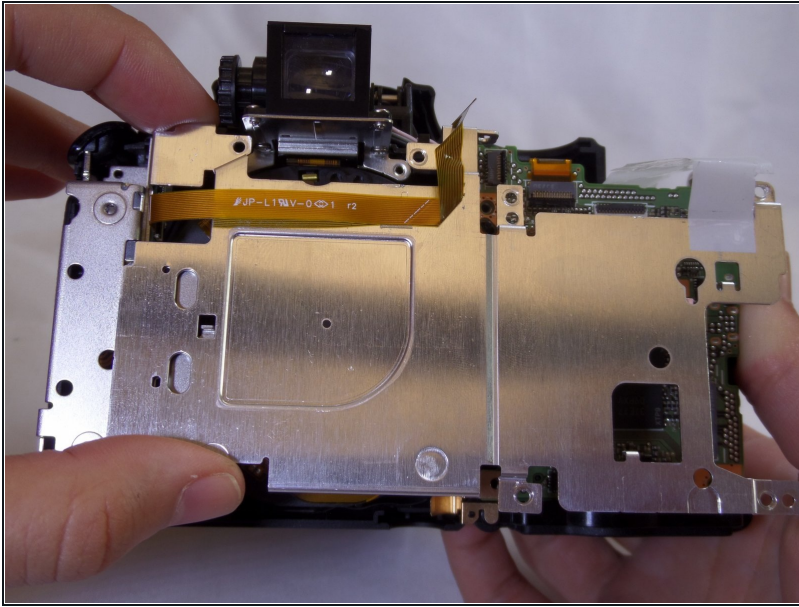


- Use hands to remove the metal cover.
- Pull the cover up.

## Step 17

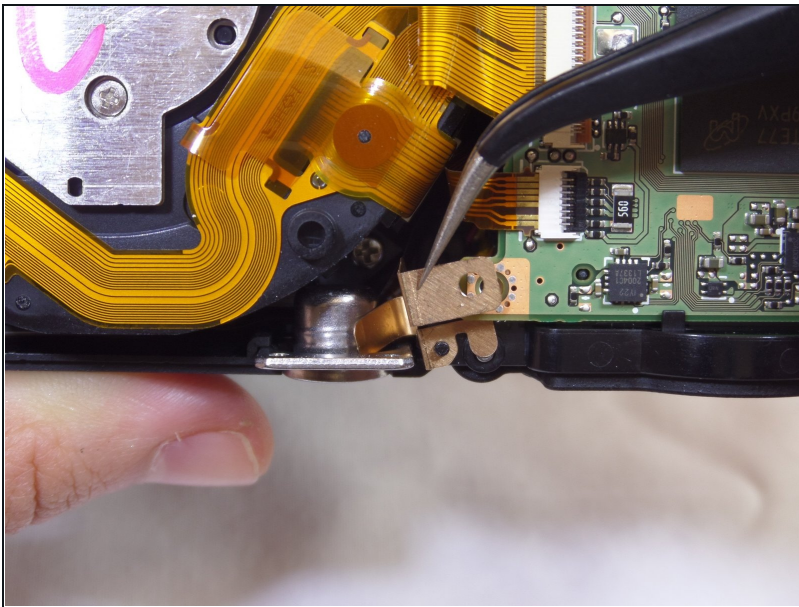

- Use tweezers to remove the golden bracket.

## Step 18

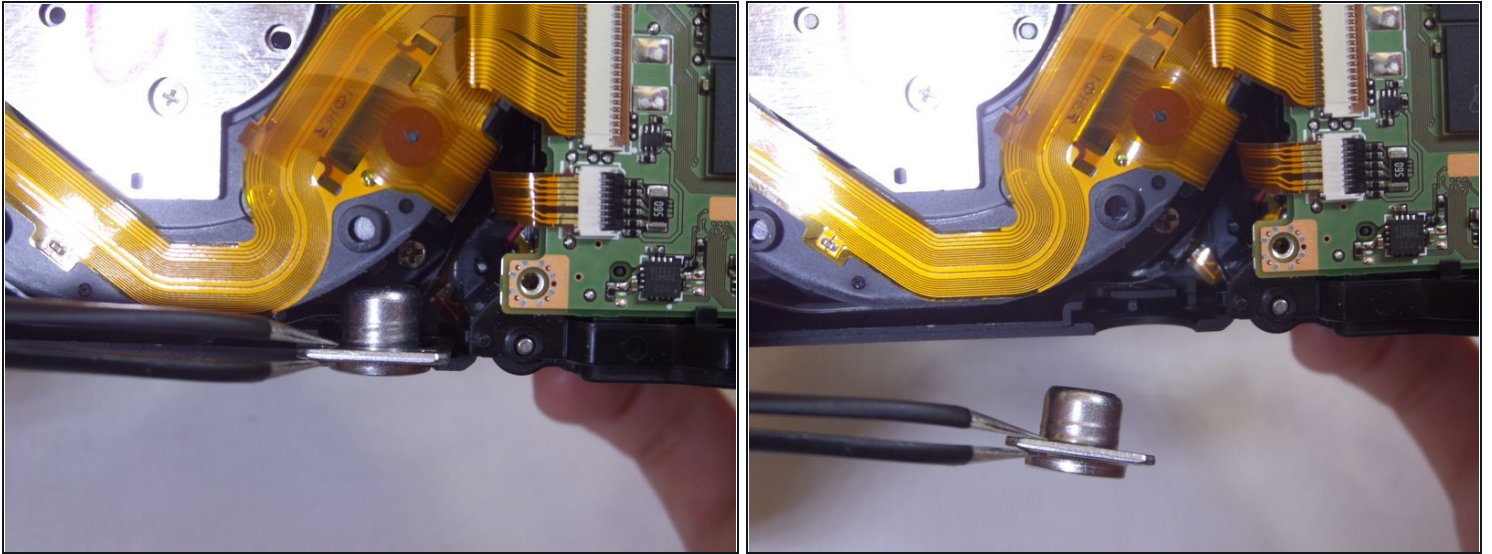

① The tripod connector is located at the bottom of the camera.

- Use tweezers to remove the tripod connector.

---

To reassemble your device, follow these instructions in reverse order.