



Dell Inspiron 13-7352 Cooling Fan Replacement

This guide will explain how to change the cooling fan.

Written By: Chris Monte



INTRODUCTION

The cooling fan keeps the devices internal components from overheating during operation. It is located in the rear center of the base next to the exhaust vent.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Dell Inspiron 13-7352 Laptop Fan](#) (1)



Step 1 — Battery

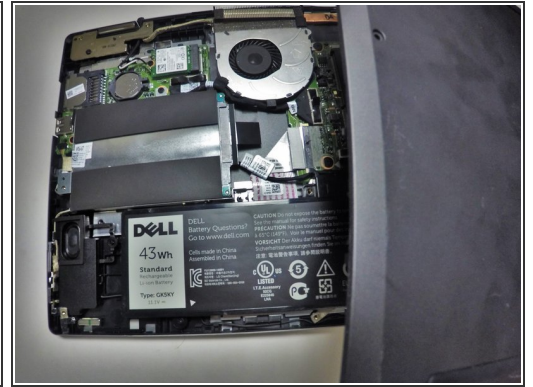

i Before you begin, be sure to turn off your laptop and unplug it from the outlet.

- Use a Phillips screwdriver to remove the ten 7.5mm screws that securing the back panel.
- Use the plastic opening tool to pry up and loosen the back panel.
- Remove the back panel.

Step 2

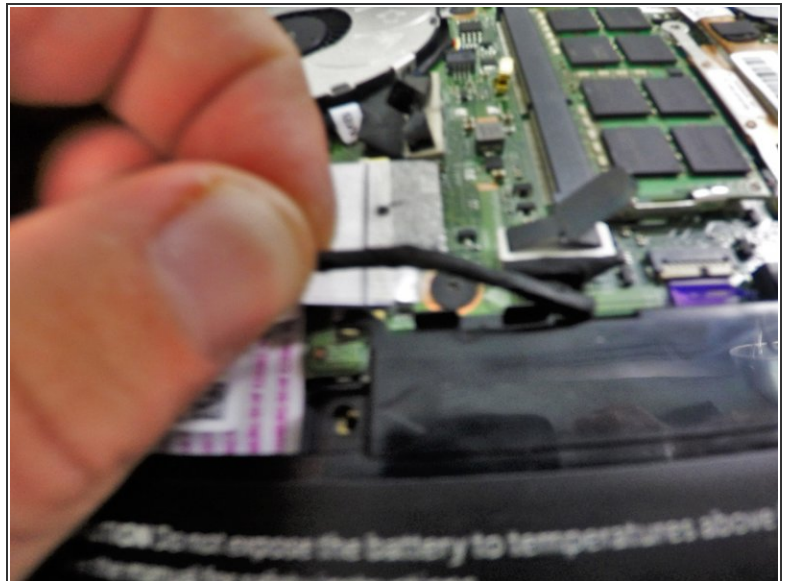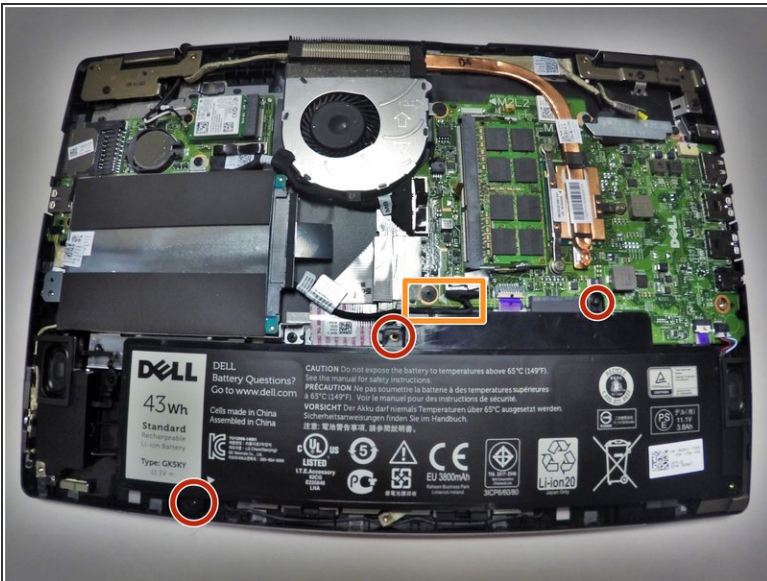

- Use a Phillips screwdriver to remove the two 3 mm screws securing the battery.
- Unclip the hard drive wire from the battery.

Step 3




- Gently remove the battery from the rest of the device.

Step 4 — Cooling Fan



- Remove the cord that runs from system board to the I/O board.

Step 5

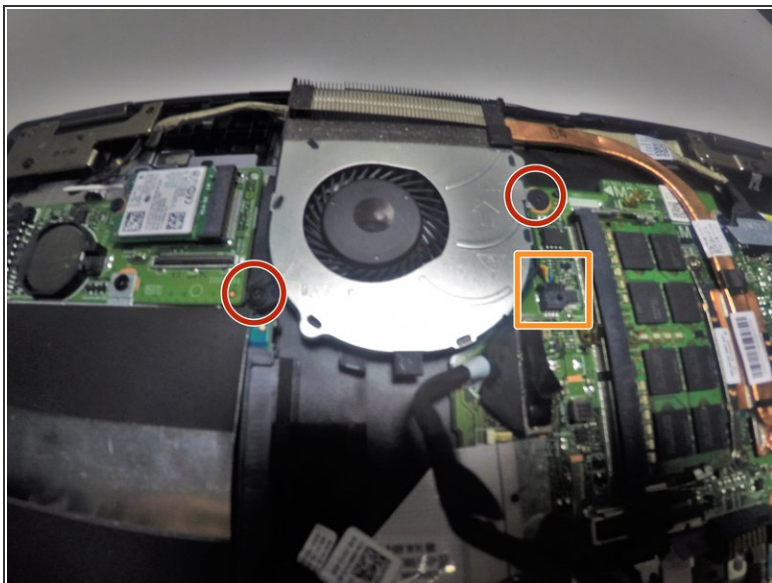

- Remove the 3mm and 4mm screws holding down fan with the Phillips #0 head.
- Disconnect the fan wire from the system board.

Step 6



- Lift the fan from the rest of the device by picking up a single side and separating it from device.

To reassemble your device, follow these instructions in reverse order.