



Sony Action Cam Mini HDR-AZ1 Battery Door Replacement

This guide will show how to properly replace the battery compartment door.

Written By: Mathieu LaFond



INTRODUCTION

Is your battery door damaged or is the clasp broken?



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- To access the battery, first make sure the camera is out of the case.
- Push down on the door lock, located on the rear of the action cam.
- ⓘ The door is unlocked if the little yellow square is showing.
- Pull on the panel door, located on the side opposite the LCD screen, and it should now pop open.

Step 2

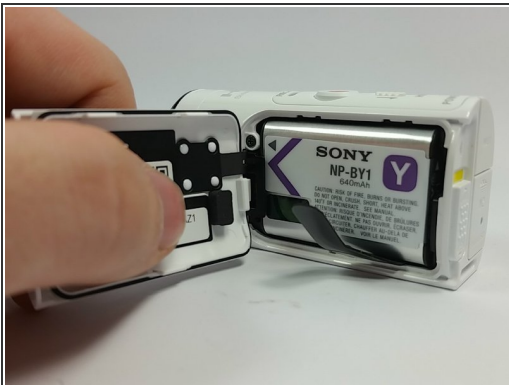

- Open the side panel outward to reveal the battery.
- ⚠ Be sure not to break the small piece of plastic securing the door to the camera.
- Use the pull tab to pop the battery out of place.

Step 3 — Battery Door



- Remove the circled 4 millimeter black screw adjacent to where the door is attached.

Step 4



- Grab the small black bracket holding the ribbon on which the door is attached and pull it out.

Step 5



- Pull the door straight back so the attaching ribbon is pulled taught and the door will come right off.

To reassemble your device, follow these instructions in reverse order.