



Sony Action Cam Mini HDR-AZ1 Memory Card Replacement

Here, you will learn how to swap out the memory card in the Sony HDR-AZ1.


Written By: Mathieu LaFond



INTRODUCTION

Are the videos in your device corrupted? Maybe you need so more space for your spectacular videos? Here is a simple guide on how to remove or replace a memory card in the Sony HDR-AZ1.

Step 1 — Memory Card

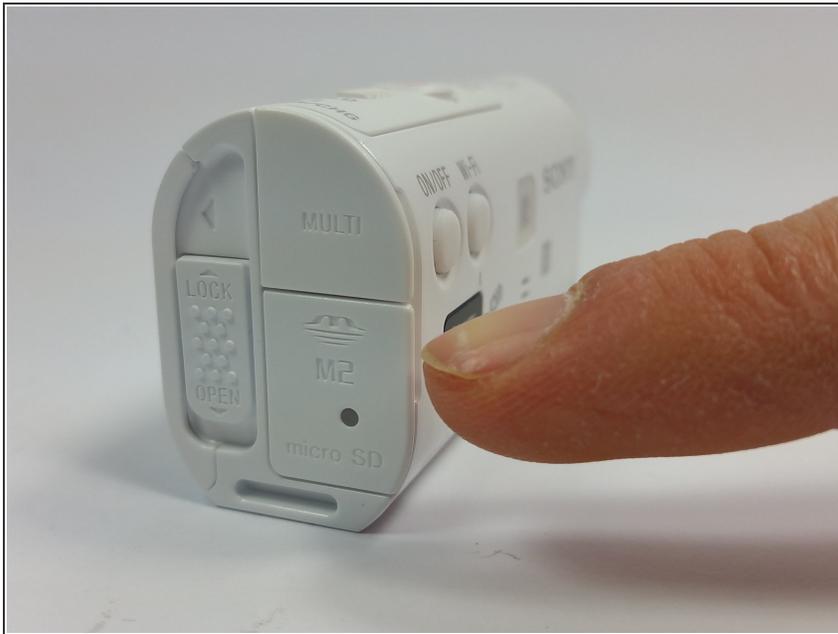

- To access the memory card, pull open the small dust door on the bottom right of the back of the camera.

Step 2



- Push inward on the back of the memory card with the tip of your finger until you feel a click and release.
- Pinch the rear of the memory card that is protruding from the slot and pull outwards until the memory card is removed.

To place a new memory card in, follow these instructions in reverse order.