


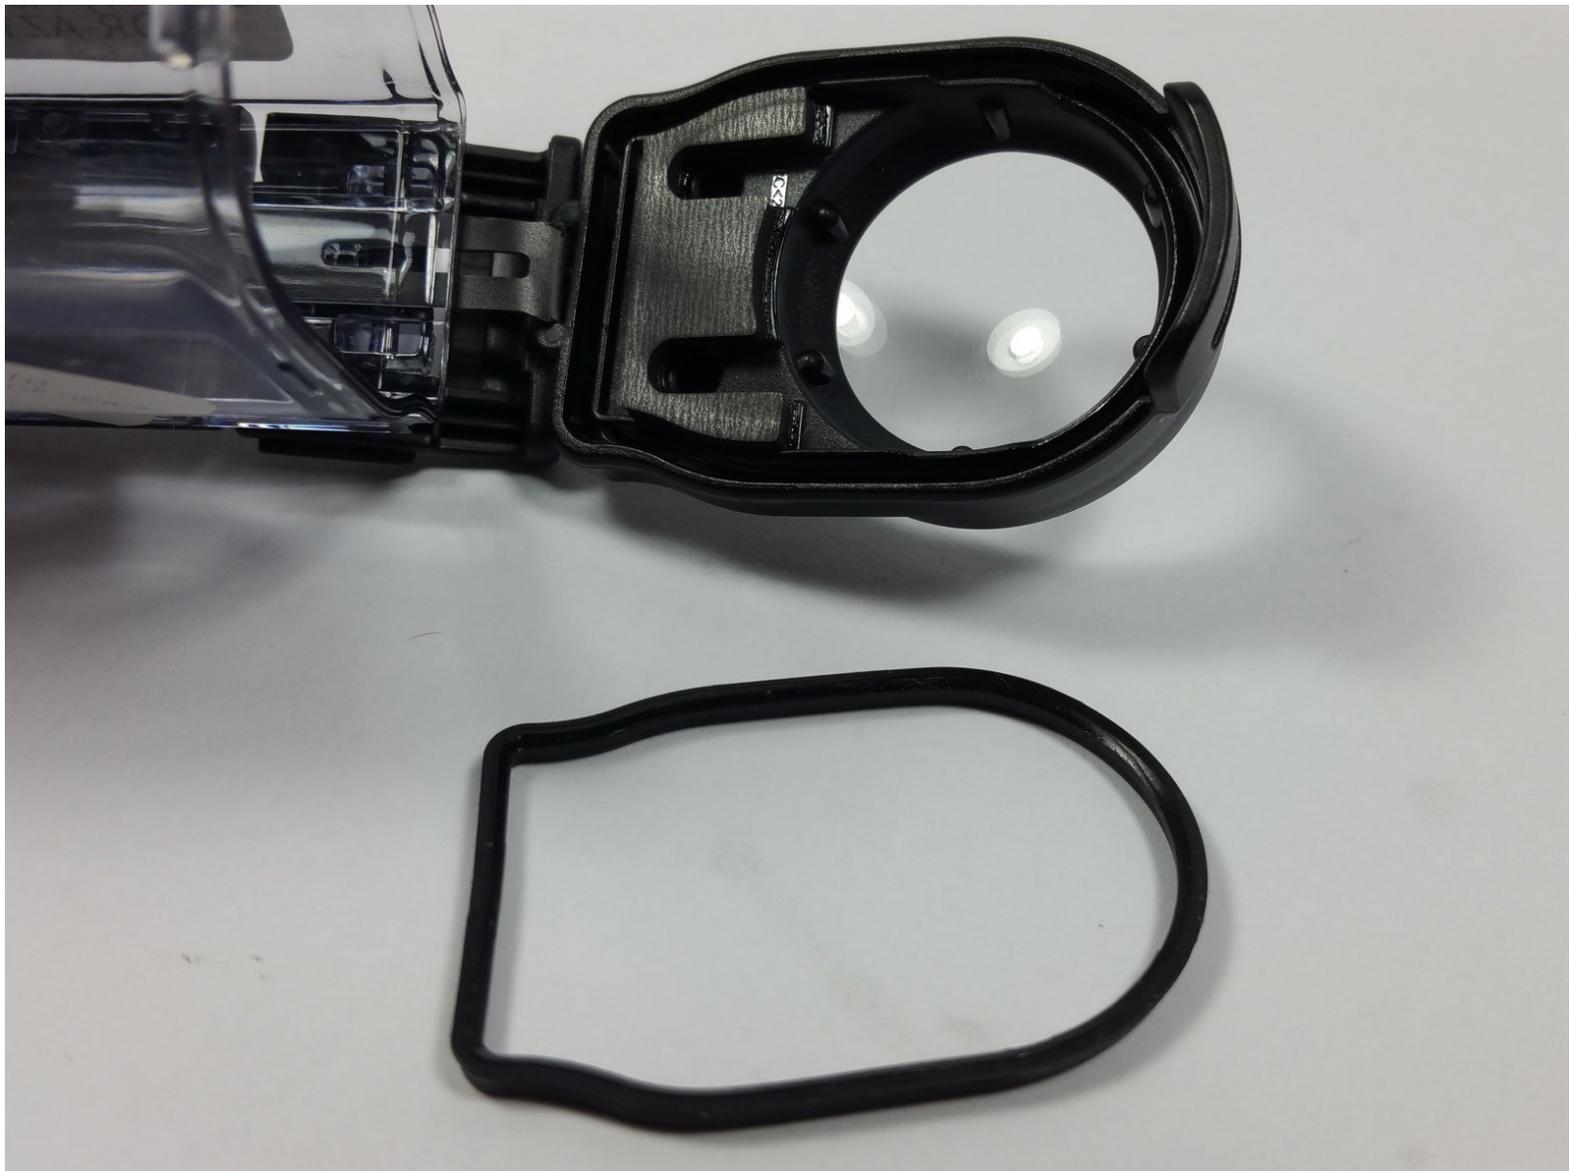

# Sony Action Cam Mini HDR-AZ1 Gasket Replacement

This guide will show how to replace the waterproofing gasket on the camera casing.

Written By: Mathieu LaFond



---

## INTRODUCTION



Is there water getting into the case? Maybe it fogs up with moisture? Here is a simple guide on how to replace the gasket in the waterproof case in the Sony HDR-AZ1.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Gasket Seal

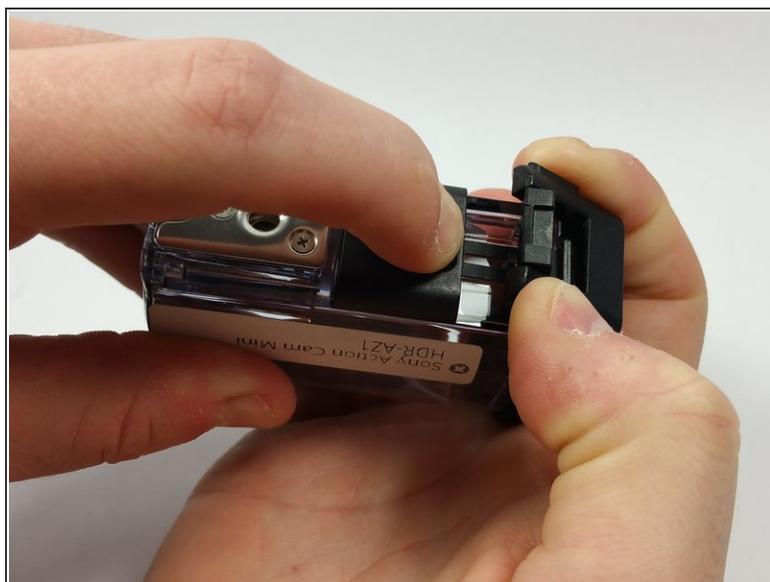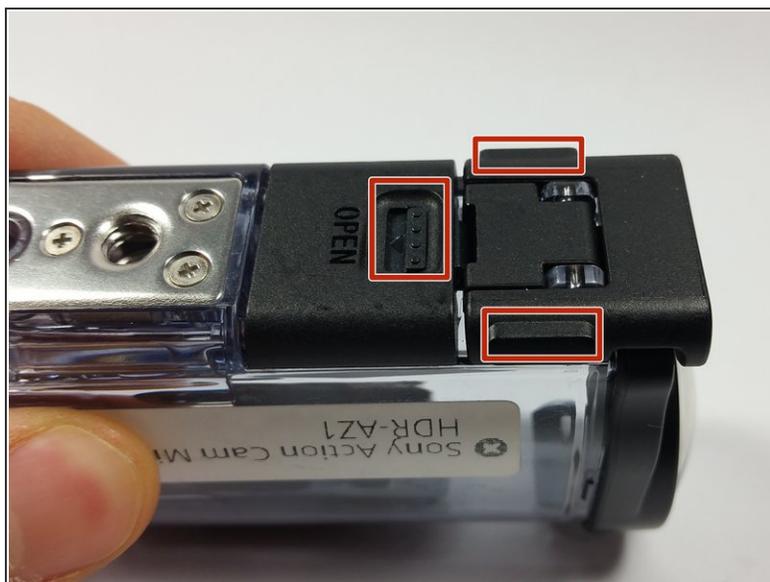

- To open the case, slide the tab located on the underside of the case to the “unlock” position.
- Press in the tabs, that are on the sides of the unlock tab, and pull down. This should cause the lid to open.
- Remove the lid.

## Step 2

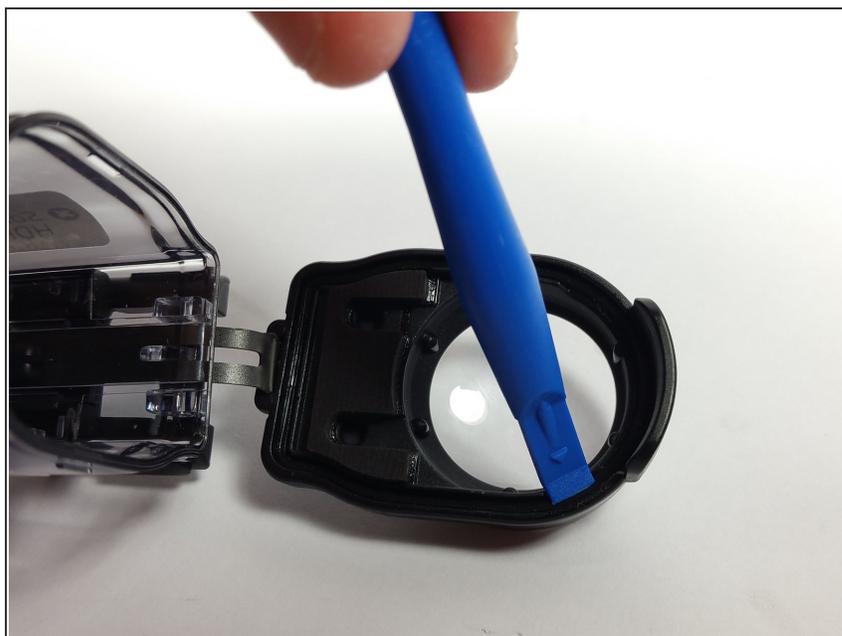

- Using the plastic opening tool, wedge it between the O-Ring and the groove.
- Move the tool around the ring, prying the gasket from the groove, until it is able to be grabbed.

### Step 3



- Remove the O-Ring from the lid of the case.

To place a new gasket in, follow these steps in reverse order, making sure the gasket is fully pushed back in around its entire perimeter.