



# Polaroid PTAB7XC Power Button Replacement

Power button loose or stuck? Switch it for a new one!

Written By: Meg Lybbert



## INTRODUCTION

The power button on the PTAB7XC is made of plastic and frequently breaks; luckily, replacing the power button is a quick and easy process for even beginners.



### TOOLS:

- [Tweezers](#) (1)
  - [64 Bit Driver Kit](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Power Button




- Remove the two 7 mm screws on the top of the device using a J00 Phillips screwdriver by turning them counterclockwise.
- ⓘ If the screw heads have corroded or been stripped, it may be necessary to use a larger screwdriver head, such as the J0.

## Step 2



- Pry the seam between the screen and the case on all four sides with a large plastic opening tool until the plastic case comes off.
- The plastic case is now free from the device.
- ⓘ The plastic power button may or may not fall out at this point. There is no problem if it does.

## Step 3

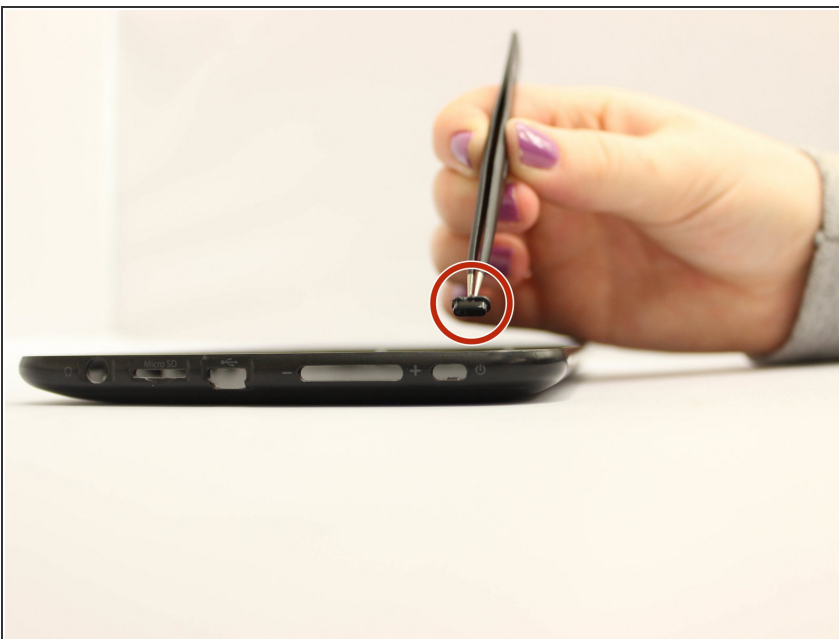

- Use tweezers to push on the side of the black plastic power button that is outside of the device case until the button is as far in as possible.
- Pull on the part of the broken power button that is exposed on the inside of the device case using tweezers until the button itself comes loose of the case.
- ⓘ The power button is now replaceable.

To reassemble your device, follow these instructions in reverse order.