


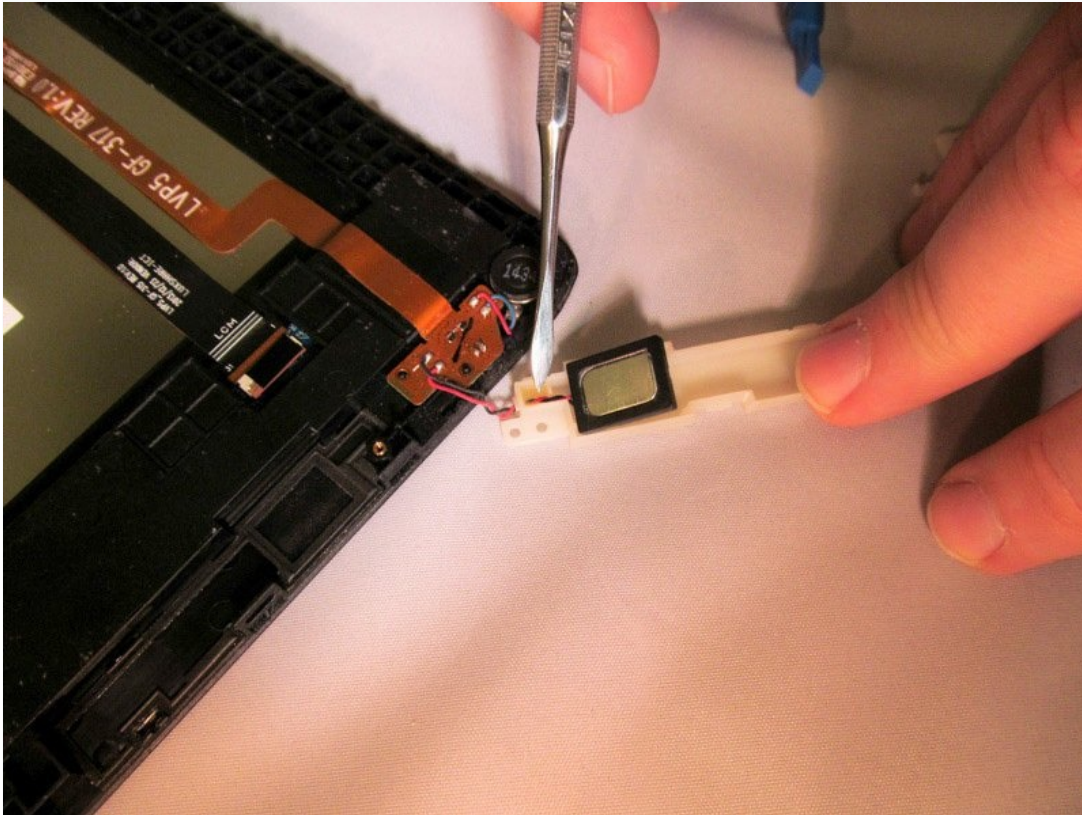

# Lenovo Tab 2 A8 Speaker Replacement

This guide shows you how to gain access to the...

Written By: Tim Gales



# INTRODUCTION

This guide shows you how to gain access to the buzzer ringer component of the speaker for its replacement.

---

## TOOLS:

Metal Spudger (1)

Phillips #000 Screwdriver (1)


Plastic Probe (1)

Soldering Iron (1)

Tweezers (1)


---

## Step 1 — Removing the Back Panel

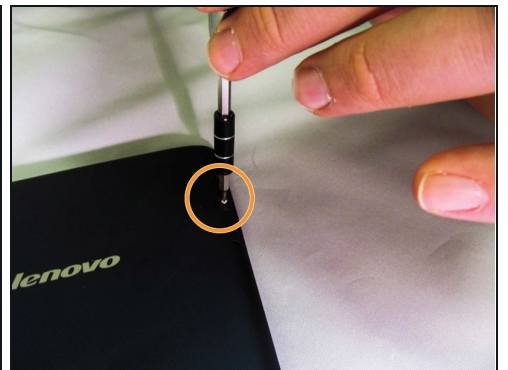


- Place the tablet face down on a soft, stable surface that will protect the screen.
- Next, Scrape off the seal over the screw in the back of the tablet with a Metal Spudger.
- Use the Phillips #000 Screwdriver to remove the M1.4 × 2.5 screw.
  - ⓘ If the seal covering the screw has already been removed, please proceed to the next step in the process.
  - ⓘ As the screw is small, you may wish to extract it using a pair of [tweezers](#).

## Step 2

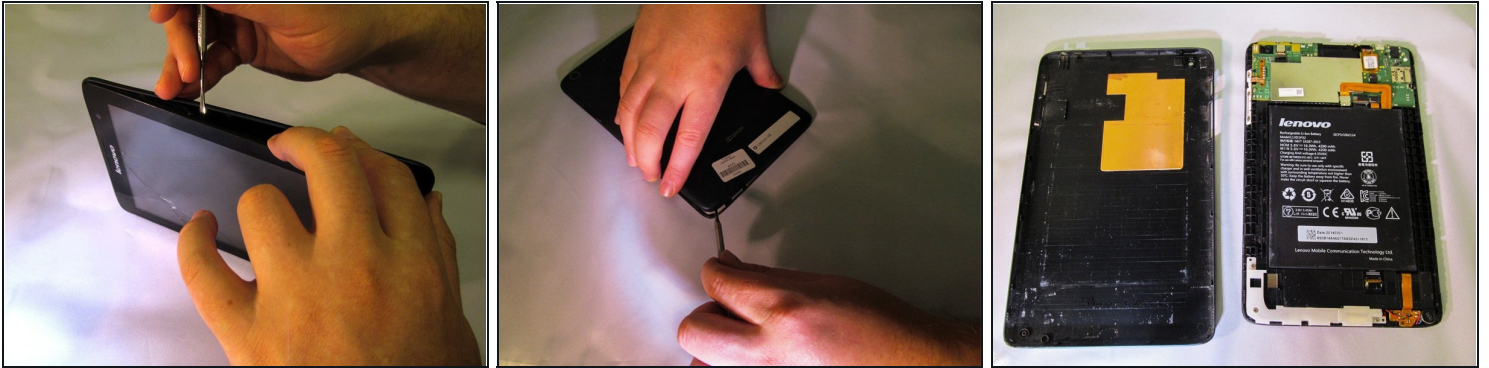


- Starting on the side, work your way around the the tablet to pop off the back cover. You will want to utilize a metal Spudger for this.
- ① Some force may be required initially to pry the back cover off.
- ① Note that the button tabs for this device are loose inside the case and will fall out when opening.

## Step 3 — Speaker

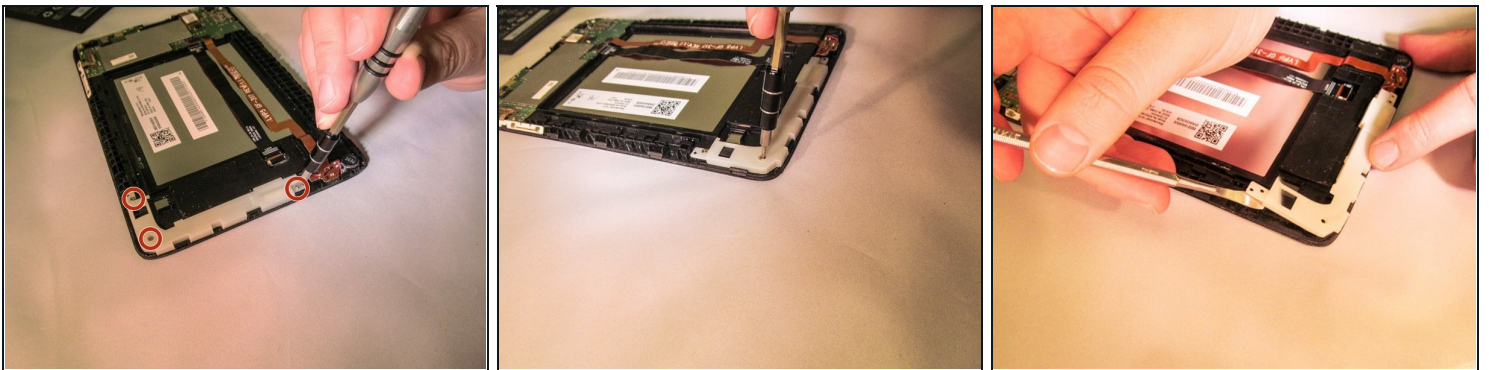

- Using a counterclockwise motion with the Phillips #000 screwdriver, unscrew the three M1.4 × 2.5 screws that hold the white plastic speaker housing in place.
- Pry off the speaker housing utilizing a metal spudger.


## Step 4

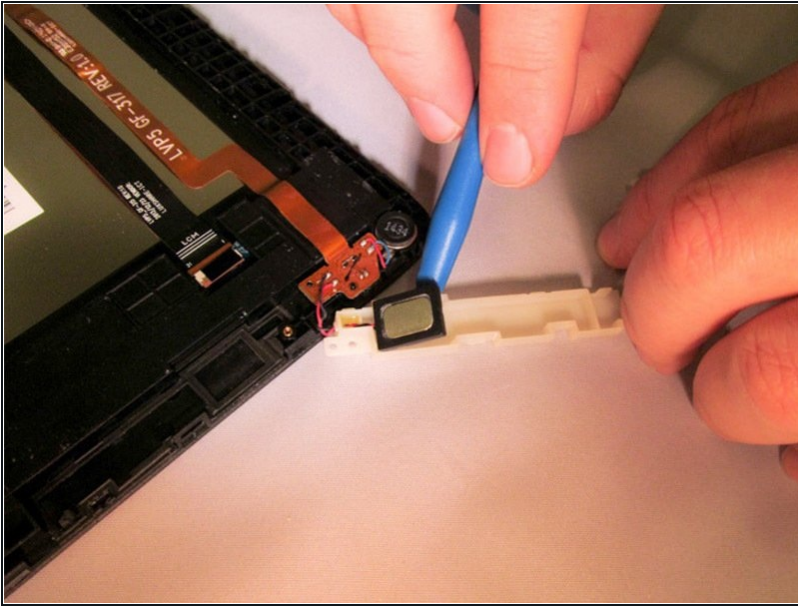

- Insert a plastic probe through the tab and pry to remove the speaker from its socket.

⚠ Be careful not to damage the wires attached to the speaker. Don't forcibly remove the speaker from its socket. The speaker is magnetic, don't use metal tools.

## Step 5

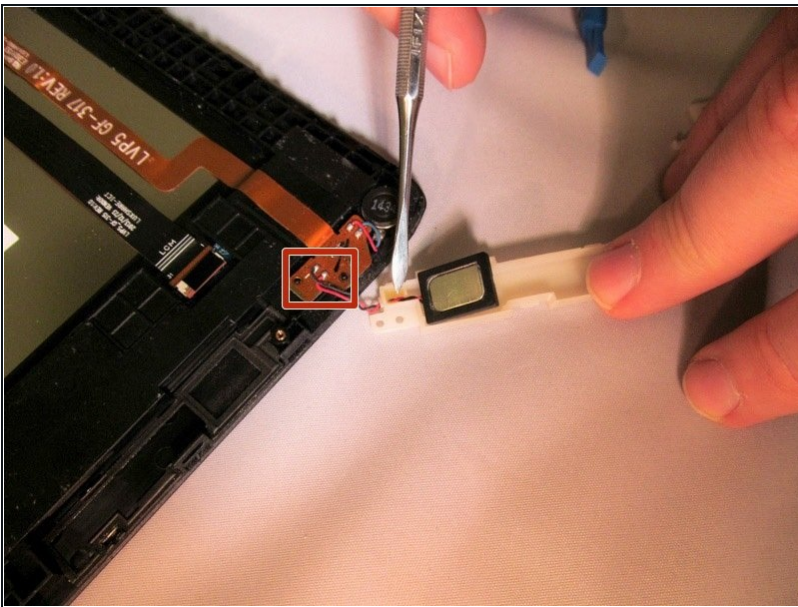

- Using a soldering iron, desolder the contacts that connect the speaker wires to the speaker chip.

---

To reassemble your device, follow these instructions in reverse order.