


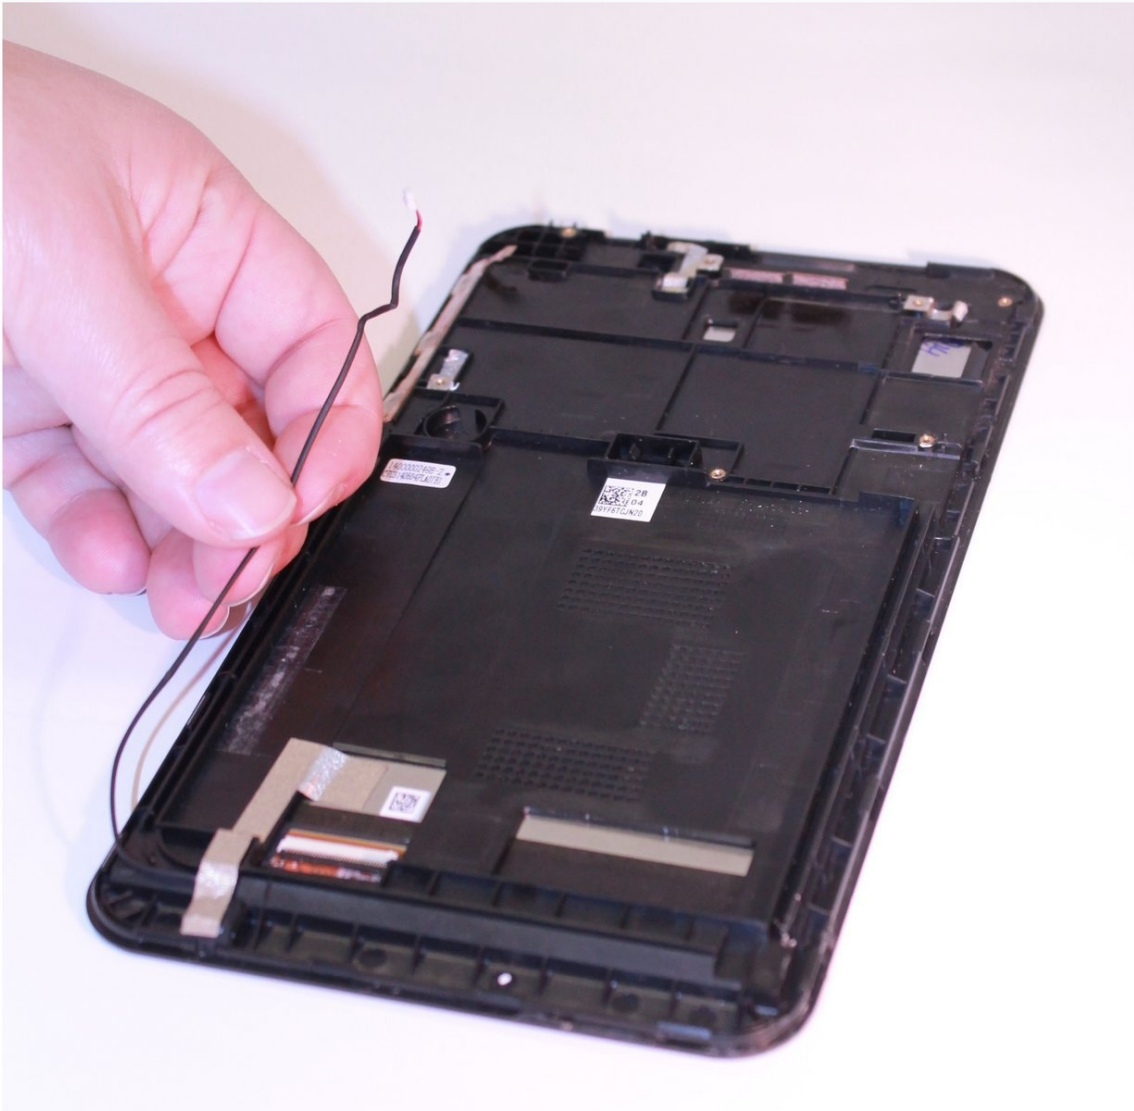

# Asus MeMO Pad 7 ME170C Microphone Replacement

The microphone is where you input sound, as...

Written By: Tatiana Schneider



# INTRODUCTION

The microphone is where you input sound, as opposed to the speaker which is what outputs sound. This is where you record voice memos, give commands to a built in operating system, or voice to text functions.

---

## TOOLS:

[Jimmy](#) (1)

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Microphone




 Before beginning to disassemble, power off the device.

 Excessive force can result in damaged or cracked screen. Be Gentle.

- Using the Jimmy tool, gently wedge it into the seam of the device.
- Gently pry the Jimmy tool all around the seam until the back panel is detached.

## Step 2

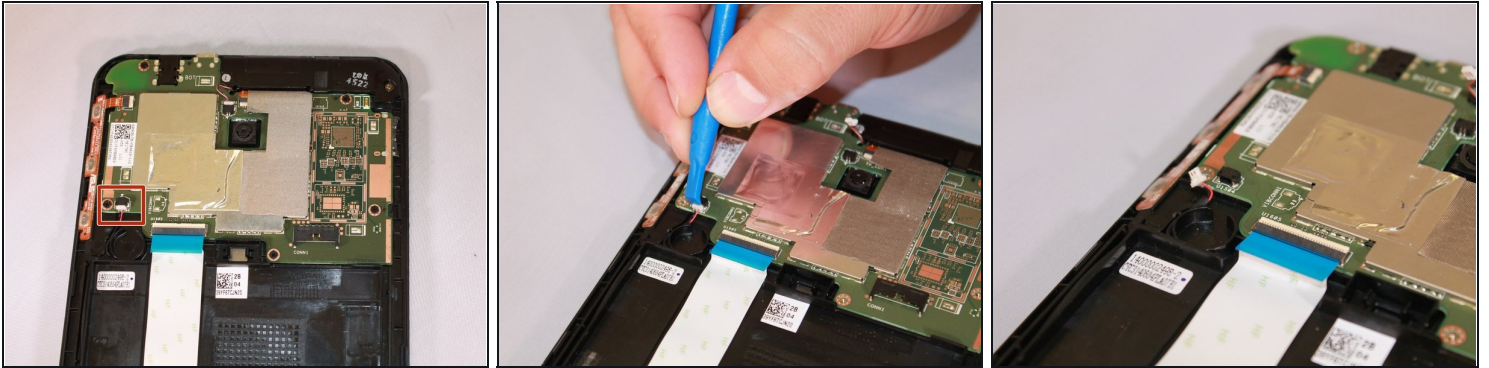

- Inserted in a black port on the motherboard, locate the white cable connector on the left side of the tablet.
- In a side to side motion, using the smallest opening tool, slide the white cable box completely out of the port towards the bottom of the device.

## Step 3



- Pull the wire out of its tracking panel gently.
- ① Note: This wire should be fairly easy to pull out of the panel.

## Step 4



① Note: The end of the wire is attached to a small taped black box.

- Using wide nosed [tweezers](#), lift up the tape and remove from black box.

① Note: Black box will loosen up once the tape is removed.

- Remove the component completely from the device.

---

To reassemble your device, follow these instructions in reverse order.