



Coolpix S01 Screen Cover Replacement

Follow these 4, easy-to-do steps to replace your screencover in a matter of minutes! Use the photos to guide you to replacing your screen cover.

Written By: angelica fitzgerald



INTRODUCTION

Broken screen, cracked screen, no screen? No problem! If you own a Nikon Coolpix digital camera and are experiencing a screen cover problem, this guide will surely help.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Precision Tweezers Set](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Screen Cover




- First make sure the camera is powered off.
- Use the Hex and PH000 tool to remove the 2 mm screw from the left side of the camera.

Step 2

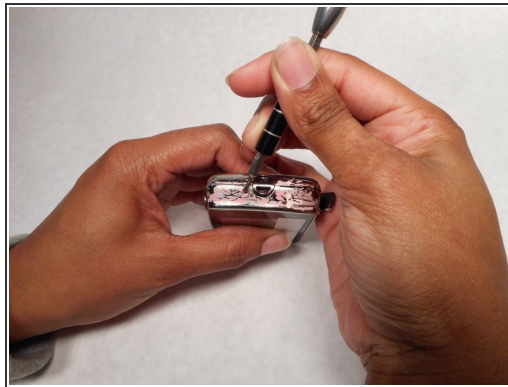


- Next, remove the 2 mm screw from the right side of the camera
- Remove the 3mm screw from the bottom of the camera.
- Once you have the 2mm and 3mm screws out, gently pull the sides up with the smallest plastic opening tool. This will reveal the inside of the camera.
- Be sure to remove the battery before continuing your repair.

Step 3

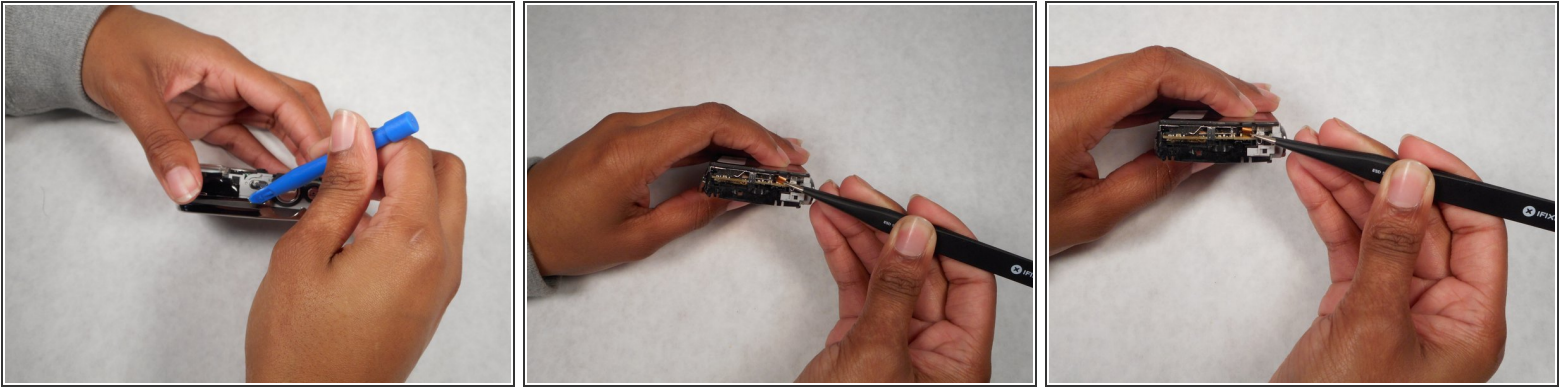

- With the screen facing outward, locate the orange ribbon cable from the motherboard.
- With the straight tweezers, gently pull out the orange ribbon cable from the motherboard.

Step 4

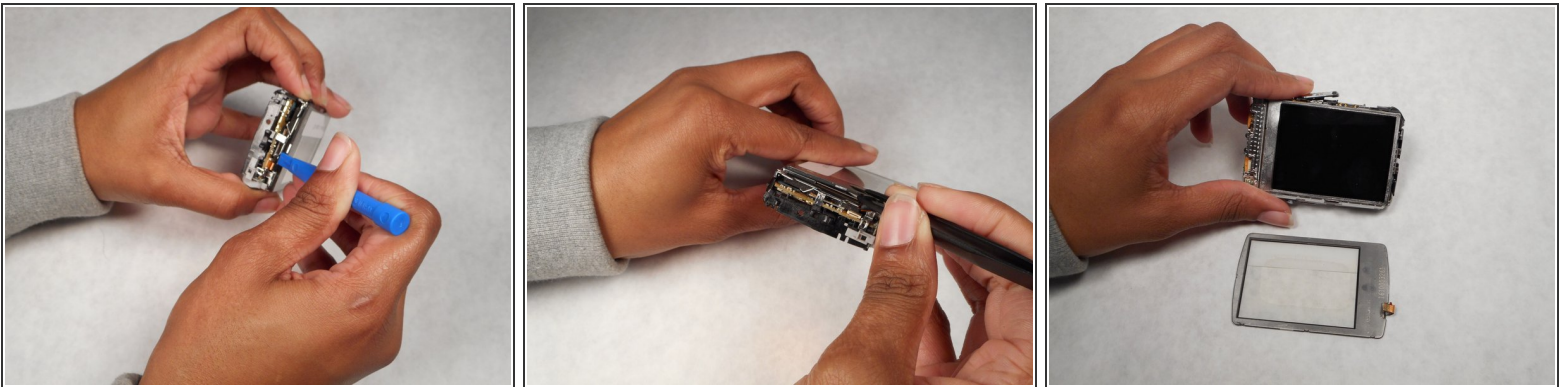

- With the lens facing down and the bottom of the camera facing away from you, lift up the right edge of the LCD screen.
- Use the plastic tool to gently lift the screen out from the upper left corner until the seal is broken.

To reassemble your device, follow these instructions in reverse order.