



Dell Vostro 1320 USB Port Replacement

Replace the USB Port if it is no longer reading USB drives.

Written By: Christie Lloyd





TOOLS:


- [64 Bit Driver Kit](#) (1)
 - [Spudger](#) (1)
-

Step 1 — USB Port



- Remove the battery from the computer.

Step 2

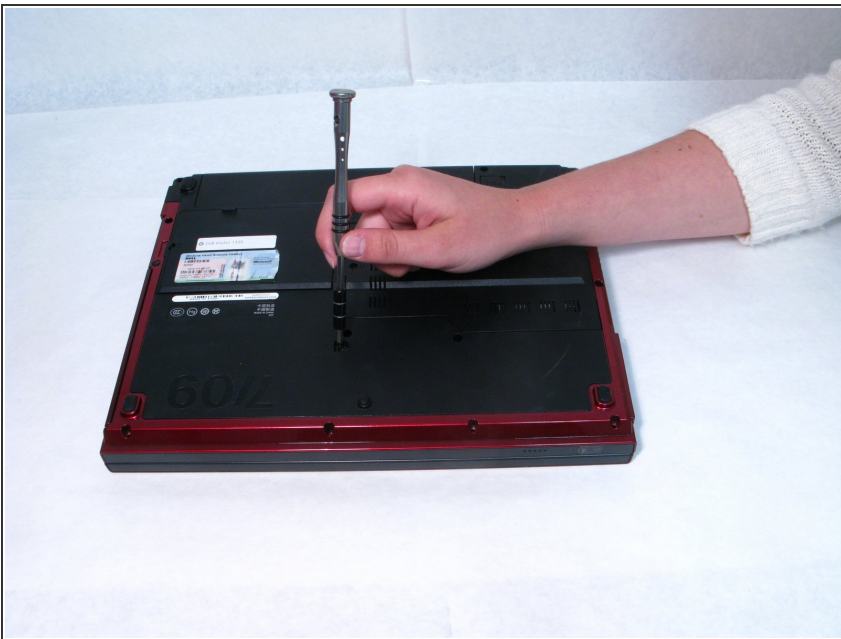

- Remove all visible screws from the bottom of the computer.

Step 3



- Use a metal spudger to remove the covers of each section that you removed screws from.
- Once the cover is removed from the hard drive remove the hard drive by gently tugging it out.

Step 4




- Use the replacement guide for the fan to remove the fan.
- [Dell Vostro 1320 Fan Replacement](#)

Step 5




- You must first unscrew the screws holding the wire in place.
- Unhook the wire that the metal spudger is pointing at.

Step 6

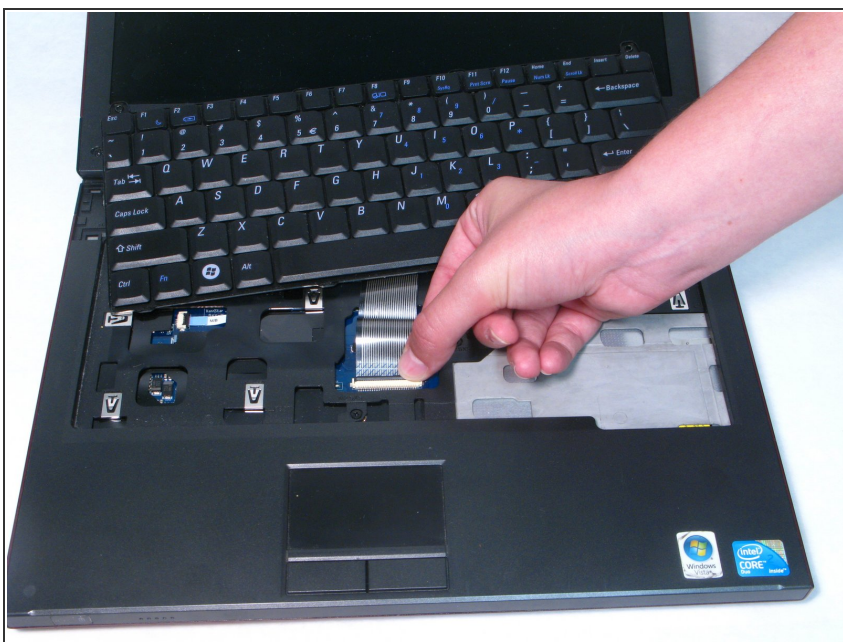

- Use the guide to remove the keyboard.
- [Dell Vostro 1320 Keyboard Replacement](#)

Step 7

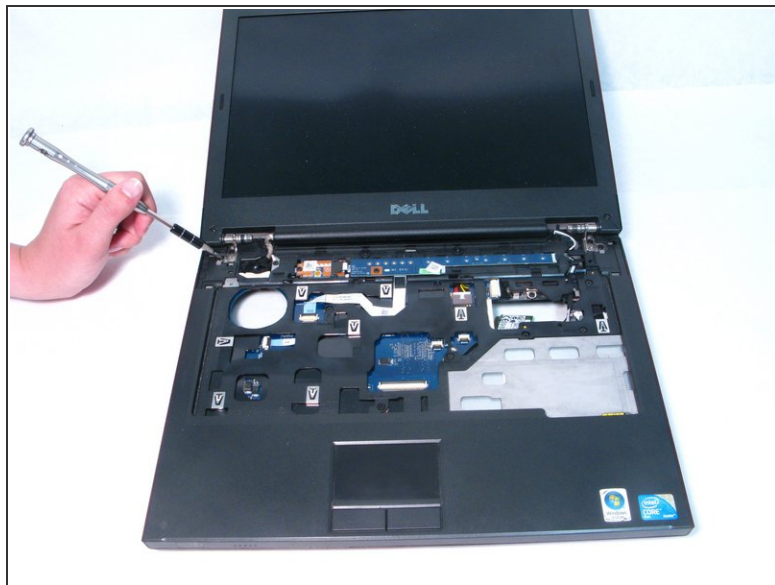



- Undo the screws holding the screen to the computer base.

Step 8



- Unplug the wires connecting the screen to the base.
- The screen should come free and is able to be removed completely.

Step 9

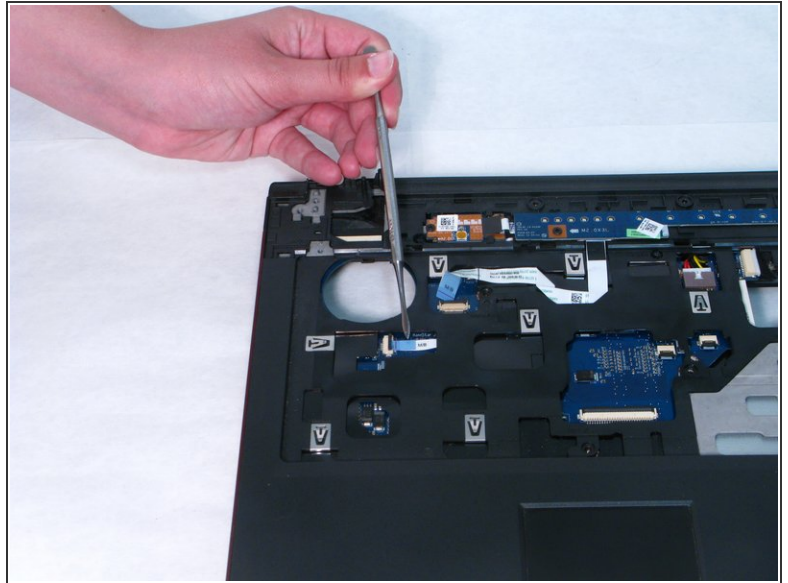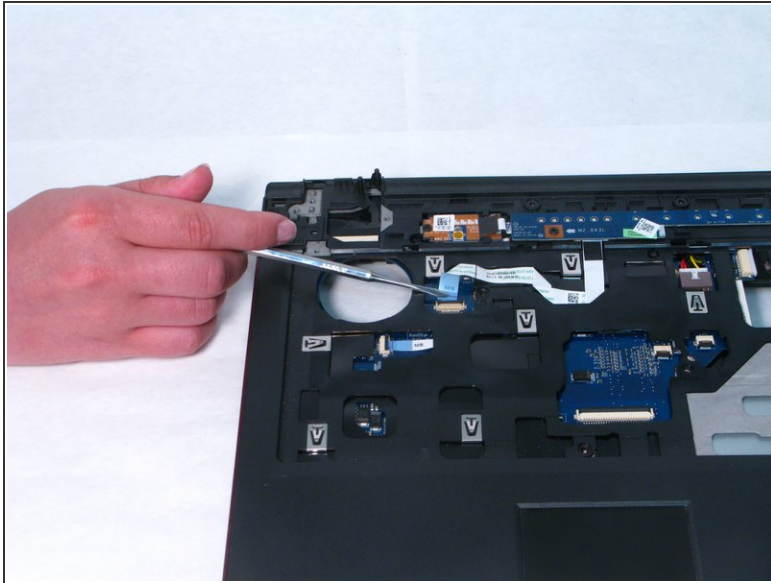

- Unplug the two blue labeled wires.

Step 10



- Detach the black plastic cover by loosening it with a metal spudger.

Step 11



- Unplug the wire that the metal spudger is pointing to.

Step 12



- Unscrew the USB port.

Step 13



- Gently lift out the USB port.

To reassemble your device, follow these instructions in reverse order.