



Dyson DC58 Cyclone Replacement

If the cyclone of your Dyson is damaged or no longer provides suction this guide will show you how to replace it.

Written By: Herllaine Asistio





TOOLS:

- [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
 - [TR9 Torx Security Screwdriver](#) (1)
-

Step 1 — Bin



- Make sure your vacuum is unplugged.

⚠ Avoid pressing the red trigger on the vacuum handle; this will power on the vacuum.

Step 2



- Locate the red lever parallel to the red trigger and on the side of the clear bin.

Step 3



- Push the red lever downward to open the clear bin. You may need to do this over a trash bin if there is debris in the clear bin.

Step 4



- Push the red lever downward again while pulling the clear bin away from the main body of the Dyson vacuum.

Step 5 — Main Body



- Flip the vacuum over so that the silver cyclone part of the vacuum is now at the base.

Step 6



- Locate the two visible white clips seen between the main body and the purple cyclone of the vacuum.
- Use tweezers to pinch the two visible white clips together.
- ⓘ It may require a few tries to pinch the clips since the space between the main body and cyclone is small.

Step 7



- Tilt and pull the main body away from the purple cyclone of the vacuum.
- ⓘ You may hear a loud snap when the cyclone is released from the main body, this is to be expected.

Step 8 — Cyclone



- Use the metal spudger placed between the black rim and the purple rim to separate the purple screen cover from the cyclone body.
- Pry all the way around the screen cover.

Step 9




- Use a T9 screw driver to remove the five 14mm screws around the edge of the cyclone body.

Step 10



- Pull down on the black tube-like part of the silver cyclone body to remove it from the cyclone of the Dyson.

 You may need to wiggle the tube as you are pulling down to loosen the pieces apart.

To reassemble your device, follow these instructions in reverse order.