



Lenovo Essential B570 Battery Replacement

Replace a worn out battery to increase battery life of the laptop.

Written By: Mathew Callahan



INTRODUCTION


This guide will show how to safely remove and replace a battery in your Lenovo Essential Laptop. Replacing the battery is a very easy task with no risk to the laptop or user.

Step 1 — Battery



- Turn over laptop.
- Switch open the left battery lock.
- ⓘ If you are replacing inner components of the laptop, it is recommended to remove the battery first to avoid damage to the laptop.

Step 2

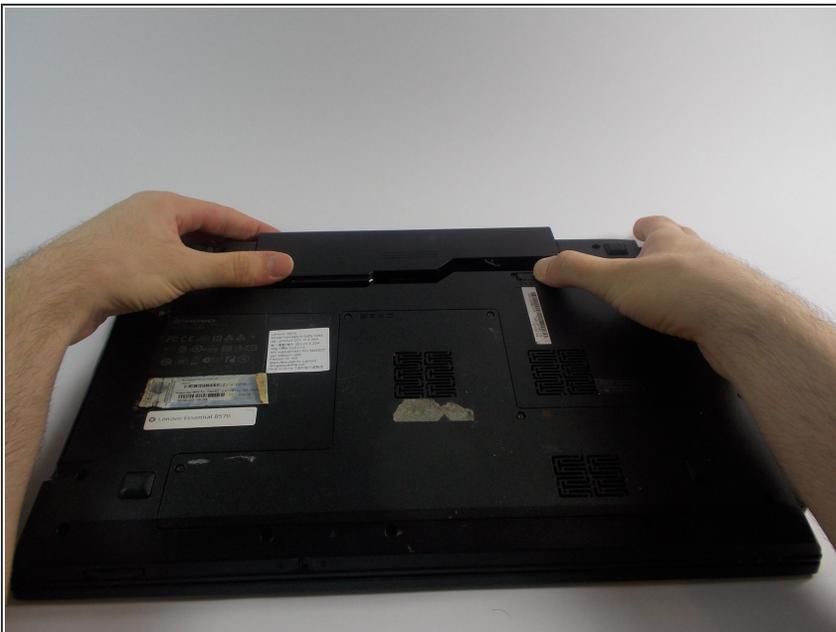

- Hold the right battery lock open with one hand while removing the battery itself with the other.

To reassemble your device, follow these instructions in reverse order.