



ASUS X44H-BBR4 Battery Replacement

Remove and replace the battery in your ASUS X44H-BBR4 laptop.

Written By: Kelly Merlo



INTRODUCTION

Use this guide to replace your battery, in case your laptop is not turning on and/or it will not charge.

Step 1 — Battery



- Flip the device over.

Step 2



- Slide the right lock button to the unlock position.
- After it is unlocked, a red line will be visible.

Step 3



- Slide the left lock button into the unlock position and hold.

Step 4



- While holding the left lock button in the unlock position, push the battery from the center away from you.

To reassemble your device, follow these instructions in reverse order.