



Bose Soundlink II Battery Replacement

Use this guide to replace a damaged or nonoperational battery.

Written By: Kevin Bailey





TOOLS:

- [TR10 Torx Security Screwdriver](#) (1)
-

Step 1 — Bose Soundlink II Cover Removal



- Using a 2.5 mm hex wrench, remove the two 13 mm screws from the bottom of the speaker.

Step 2



- Push up on the back of the cover until it slides up slightly.
- Pull the cover up and away from the speaker backing.

Step 3 — Battery



- Using the screwdriver with the T-10 star tip, remove the 6.75 mm. screws marked in red.

Step 4



- Carefully remove the battery by pulling it out of the speaker.

To reassemble your device, follow these instructions in reverse order.