


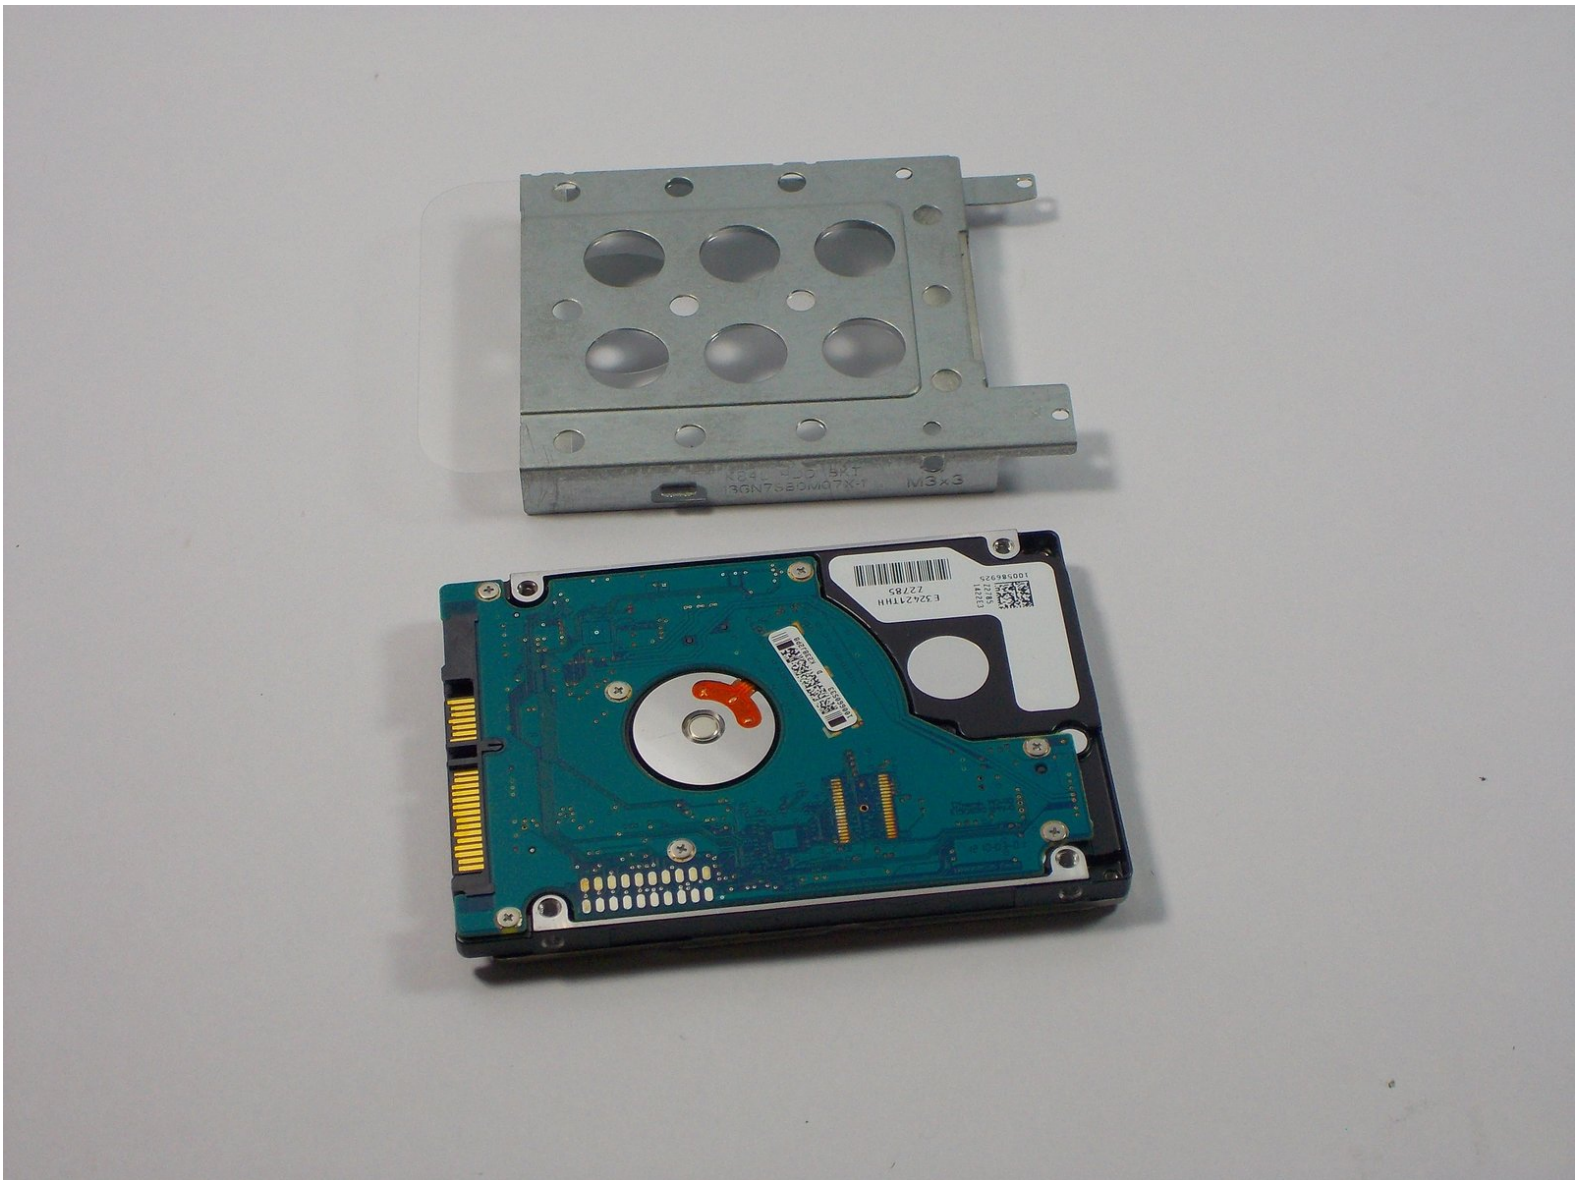

# ASUS X44H-BBR4 Hard Drive Replacement

Replace the Hard Drive in your ASUS X44H-BBR4 laptop.

Written By: Devaj Ramsamooj



---

## INTRODUCTION

Use this guide to help you replace the Hard Drive. Don't forget to keep track of your screws.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the device over.

## Step 2



- Slide the right lock button to the unlock position.
- After it is unlocked, a red line will be visible.



### Step 3



- Slide the left lock button into the unlock position and hold.

### Step 4



- While holding the left lock button in the unlock position, push the battery from the center away from you.

## Step 5 — Hard Drive



- Remove the two 9 mm Phillips head screws with the PH0 bit indicated by the red circles in the picture.

## Step 6



- Once the screws are removed, slide the back panel away from the computer.





## Step 7




- Remove the 9mm Phillips head screw in the left bottom corner of the hard drive with the PH0 bit.

## Step 8

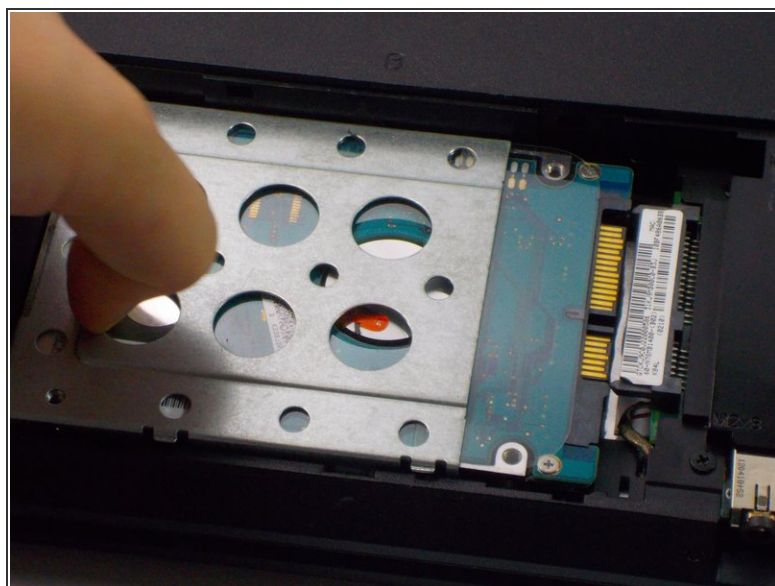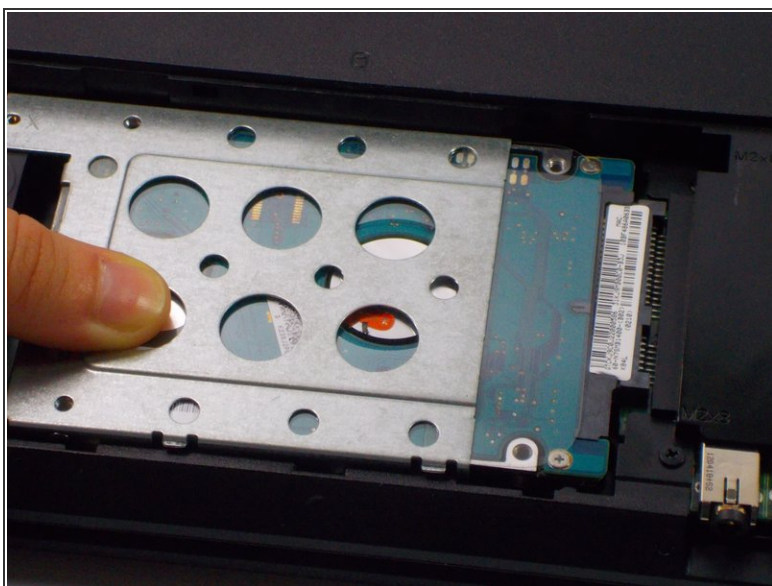


- Slide the hard drive to the left, unlocking it from its default position.

## Step 9

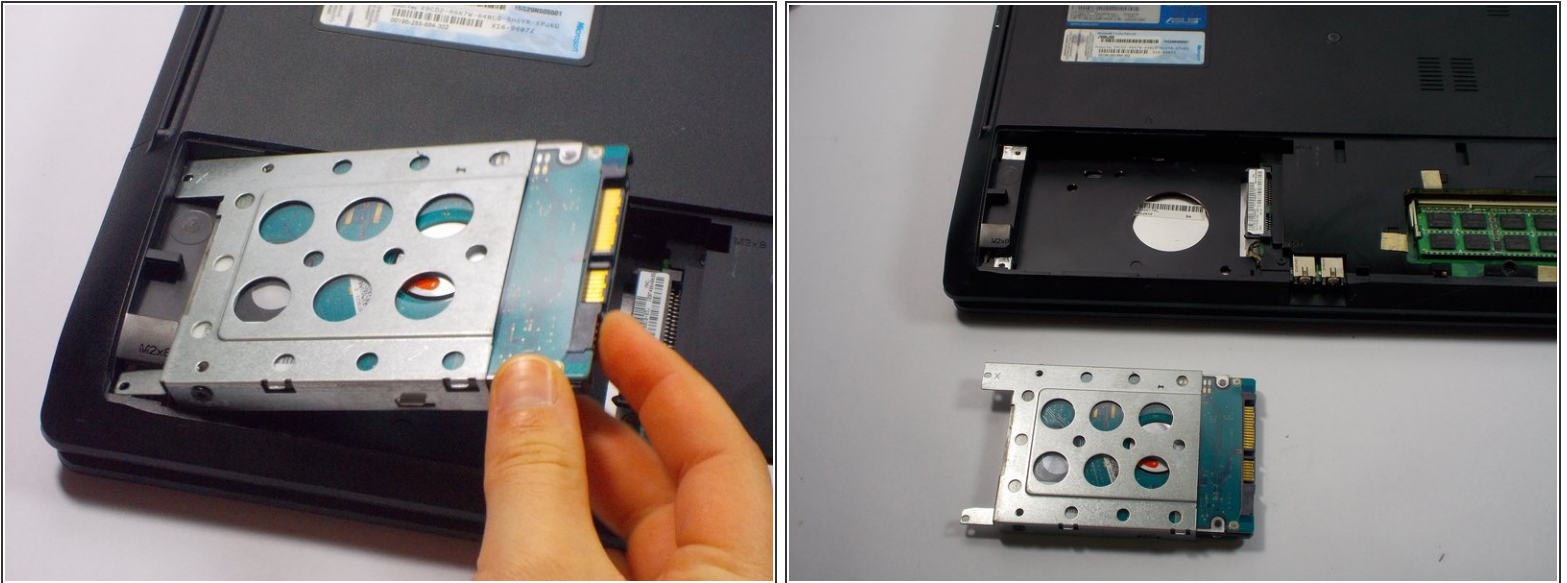


- Pull the hard drive upwards and take it out of its position.

## Step 10

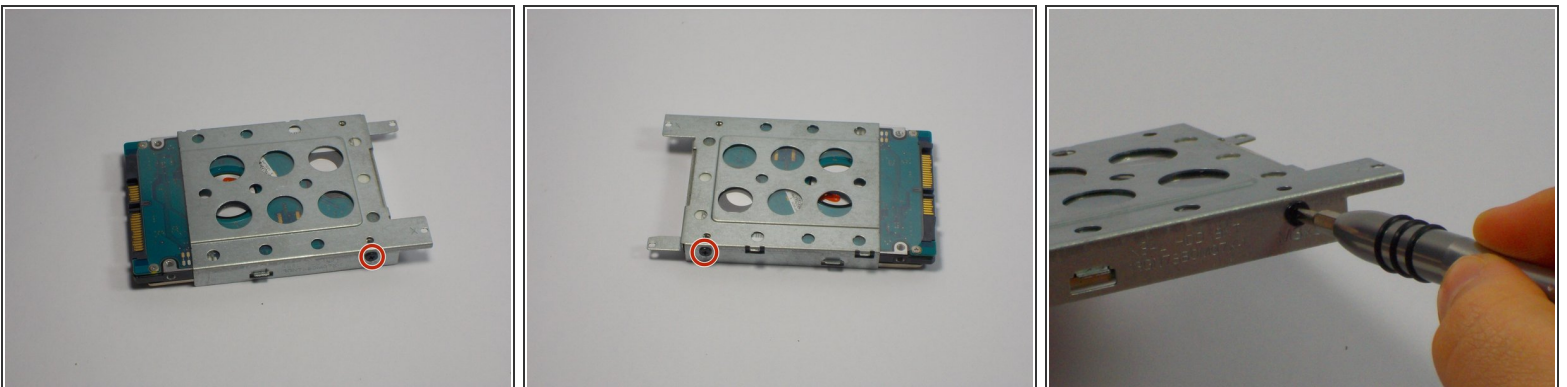

- Remove two 3mm Phillips head screws, one located on each side of the metal casing holding the hard drive using the PH0 bit.

## Step 11

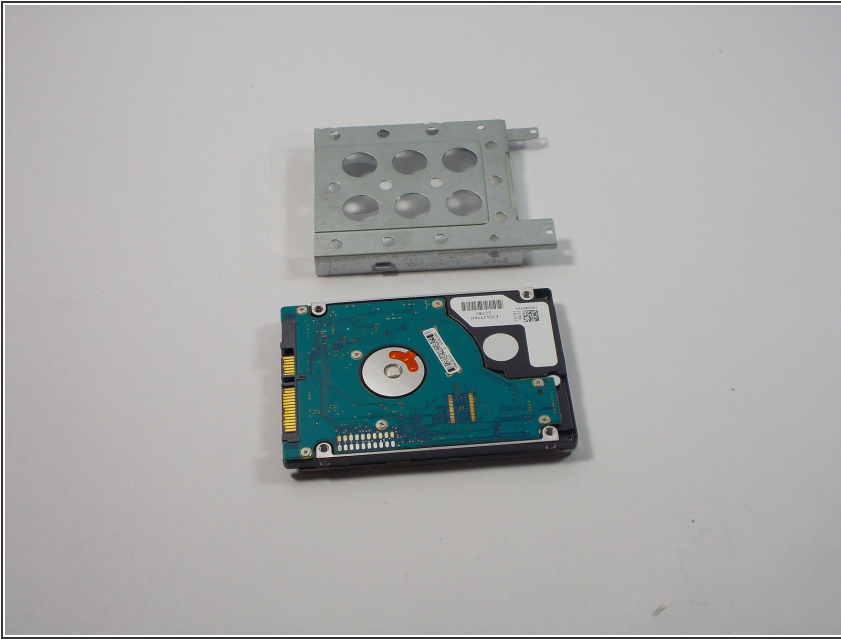

- Pull upwards on the metal casing and it will come off.

To reassemble your device, follow these instructions in reverse order.